

Operating Instructions

Video recorder LINAX DR2000



LINAX DR2000 Be

04.17

Camille Bauer Metrawatt AG
Aargauerstrasse 7
CH-5610 Wohlen/Switzerland
Phone +41 56 618 21 11
Fax +41 56 618 21 21
info@cbmag.com
www.camillebauer.com

 **CAMILLE BAUER**

Table of contents

1	Document information	5		
1.1	Document function	5		
1.2	Symbols used	5		
1.2.1	Safety symbols	5		
1.2.2	Electrical symbols	5		
1.2.3	Symbols for certain types of information	6		
1.2.4	Symbols in graphics	6		
1.3	Registered trademarks	6		
2	Basic safety instructions	7		
2.1	Requirements concerning the staff	7		
2.2	Designated use	7		
2.3	Workplace safety	7		
2.4	Operational safety	7		
2.5	Product safety	8		
2.6	Safety information for table version (option)	8		
2.7	IT security	8		
3	Product description	8		
3.1	Product design	8		
4	Incoming acceptance and product identification	9		
4.1	Incoming acceptance	9		
4.2	Scope of delivery	9		
4.3	Product identification	9		
4.3.1	Nameplate	9		
4.4	Storage and transport	9		
5	Installation	10		
5.1	Mounting requirements	10		
5.1.1	Installation dimensions	10		
5.2	Mounting the measuring device	10		
5.3	Post-mounting check	11		
6	Electrical connection	12		
6.1	Connection conditions	12		
6.2	Connection instructions	12		
6.2.1	Cable specification	12		
6.3	Connecting the measuring device	13		
6.3.1	Terminal assignment on the rear of the device	13		
6.3.2	Supply voltage	14		
6.3.3	Relays	14		
6.3.4	Digital inputs; auxiliary voltage output	14		
6.3.5	Analog inputs	15		
6.3.6	Connection example: Auxiliary voltage output as transmitter power supply for 2-wire sensors	16		
6.3.7	Connection example: Auxiliary voltage output as transmitter power supply for 4-wire sensors	17		
6.3.8	Option: RS232/RS485 interface (rear of device)	17		
6.3.9	Ethernet connection (rear of device)	18		
6.3.10	Option: Ethernet Modbus TCP slave	19		
6.3.11	Option: Modbus RTU slave	19		
6.3.12	Connections at front of device	19		
6.4	Post-connection check	21		
7	Operation options	22		
7.1	Overview of operation options	22		
7.2	Structure and function of the operating menu	22		
7.2.1	Operating menu for operators and maintenance personnel	22		
7.2.2	Operating menu for experts	23		
7.2.3	Submenus and users	23		
7.3	Measured value display and operating elements	25		
7.4	Display representation of symbols used in operation	26		
7.4.1	Symbols in operating menus	27		
7.4.2	Symbols in the event logbook	27		
7.5	Entering text and numbers (virtual keyboard)	27		
7.6	Channel color assignment	28		
7.7	Access to the operating menu via the local display	28		
7.8	Device access via operating tools	28		
7.8.1	Analysis software (SQL database support)	28		
7.8.2	Web server	29		
7.8.3	OPC server (optional)	29		
8	System integration	30		
8.1	Integrating the measuring device in the system	30		
8.1.1	General notes	30		
8.1.2	Ethernet	30		
8.1.3	Modbus RTU/TCP slave	30		
9	Commissioning	31		
9.1	Function check	31		
9.2	Switching on the measuring device	31		
9.3	Setting the operating language	31		
9.4	Configuring the measuring device (Setup menu)	31		
9.4.1	Step-by-step: to the first measured value	32		
9.4.2	Step-by-step: set or delete the limit values	32		

9.4.3	Setup directly at the device	32	11.4	Pending, current diagnostic messages	53
9.4.4	Setup via SD card or USB stick	33	11.5	Diagnosis list	53
9.4.5	Setup via Web server	33	11.6	Event logbook	54
9.5	Advanced settings (Expert menu)	34	11.7	Device information	54
9.6	Configuration management	35	11.8	Diagnostics of measured values	54
9.7	Simulation	35	11.9	Diagnostics of outputs	54
9.8	Protecting settings from unauthorized access	36	11.10	Simulation	54
			11.10.1	E-mail test	54
			11.10.2	Test WebDAV Client	55
			11.10.3	Test time synchronization/SNTP	55
			11.10.4	Relay test	55
10	Operation	37	11.11	Initialize modem	55
10.1	Displaying and modifying current Ethernet settings	37	11.12	Resetting the measuring device	55
10.2	Reading the device locking status	37	11.13	Firmware history	56
10.3	Reading measured values	38	12	Maintenance	56
10.4	Reading measured values via the Web server	38	12.1	Updating the device software ("firmware")	56
10.4.1	Access to the Web server via HTTP (HTML)	39	12.2	Instructions for enabling a software option	56
10.4.2	Access to the Web server via XML	39	12.3	Cleaning	56
10.4.3	Remote control via the Web server	40	13	Repairs	57
10.5	Data analysis and visualization using analysis software provided	40	13.1	General notes	57
10.5.1	Structure/layout of a CSV file	41	13.2	Spare parts	57
10.5.2	Importing UTF-8-encoded CSV files into spreadsheets	42	13.3	Return	58
10.6	Change group	42	13.4	Disposal	59
10.7	Block keyboard/navigator	42	14	Accessories	60
10.8	Log on/log out	42	14.1	Device-specific accessories	60
10.9	SD card/USB stick	42	15	Technical data	62
10.9.1	Function of SD card or USB stick	42	15.1	Function and system design	62
10.9.2	Functions relating to the SD card or USB stick	43	15.2	Input	63
10.9.3	Notes on e-mail encryption	44	15.3	Output	66
10.9.4	Notes on WebDAV encryption	44	15.4	Power supply	68
10.9.5	SSL certificates	45	15.5	Performance characteristics	70
10.10	Showing measured values history	46	15.6	Installation	70
10.10.1	Historical data: changing a group	46	15.7	Environment	72
10.10.2	Historical data: Scroll speed	46	15.8	Mechanical construction	72
10.10.3	Historical data: Time scaling	46	15.9	Display and operating elements	73
10.10.4	Historical data: Time range displayed	46	15.10	Certificates and approvals	76
10.10.5	Historical data: Screenshot	46	15.11	Ordering information	76
10.10.6	Historical data: Change the display mode	46	16	Appendix	77
10.11	Signal analysis	47	16.1	Operating items in the "Expert" menu	77
10.12	Search in trace	47	16.1.1	"System" submenu	77
10.13	Changing the display mode	47	16.1.2	"Inputs" submenu	96
10.14	Adjusting the brightness of the display	47	16.1.3	"Outputs" submenu	118
10.15	Limit values	48	16.1.4	"Communication" submenu	119
10.16	WebDAV Client	48	16.1.5	"Application" submenu	133
10.16.1	Access to the WebDAV server via HTTP (HTML)	48	16.1.6	"Diagnostics" submenu	164
11	Diagnostics and troubleshooting	49	Index	169	
11.1	General troubleshooting	49			
11.2	Troubleshooting	49			
11.2.1	Device error/alarm relay	49			
11.3	Diagnostic information on the local display	50			

1 Document information

1.1 Document function





These Operating Instructions contain all the information that is required in various phases of the life cycle of the device: from product identification, incoming acceptance and storage, to mounting, connection, operation and commissioning through to troubleshooting, maintenance and disposal.

Integrated Operating Instructions







At the push of a button, the device displays operating instructions directly on the screen. This manual complements the operating instructions in the device and explains what is not directly described in the operating instructions.

1.2 Symbols used








 



1.2.1 Safety symbols

Symbol	Meaning
	DANGER! This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	WARNING! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	CAUTION! This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	NOTE! This symbol contains information on procedures and other facts which do not result in personal injury.





1.2.2 Electrical symbols

Symbol	Meaning	Symbol	Meaning
	Direct current		Alternating current
	Direct current and alternating current		Ground connection A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	Protective ground connection A terminal which must be connected to ground prior to establishing any other connections.		Equipotential connection A connection that has to be connected to the plant grounding system: This may be a potential equalization line or a star grounding system depending on national or company codes of practice.

 1.2.3 Symbols for certain types of information

Symbol	Meaning
	Permitted Procedures, processes or actions that are permitted.
	Preferred Procedures, processes or actions that are preferred.
	Forbidden Procedures, processes or actions that are forbidden.
	Tip Indicates additional information.
	Reference to documentation
	Reference to page
	Reference to graphic
	Series of steps
	Result of a step
	Help in the event of a problem
	Visual inspection

 1.2.4 Symbols in graphics

Symbol	Meaning
1, 2, 3,...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
 <small>A0013441</small>	Flow direction
 <small>A0011187</small>	Hazardous area Indicates a hazardous area.
 <small>A0011188</small>	Safe area (non-hazardous area) Indicates a non-hazardous area.

1.3 Registered trademarks

Modbus®

Registered trademark of SCHNEIDER AUTOMATION, INC.

Internet Explorer®, Excel™

Registered trademarks of the Microsoft Corporation

Mozilla Firefox®

Registered trademark of the Mozilla Foundation

Opera®

Registered trademark of Opera Software ASA.

Google Chrome™

Registered trademark of Google INC.

2 Basic safety instructions

Reliable and safe operation of the device is guaranteed only if the user reads these Operating Instructions and complies with the safety instructions they contain.

2.1 Requirements concerning the staff

The personnel for installation, commissioning, diagnostics and maintenance must fulfill the following requirements:

- ▶ Trained, qualified specialists: must have a relevant qualification for this specific function and task
- ▶ Are authorized by the plant owner/operator
- ▶ Are familiar with federal/national regulations
- ▶ Before beginning work, the specialist staff must have read and understood the instructions in the Operating Instructions and supplementary documentation as well as in the certificates (depending on the application)
- ▶ Following instructions and basic conditions

The operating personnel must fulfill the following requirements:

- ▶ Being instructed and authorized according to the requirements of the task by the facility's owner-operator
- ▶ Following the instructions in these Operating Instructions

2.2 Designated use

This device is designed for the electronic acquisition, display, recording, analysis, remote transmission and archiving of analog and digital input signals in non-hazardous areas.

- The manufacturer accepts no liability for damages resulting from incorrect use or use other than that designated. It is not permitted to convert or modify the device in any way.
- The device is designed for installation in a panel and must only be operated in an installed state.

2.3 Workplace safety

For work on and with the device:

- ▶ Wear the required personal protective equipment according to federal/national regulations.

2.4 Operational safety

Risk of injury.

- ▶ Operate the device in proper technical condition and fail-safe condition only.
- ▶ The operator is responsible for interference-free operation of the device.

Conversions to the device

Unauthorized modifications to the device are not permitted and can lead to unforeseeable dangers.

- ▶ If, despite this, modifications are required, consult with the manufacturer.

Repair

To ensure continued operational safety and reliability,

- ▶ Carry out repairs on the device only if they are expressly permitted.
- ▶ Observe federal/national regulations pertaining to repair of an electrical device.
- ▶ Use original spare parts and accessories from the manufacturer only.

Hazardous area

To eliminate a danger for persons or for the facility when the device is used in the hazardous area (e.g. explosion protection, pressure vessel safety):

- ▶ Based on the nameplate, check whether the ordered device is permitted for the intended use in the hazardous area.
- ▶ Observe the specifications in the separate supplementary documentation that is an integral part of these Instructions.

2.5 Product safety

This measuring device is designed in accordance with good engineering practice to meet state-of-the-art safety requirements, has been tested, and left the factory in a condition in which it is safe to operate.

It meets general safety standards and legal requirements. It also complies with the EC directives listed in the device-specific EC Declaration of Conformity. The manufacturer confirms this by affixing the CE mark to the device.

2.6 Safety information for table version (option)

- The mains plug should only be inserted into a socket with a ground contact.
- The protective effect may not be suspended by an extension cable without a protective ground.
- Relay outputs: $U(\text{max}) = 30 V_{\text{eff}}(\text{AC})/60 V(\text{DC})$.

2.7 IT security

The manufacturer only provides a warranty if the device is installed and used as described in the Operating Instructions. The device is equipped with security mechanisms to protect it against any inadvertent changes to the device settings.

IT security measures in line with operators' security standards and designed to provide additional protection for the device and device data transfer must be implemented by the operators themselves.

3 Product description**3.1 Product design**

This device is best suited for the electronic acquisition, display, recording, analysis, remote transmission and archiving of analog and digital input signals.

The device is intended for installation in a panel or cabinet. There is also the option of operating it in a table-mounted or field-mounted housing.

4 Incoming acceptance and product identification

4.1 Incoming acceptance

On receipt of the goods, check the following points:

- Is the packaging or the content damaged?
- Is the delivery complete? Compare the scope of delivery against the information on your order form.

4.2 Scope of delivery


The scope of delivery of the device comprises:

- Device (with terminals, as per order)
- 2 fastening clips
- USB cable
- Optional: Industrial grade SD card (card is located in the SD slot behind the flap on the front of the housing)
- Analysis software on CD-ROM
- Multilanguage Operating Instructions on CD-ROM

4.3 Product identification

4.3.1 Nameplate

Compare the nameplate with the following diagram:

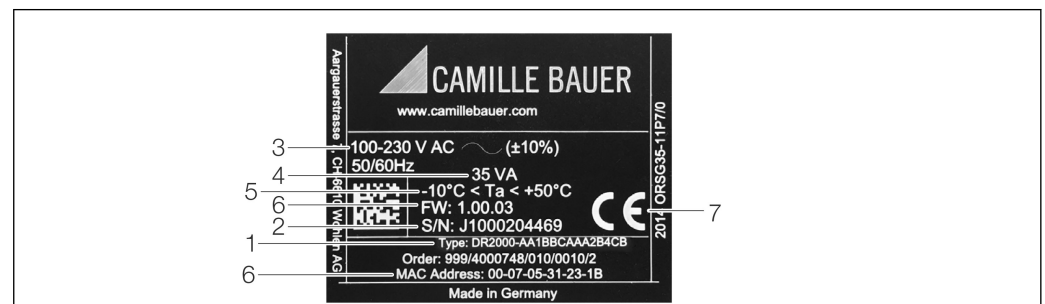

1 Device nameplate (example)

- 1 Device tag
- 2 Serial number
- 3 Power supply, mains frequency
- 4 Maximum power consumption
- 5 Temperature range
- 6 Software version; MAC address
- 7 Device approvals

4.4 Storage and transport

Compliance with the permitted environmental and storage conditions is mandatory. For precise specifications, see the "Technical data" section → 62 of the Operating Instructions.

Please note the following:

- Pack the device so that is protected against impact for storage and transport. The original packaging provides optimum protection.
- The permitted storage temperature is -20 to $+60$ °C (-4 to $+140$ °F).

5 Installation

5.1 Mounting requirements

NOTICE

Overheating due to buildup of heat in the device

- ▶ To avoid heat buildup, please always ensure that the device is sufficiently cooled.

The device is designed for use in a panel in non-hazardous areas.


- Ambient temperature range -10 to $+50$ °C (14 to 122 °F)
- Climate class as per IEC 60654-1: Class B2
- Degree of protection: IP65, NEMA 4 at front / IP20 housing at rear


5.1.1 Installation dimensions

Please observe the installation depth of approx. 158 mm (6.22 in) for the device incl. terminals and fastening clips.

- Panel cutout: 138 to 139 mm (5.43 to 5.47 in) x 138 to 139 mm (5.43 to 5.47 in)
- Panel strength: 2 to 40 mm (0.08 to 1.58 in)
- Angle of vision: from the midpoint axis of the display, 75° to the left and right, 65° above and below.
- A minimum distance of 15 mm (0.59 in) mm (inch) between the devices must be observed if aligning the devices in the Y-direction (vertically above one another). A minimum distance of 10 mm (0.39 in) mm (inch) between the devices must be observed if aligning the devices in the X-direction (horizontally beside one another).
- Securing to DIN 43 834

5.2 Mounting the measuring device

 Mounting tool: For installation in the panel, all you need is a screwdriver.

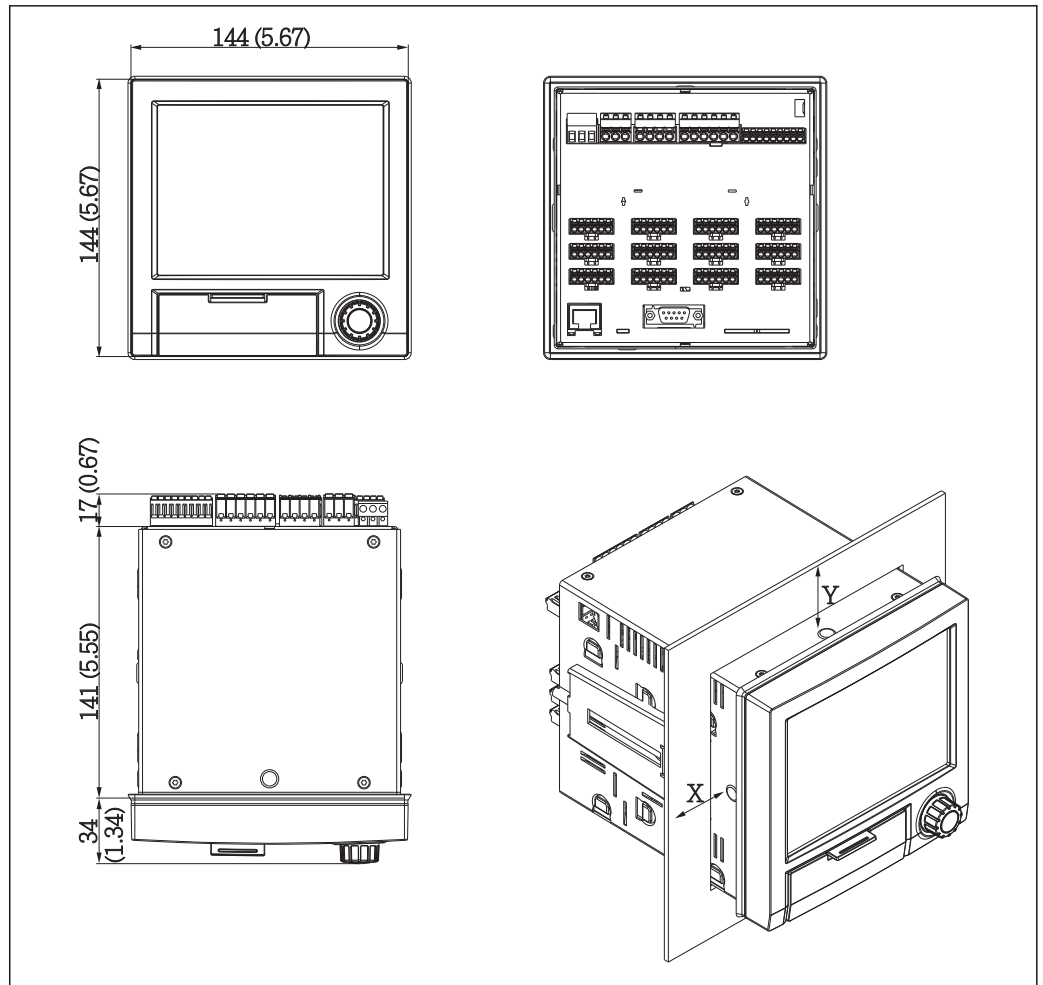

A0019301

2 Panel mounting and dimensions in mm (Inch)

1. Push the device through the panel cutout from the front. To avoid heat buildup, maintain a distance of > 15 mm (>0.59 in) from walls and other devices.
2. Hold the device level and hang the fastening clips in the openings (1 x left, 1 x right).
3. Evenly tighten the screws on the fastening clip using a screwdriver to guarantee a secure seal to the control panel (torque 100 Ncm).

5.3 Post-mounting check

- Is the sealing ring undamaged?
- Does the seal run all around the housing collar?
- Are the threaded rods properly tightened?
- Is the device fixed firmly in the center of the control panel cutout?

6 Electrical connection

6.1 Connection conditions

WARNING

Danger! Electric voltage!

- ▶ The entire connection of the device must take place while the device is de-energized.
- ▶ The mixed connection of safety extra-low voltage and dangerous contact voltage to the relay is **not** permitted.
- ▶ Apart from the relays and the supply voltage, only energy-limited circuits according to IEC/EN 61010-1 may be connected.

Danger if protective ground is disconnected

- ▶ The ground connection must be made before all other connections.

NOTICE

Cable heat load

- ▶ Use suitable cables for temperatures of 5 °C (9 °F) above ambient temperature.

Incorrect supply voltage can damage the device or cause malfunctions

- ▶ Before commissioning the device, make sure that the supply voltage matches the voltage specifications on the nameplate.

Check emergency shutdown for device

- ▶ Provide suitable switch or circuit breaker in building installation. This switch must be provided close to the device (within easy reach) and marked as a circuit breaker.

Protect the device from overload

- ▶ Provide overload protection (nominal current = 10 A) for power cable.

Incorrect wiring may result in the device being destroyed

- ▶ Note terminal designation on the rear of the device.

Energy-rich transients in the case of long signal lines

- ▶ Connect a suitable overvoltage protection in series upstream.

6.2 Connection instructions

6.2.1 Cable specification

Cable specification, spring terminals

All connections on the rear of the device are designed as pluggable screw or spring terminal blocks with reverse polarity protection. This makes the connection very quick and easy. The spring terminals are unlocked with a slotted screwdriver (size 0).

Please note the following when connecting:

- Wire cross-section, auxiliary voltage output, digital I/O and analog I/O: max. 1.5 mm² (14 AWG) (spring terminals)
- Wire cross-section, mains: max. 2.5 mm² (13 AWG) (screw terminals)
- Wire cross-section, relays: max. 2.5 mm² (13 AWG) (spring terminals)
- Stripping length: 10 mm (0.39 in)



No ferrules must be used when connecting flexible wires to spring terminals.

Shielding and grounding

Optimum electromagnetic compatibility (EMC) can only be guaranteed if the system components and, in particular, the lines - both sensor lines and communication lines - are

shielded and the shield forms as complete a cover as possible. A shielded line must be used for sensor lines that are longer than 30 m. A shield coverage of 90% is ideal. In addition, make sure not to cross sensor lines and communication lines when routing them. Connect the shield as often as possible to the reference ground to ensure optimum EMC protection for the different communication protocols and the connected sensors.

To comply with requirements, three different types of shielding are possible:

- Shielding at both ends
- Shielding at one end on the supply side with capacitance termination at the device
- Shielding at one end on the supply side


Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the supply side (without capacitance termination at the device). Appropriate internal device wiring measures must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.

Where applicable, national installation regulations and guidelines must be observed during the installation! Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground.

i If the shielding of the cable is grounded at more than one point in systems without potential matching, mains frequency equalizing currents can occur. These can damage the signal cable or significantly impact signal transmission. In such cases the shielding of the signal cable is to be grounded on one side only, i.e. it may not be connected to the ground terminal of the housing. The shield that is not connected should be insulated!

6.3 Connecting the measuring device

6.3.1 Terminal assignment on the rear of the device

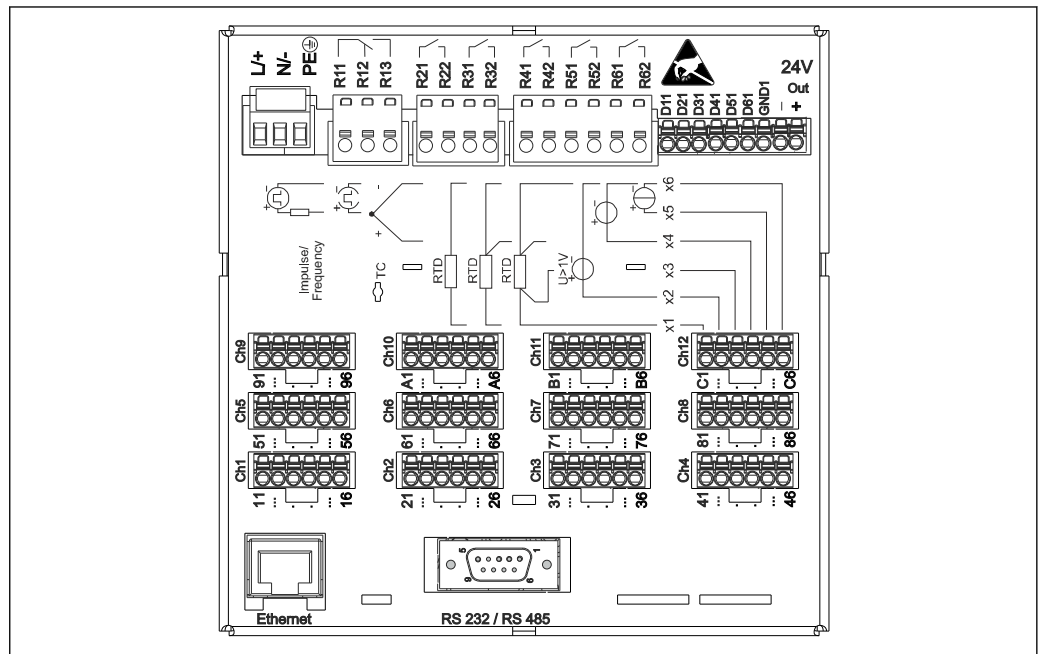

A0019304

3 Terminals on the rear of the device

6.3.2 Supply voltage

Power unit type	Terminal		
100-230 VAC	L+	N-	PE
	Phase L	Zero conductor N	Ground
24 V AC/DC	L+	N-	PE
	Phase L or +	Zero conductor N or -	Ground

6.3.3 Relays

Type	Terminal (max. 250 V, 3 A)				
Alarm relay 1	R11	R12	R13		
	Changeover contact	Normally closed contact (NC) ¹⁾	Normally open contact (NO) ²⁾		
Relay 2 to 6				Rx1	Rx2
				Switching contact	Normally open contact (NO) ²⁾

1) NC = normally closed (breaker)


2) NO = normally open (maker)

6.3.4 Digital inputs; auxiliary voltage output

Type	Terminal			
Digital input 1 to 6	D11 to D61	GND1		
	Digital input 1 to 6 (+)	Ground (-) for digital inputs 1 to 6		
Auxiliary voltage output, not stabilized, max. 250 mA			24V Out -	24V Out +
			- Ground	+ 24V (±15%)


6.3.5 Analog inputs

 The first digit (x) of the two-digit terminal number corresponds to the associated channel:

Type	Terminal					
	x1	x2	x3	x4	x5	x6
						
					(+)	(-)
Current/pulse/frequency input ¹⁾					(+)	(-)
Voltage > 1V		(+)				(-)
Voltage ≤ 1V				(+)		(-)
Resistance thermometer RTD (2-wire)	(A)					(B)
Resistance thermometer RTD (3-wire)	(A)			b (sense)		(B)
Resistance thermometer RTD (4-wire)	(A)		a (sense)	b (sense)		(B)
Thermocouples TC				(+)		(-)

1) If a universal input is used as a frequency or pulse input and the voltage is >2.5 V, a series resistor must be used in series connection with the voltage source. Example: 1.2 kΩ series resistor at 24 V


6.3.6 Connection example: Auxiliary voltage output as transmitter power supply for 2-wire sensors

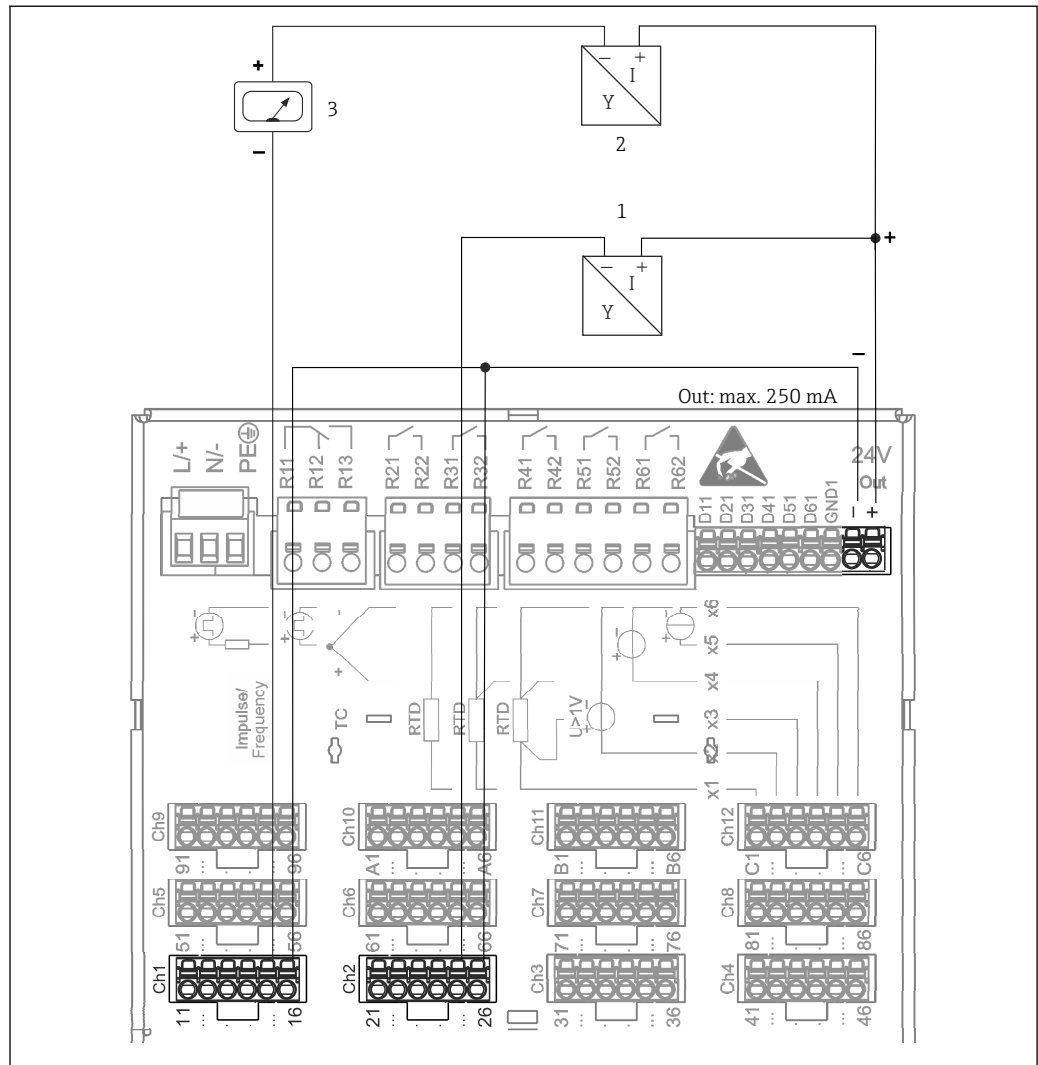

4 Connecting auxiliary voltage output when using as a transmitter power supply for 2-wire sensors in the current measuring range. (When connecting channel CH3-12, see pin assignment CH1-2.)

- 1 Sensor 1
- 2 Sensor 2
- 3 External indicator (optional)

6.3.7 Connection example: Auxiliary voltage output as transmitter power supply for 4-wire sensors

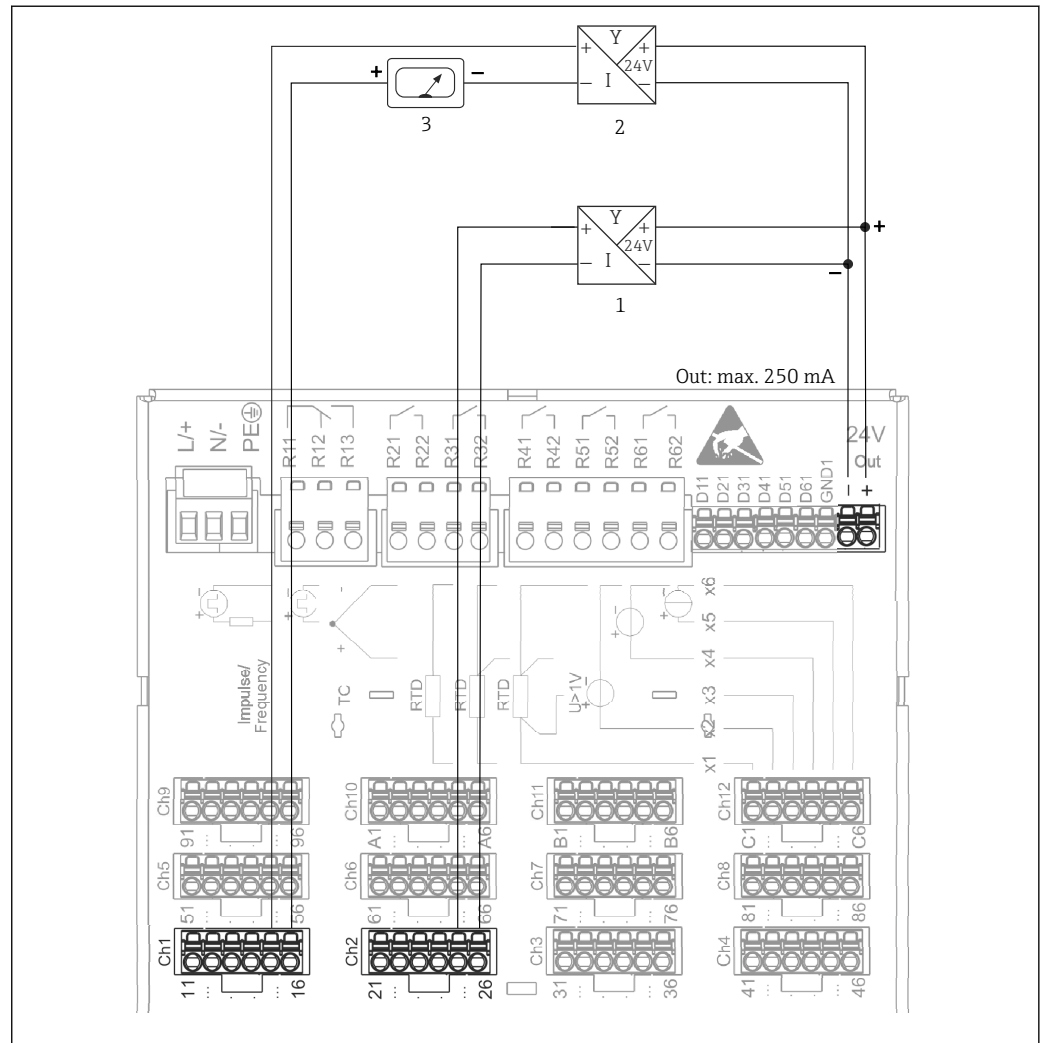


5 Connecting auxiliary voltage output when using as a transmitter power supply for 4-wire sensors in the current measuring range. (When connecting channel CH3-12, see pin assignment CH1-2.)

- 1 Sensor 1
- 2 Sensor 2
- 3 External indicator (optional)

6.3.8 Option: RS232/RS485 interface (rear of device)

i Use shielded signal lines for serial interfaces!

A combined RS232/RS485 connection is available on a shielded SUB D9 socket at the rear of the device. This can be used for data transfer and to connect a modem. For communication via modem, we recommend an industrial modem with a watchdog function.

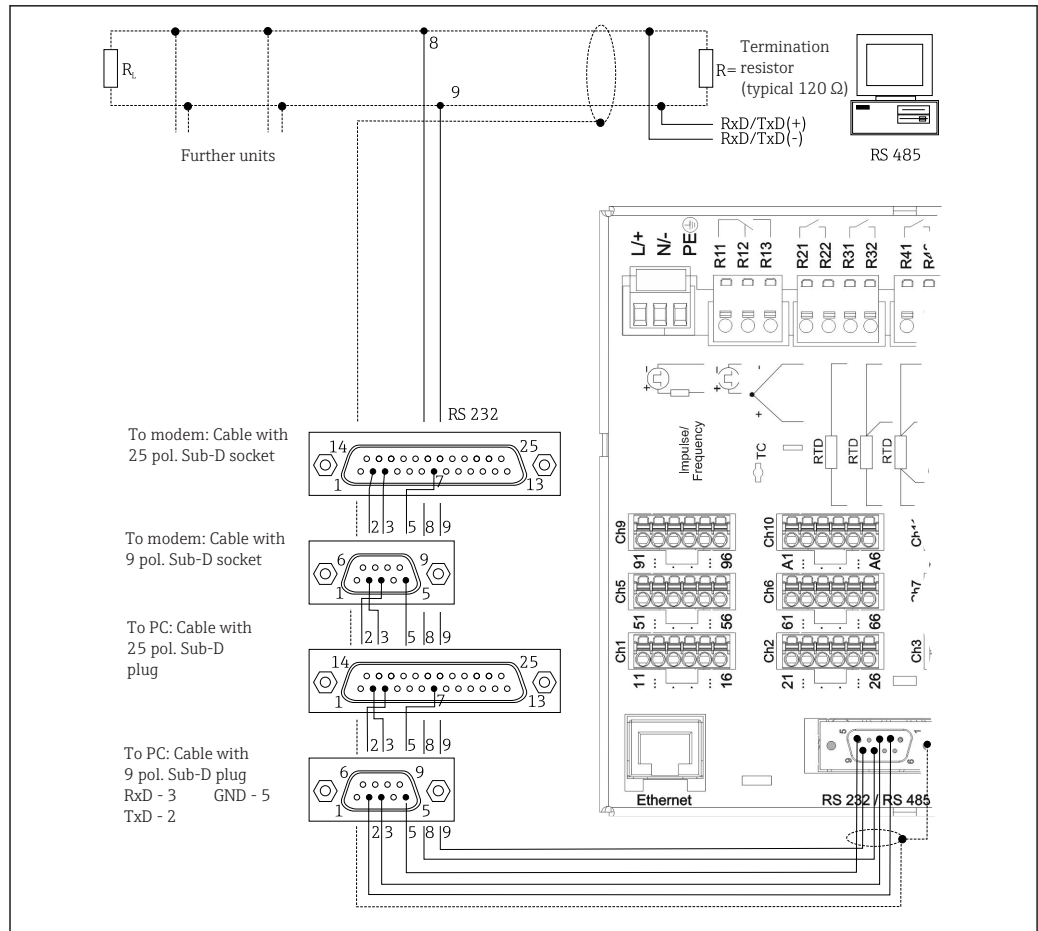

Type	Pin of the SUB-D9 socket								
	1	2	3	4	5	6	7	8	9
RS232 assignment		TxD (data output)	RxD (data input)		GND				
RS485 assignment					GND			RxD/TxD -	RxD/TxD +
Unoccupied connections should be left empty. Maximum cable length: RS232: 2 m (6.6 ft) RS485: 1000 m (3280 ft)									

i Only one interface can be used at any one time (RS232 or RS485).

6.3.9 Ethernet connection (rear of device)

The Ethernet interface can be used to integrate the device via a hub or switch into a PC network (TCP/ IP Ethernet). A standard patch cable (e.g. CAT5E) can be used for the connection. Using DHCP, the device can be fully integrated into an existing network without the need for additional configuration. The device can be accessed from every PC in the network.

- Standard: 10/100 Base T/TX (IEEE 802.3)
- Socket: RJ-45
- Max. cable length: 100 m
- Galvanic isolation; testing voltage: 500 V

Meaning of the LEDs

Beneath the Ethernet connection (see rear of device) there are two light emitting diodes which indicate the status of the Ethernet interface.

- Yellow LED: link signal; is lit when the device is connected to a network. If this LED is not illuminated then communication is impossible.
- Green LED: Tx/Rx; flashes irregularly if the device is transmitting or receiving data.

6.3.10 Option: Ethernet Modbus TCP slave


The Modbus TCP interface is used to connect to higher-ranking SCADA systems (Modbus master) to transmit all measured values and process values. Up to 12 analog inputs and 6 digital inputs can be transmitted via Modbus and stored in the device. Form a physical point of view, the Modbus TCP interface is identical to the Ethernet interface.


6.3.11 Option: Modbus RTU slave

The Modbus RTU (RS485) interface is galvanically isolated (testing voltage: 500 V) and is used to connect to higher-ranking systems to transmit all measured values and process values. Up to 12 analog inputs and 6 digital inputs can be transmitted via Modbus and stored in the device. Connection is via the combined RS232/RS485 interface.

 Modbus TCP and Modbus RTU cannot be used at the same time.

6.3.12 Connections at front of device

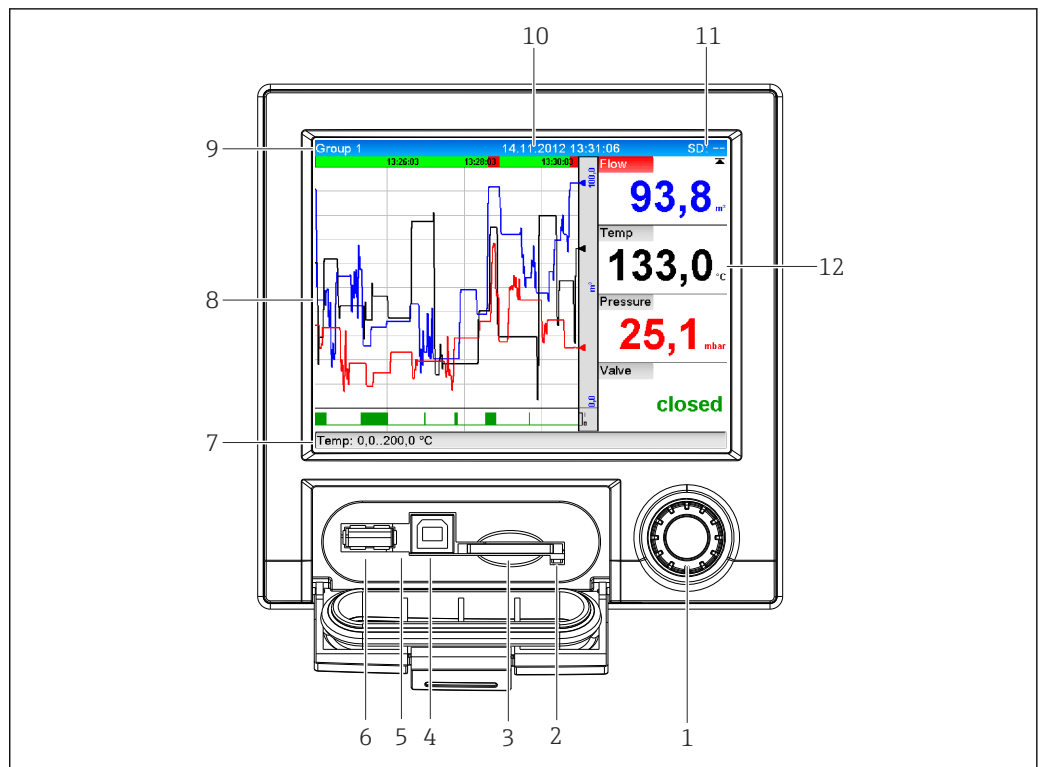

 6 Front of device with open flap

- 1 Navigator
- 2 LED at SD slot. Orange LED lights up or flashes when the device writes to or reads from the SD card.
- 3 Slot for SD card
- 4 USB B socket "Function" e.g. to connect to PC or laptop
- 5 Green LED lit: power supply present
- 6 USB A socket "Host" e.g. for USB memory stick or external keyboard
- 7-12 For a description of the displays, see the "Operability" section


A0019501

USB connection type A (host)

A USB 2.0 port is available on a shielded USB A socket at the front of the device. A USB stick, for example, can be connected to this interface as a storage medium. An external keyboard or USB hub may also be connected.

USB connection type B (function)

A USB 2.0 port is available on a shielded USB B socket at the front of the device. This can be used to connect the device for communication with a laptop, for example.

 USB-2.0 is compatible with USB-1.1 or USB-3.0, i.e. communication is possible.

Information on USB devices


The USB devices are detected by the "plug-and-play" function. If several devices of the same type are connected, only the USB device that was connected first is available. Settings for the USB devices are made in the setup. A maximum of 8 external USB devices (incl. USB hub) can be connected if they do not exceed the maximum load of 500 mA. If overloaded, the corresponding USB devices are automatically disabled.


Requirements with regard to an external USB hub

The USB devices are detected by the "plug-and-play" function. If several devices of the same type are connected, only the USB device that was connected first is available. Settings for the USB devices are made in the setup. A maximum of 8 external USB devices (incl. USB hub) can be connected if they do not exceed the maximum load of 500 mA. If overloaded, the corresponding USB devices are automatically disabled.

Requirements with regard to the USB stick

There is no guarantee that all manufacturers' USB sticks will function faultlessly. That is why an industrial grade SD card is recommended to ensure the reliable recording of data.
→  60

 The USB stick must be formatted to FAT or FAT32. NTFS format is not readable. The system supports only USB sticks with max. 32 GB.



 The USB stick must not be connected to the device via a USB hub. Interference from other USB devices may result in data loss.

Requirements with regard to an external USB keyboard

The system only supports keyboards which can be addressed using generic drivers (HID keyboard - Human Interface Device). Special keys are not supported (e.g. Windows keys). Users can only enter characters that are available in the entry character set of the device. All unsupported characters are rejected. It is not possible to connect a wireless keyboard. The following keyboard layouts are supported: DE, CH, FR, USA, USA International, UK, IT. See setting under "Setup -> Advanced setup -> System -> Keyboard layout".

Requirements for the SD card

Industrial grade SD-HC cards with max. 32 GB are supported.

 Use only the industrial grade SD cards described in the "Accessories" section of the Operating Instructions. These have been tested by the manufacturer and guaranteed to function faultlessly in the device. →  60

 The SD card must be formatted to FAT or FAT32. NTFS format is not readable.

6.4 Post-connection check

Device condition and specifications	Notes
Are cables or the device damaged?	Visual inspection
Electrical connection	Notes
Does the supply voltage match the specifications on the nameplate?	-
Are all terminals firmly engaged in their correct slot?	-
Are the mounted cables strain-relieved?	-
Are the power supply and signal cables correctly connected?	See connection diagram and rear of device.


7 Operation options

7.1 Overview of operation options

The device can be operated directly onsite with the Navigator and USB keyboard/mouse or via interfaces (serial, USB, Ethernet) and operating tools (Web server).


7.2 Structure and function of the operating menu

7.2.1 Operating menu for operators and maintenance personnel

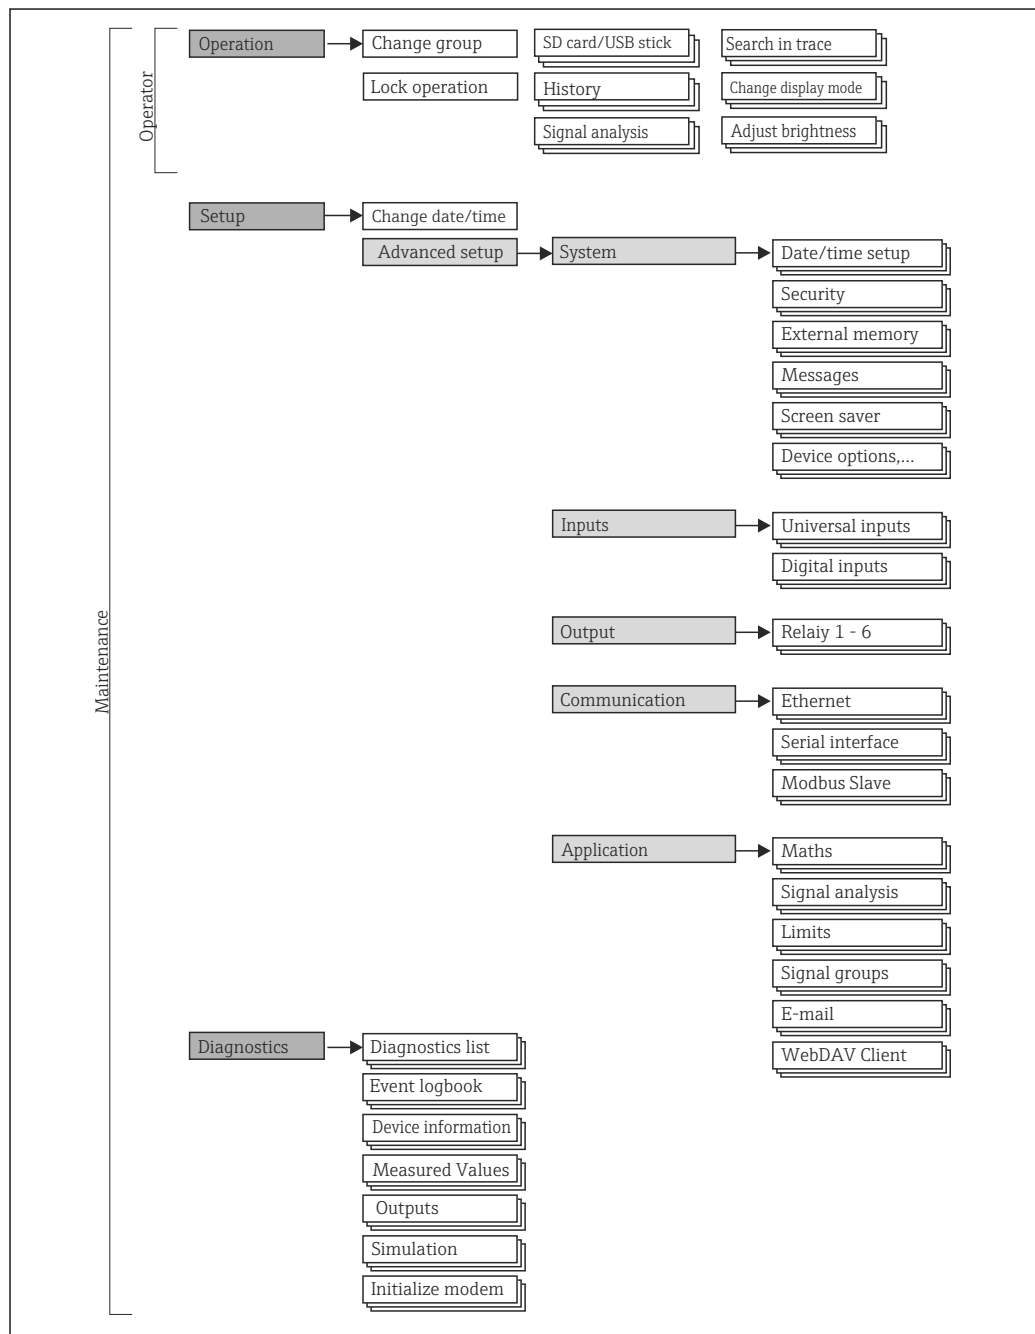

A0019594-EN

7.2.2 Operating menu for experts

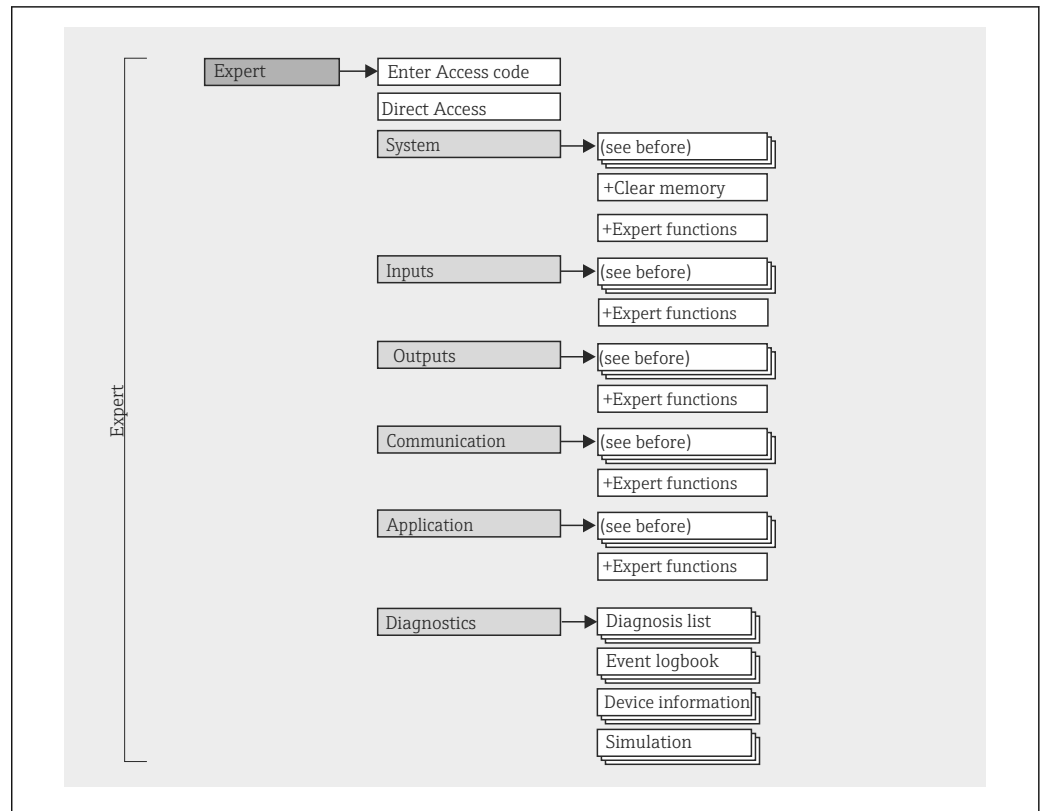

A0019596-EN


7.2.3 Submenus and users

Certain parts of the menu are assigned to certain user roles. Each user role corresponds to typical tasks within the lifecycle of the device.

User role	Typical tasks	Menu	Content/meaning
Operator	Tasks during operation: <ul style="list-style-type: none"> ▪ Configuration of the display. ▪ Reading measured values. 	"Operation"	Contains all the parameters that are required in ongoing operation: configuration of the measured value display (displayed values, display format, etc.).
Maintenance	Commissioning: <ul style="list-style-type: none"> ▪ Configuration of the measurement. ▪ Configuration of data processing. 	"Setup"	Contains all parameters for commissioning: <ul style="list-style-type: none"> ▪ Change date/time ▪ "Advanced setup" submenu Contains additional submenus and parameters: <ul style="list-style-type: none"> - System: Basic settings required for operating the device. - Inputs: Settings for analog and digital inputs. - Outputs: Setup required only if outputs (e.g. relays) are to be used. - Communication: Settings required if you are using the USB, RS232, RS485 or Ethernet interface of the device (PC operation, serial data export, modem operation, etc.). - Application: Define different application-specific settings (e.g. group settings, limit values, etc.). Once values have been set for these parameters, the measurement should generally be completely configured.

User role	Typical tasks	Menu	Content/meaning
	Fault elimination: <ul style="list-style-type: none"> ▪ Diagnosing and eliminating process errors. ▪ Interpretation of device error messages and correcting associated errors. 	"Diagnostics"	Contains all parameters for detecting and analyzing errors: <ul style="list-style-type: none"> ▪ Diagnosis list All diagnosis messages are listed in chronological order. ▪ Event logbook Events such as limit value violations and power failures are listed in chronological order. ▪ Device information Displays important device information (e.g. serial number, firmware version, device options for hardware and software, memory information, etc.). ▪ Measured values Display of current measured values of device. ▪ Outputs Displays the current status of the outputs e.g. switch status of relay outputs. ▪ Simulation Various functions/signals can be simulated for test purposes here. Note: In Simulation mode, normal recording of the measured values is interrupted and the intervention is logged in the event log. ▪ Initialize modem Initializes the modem connected to the serial interface (for automatic call answering).
Expert	Tasks that require detailed knowledge of the function of the device: <ul style="list-style-type: none"> ▪ Commissioning measurements under difficult conditions. ▪ Optimal adaptation of the measurement to difficult conditions. ▪ Detailed configuration of the communication interface. ▪ Error diagnostics in difficult cases. 	"Expert"	Contains all parameters of the device (including those that are already in one of the other menus). The expert menu is protected by a code. Factory setting: 0000. This menu is structured according to the function blocks of the device: <ul style="list-style-type: none"> ▪ "System" submenu Contains all higher-order device parameters that do not concern the measurement or measured value communication. ▪ "Inputs" submenu Contains all parameters for configuring the analog and digital inputs. ▪ "Output" submenu Contains all parameters for configuring the outputs (e.g. relays). ▪ "Communication" submenu Contains all parameters for configuring the communication interfaces. ▪ "Application" submenu Contains all parameters for configuring application-specific settings (e.g. group settings, limit values etc.). ▪ "Diagnostics" submenu Contains all parameters needed to detect and analyze operational errors.


7.3 Measured value display and operating elements

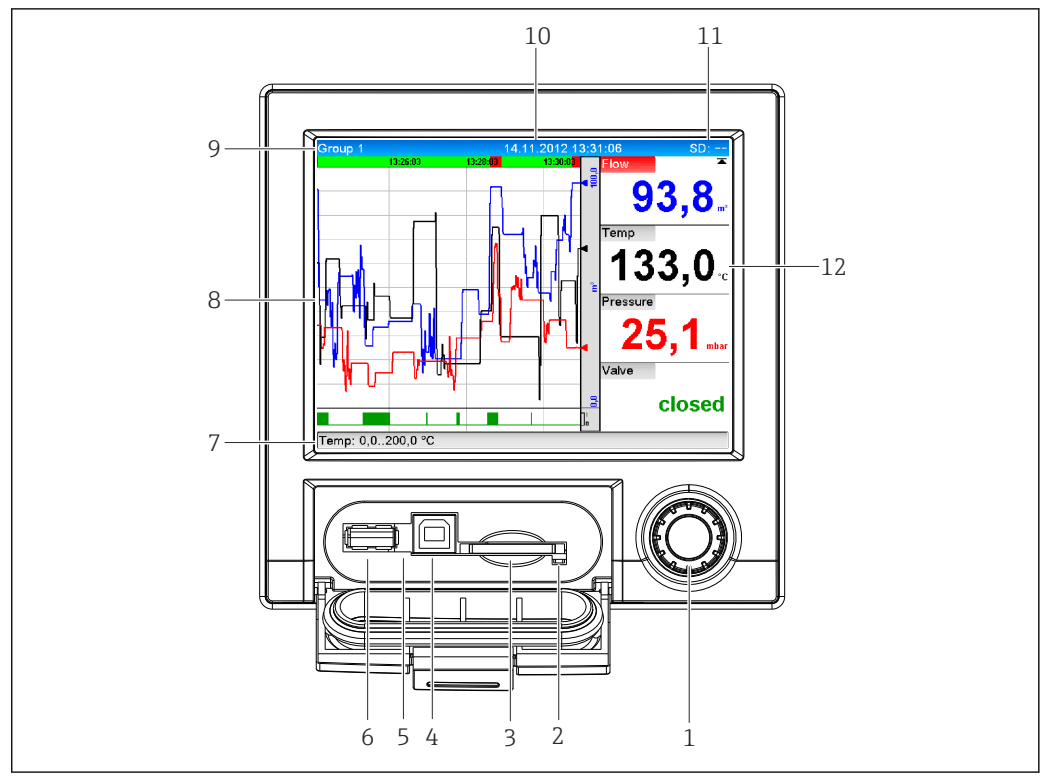





A0020602-EN



7 Front of device with open flap

Item No.	Operating function (display mode = display of measured values) (Setup mode = operating in the Setup menu)
1	"Navigator": jog/shuttle dial for operating with additional press/hold function. In display mode: turn the dial to switch between the various signal groups. Press the dial to display the main menu. In setup mode or in a selection menu: turn the dial anticlockwise to move the bar or the cursor upwards or counterclockwise, changes the parameter. Turning clockwise moves the bar or cursor down or clockwise, changes parameter. Press briefly (<2 sec.) = Select highlighted function, parameter change starts (ENTER key). i Access online help: Press and hold Navigator (>3 sec.) to show information on the selected function. To quit the menu immediately, press and hold "Back" (>3 sec.) in the Navigator. The devices switches to display mode.
2	LED at SD slot. Orange LED lit when the device writes to the SD card or reads it. Do not remove the SD card if the LED is lit! Risk of data loss!
3	Slot for SD card
4	USB B socket "Function" e.g. to connect to PC or laptop
5	Green LED lit: power supply present
6	USB A socket "Host" e.g. for USB memory stick or external keyboard
7	In display mode: alternating status display (e.g. set zoom range) of the analog or digital inputs in the appropriate color of the channel. In setup mode: different information can be displayed here depending on the display type.
8	In display mode: window for measured value display (e.g. curve display). In setup mode: display of operating menu






Item No.	Operating function (display mode = display of measured values) (Setup mode = operating in the Setup menu)
9	In display mode: current group name, type of evaluation In setup mode: name of the current operating item (dialog title)
10	In display mode: displays current date/time In setup mode: --
11	In display mode: alternating display indicating the percentage space on the SD card or USB stick that has already been used. Status symbols are also displayed in alternation with the memory information (see the following table). In setup mode: the current "direct access" operating code is displayed
12	In display mode: display of current measured values and the status in the event of an error/alarm condition. In the case of counters, the type of counter is displayed as a symbol (see the following table).  If a measuring point has limit value status, the corresponding channel identifier is highlighted in red (quick detection of limit value violations). During a limit value violation and device operation, the acquisition of measured values continues uninterrupted.

7.4 Display representation of symbols used in operation






 



Item No.	Function	Description
8,12	Symbols for counters:	
	$\Sigma 1$	Interim analysis/ external analysis
	ΣD	Daily analysis
	ΣM	Monthly analysis
	ΣY	Annual analysis
	Σ	Totalizer
8, 12	Channel-related symbols:	
		Violation of lower limit value
		Violation of upper limit value or limit value on counter
		Violation of upper and lower limit values at the same time
	S	"Out of specification" e.g. input signal too high/low
	F	Error message "Failure detected" An operating error has occurred. The measured value is no longer valid (e.g. a channel not displayed in the current group is defective).
	M	"Maintenance required" Maintenance is required. The measured value is still valid.
	-----	Error, measured value not displayed. Possible causes: Sensor / input error, line break, invalid value, input signal too high/low
11	Symbol for status signals:	
		"Device locked" Setup is locked via a control input. Disable setup lock via a control input.
	S	"Out of specification" The device is being operated outside its technical specifications (e.g. during startup or cleaning).
	C	"Function check" The device is in Service mode.

Item No.	Function	Description
	M	"Maintenance required" Maintenance is required. The measured value is still valid.
	F	Error message "Failure detected" An operating error has occurred. The measured value is no longer valid (e.g. a channel not displayed in the current group is defective).
		"External communication" The device is communicating externally (e.g. via Modbus).
	SIM	"Simulation" Simulation is active.
7		"Historical data" Historical data are currently shown on screen.

7.4.1 Symbols in operating menus

	Symbol for setup
	Symbol for diagnostics
	Symbol for expert setup
	Back Use the "Back" function, which can be found at the bottom of each menu/submenu, to move up a level in the menu structure.
	To quit the menu immediately, press and hold "Back" (>3 sec.) in the Navigator. The devices switches to display mode.

7.4.2 Symbols in the event logbook

	Setup changes
	Power on
	Power off
	Limit value on
	Limit value off
1	Digital on (on/off message)
0	Digital off (on/off message)
	Service
	Texts saved / comments added
OK	Acknowledging message
	Back
	Continue searching

7.5 Entering text and numbers (virtual keyboard)

A virtual keyboard is available for entering text and numbers. This is opened automatically if needed. Here, turn the navigator to select the corresponding character and press the navigator to accept it.

The following characters are available for entering free text:

0-9 a-z A-Z = + - * / \ ² ³ ¼ ½ ¾ () [] < > { } I ? ! ` " ' ^ % ° . , : _ μ & # \$ € @ § £ ¥ ~

←	Jump one position to the left. If this symbol is selected, the cursor jumps one position to the left.
→	Jump one position to the right. If this symbol is selected, the cursor jumps one position to the right.
←x	Delete backwards. If this symbol is selected, the character to the left of the cursor position is deleted.
x→	Delete forwards. If this symbol is selected, the character to the right of the cursor position is deleted.
C	Delete all. if this symbol is selected, the entire entry is deleted.
X	Reject entry. If this symbol is selected, the entry is rejected and you quit editing mode. The previously set text remains.
✓	Accept entry. If this symbol is selected, the entry is applied at the position specified by the user, and you quit editing mode.

7.6 Channel color assignment

Channel color assignment is performed in the main menu under "**Setup -> Advanced setup -> Application -> Signal groups -> Group x**". 8 predefined colors are available per group and can be assigned to the desired channels.

7.7 Access to the operating menu via the local display

Using the "Navigator" (jog/shuttle dial with additional press function), all settings can be made directly onsite at the device.

7.8 Device access via operating tools


7.8.1 Analysis software (SQL database support)

The PC analysis software offers external, centralized data management with visualization for recorded data. The analysis software enables the complete archiving of all measuring point data e.g. measured values, diagnostic events and protocols. The analysis software stores data in an SQL database. The database can be operated locally or in a network (client / server). Access is via RS232/RS485, USB or Ethernet interface (network).

Function scope:

- Export of saved data (measured values, analyses, event log)
- Visualization and processing of saved data (measured values, analyses, event log)
- Safe archiving of exported data in a SQL database

The following versions of the software are available:

- Essential version (free, with limited functionalities)
- Professional version (see accessories →  60)
- Demo version (time-limited Professional version)



An "Essential" version of the analysis software is supplied with the device.





For details, see the Operating Instructions on the analysis software DVD provided.

7.8.2 Web server

A web server is integrated into the device. This makes the current measured values of the device available in real time. Access is via an Ethernet interface from a PC in the network via the standard browser. The installation of additional software is not required.

The Web server offers the following range of functions:

- Display of current and historical data and measured value curves via a standard Web browser →  37
- Easy configuration without additional installed software →  31
- Remote access to device and diagnostic information

7.8.3 OPC server (optional)

The OPC server makes it possible to access data on the device. These data are made available to OPC clients in real time. The OPC server meets the requirements of the OPC specifications regarding the supply of data to an OPC client. Access is via RS232/RS485, USB or Ethernet interface (network). Communication takes place using automatic device detection; the operator does not need to make any additional settings. The OPC server enables the flexible and powerful exchange of data and is easy and convenient to use.

The following momentary values can be provided:

- Analog channels
- Digital channels
- Mathematics
- Totalizer

8 System integration

8.1 Integrating the measuring device in the system

8.1.1 General notes

The device has (optional) fieldbus interfaces for exporting process values. Measured values and statuses can also be transmitted to the device via fieldbus. Note: Counters cannot be transferred.

Alarms or errors in the context of data transmission are displayed depending on the bus system (e.g. status byte).

The process values are transferred in the same devices that are used for display at the device.

8.1.2 Ethernet

Setup → **Advanced setup** → **Communication** → **Ethernet**

The IP address can be entered manually (fixed IP address) or assigned automatically using DHCP.

The port for data communication is preset to 8000. The port can be changed in the **Expert** → **Communication** → **Ethernet** menu.

The following functions are implemented:

- Data communication with PC software (analysis software, OPC server)
- Web server

The following connections are possible at the same time:

- 1x Port 8000 (OPC server or analysis software)
- 1x Port 8002 (OPC server only)
- 4x Modbus slave TCP
- 5x Web server



Ports can be changed!

As soon as the maximum number of connections has been reached, new connection attempts are blocked until an existing connection has been terminated.

8.1.3 Modbus RTU/TCP slave

The device can be connected to a Modbus system via RS485 or Ethernet interface. The general settings for the Ethernet connection are made in the **Setup** → **Advanced setup** → **Communication** → **Ethernet** menu. Configuration for Modbus communication is done in the **Setup** → **Advanced setup** → **Communication** → **Modbus slave** menu. Up to 12 analog inputs and 6 digital inputs can be transmitted via Modbus and stored in the device.

Menu position	RTU (RS485)	Ethernet
Device address:	1 to 247	IP address manual or automatic
Baud rate:	9600/19200/38400/57600/115200	-
Parity:	Even/Odd/ None	-
Stop bits:	1/2	-
Port:	-	502

Transfer of values

The actual Modbus TCP protocol is located between layer 5 to 6 in the ISO/OSI model.



To transfer a value, 3 registers of 2 bytes each (2-byte status + 4-byte float) or 5 registers of 2 bytes each (2-byte status + 8-byte double) are used.

 More detailed information about Modbus is provided in the supplementary documentation.

9 Commissioning

9.1 Function check

Make sure that all post-connection checks have been carried out before putting your device into operation:


- "Post-installation check" checklist .→  11
- "Post-connection check" checklist .→  21

9.2 Switching on the measuring device

Once the operating voltage is applied, the display lights up and the device is ready for operation.

If you are commissioning the device for the first time, program the setup as described in the following sections of the Operating Instructions.

If you are commissioning a device that is already configured or preset, the device starts measuring immediately as defined in the settings. The values of the channels currently activated are shown on the display.

 Remove the protective film from the display as this would otherwise affect the readability of the display.



9.3 Setting the operating language

Factory setting: English or ordered local language.

Calling the main menu, configuring the operating language:

1. Press the navigator
2. The main menu appears on the display with the "Sprache/Language" option
3. Change the default language setting: press the navigator, turn it to select the preferred language and press the navigator again to accept the setting
4. Use "Back" or "ESC" to quit the main menu

The operating language has been changed.

 Use the  "Back" function, which can be found at the bottom of each menu/submenu, to move up a level in the menu structure.

To quit the menu immediately and return to the measured value display, press and hold "Back" (>3 sec.). The changes made are accepted and saved.

9.4 Configuring the measuring device (Setup menu)

Access to the setup is enabled when the device leaves the factory and can be locked in various ways e.g. by entering a 4-digit access code or via role-based password protection.

When locked, basic settings can be checked but not changed. You can also use a PC to commission or configure your device.

Device configuration options:

- Setup directly at the device
- Setup via SD card or USB stick by transferring the parameters stored on it
- Setup via Web server using Ethernet

9.4.1 Step-by-step: to the first measured value

Procedure and necessary settings:

1. Check the date/time in the main menu under **"Setup"** and set it if necessary
2. Make settings for the interfaces and communication in the main menu under **"Setup -> Advanced setup -> Communication"**
3. Create universal or digital inputs in the main menu under **"Setup -> Advanced setup -> Inputs -> Universal inputs/Digital inputs": Add input: select "Universal input x" or "Digital input x"** with which the input signal should be detected. Then select the newly created input and configure it
4. Activate relays or analog outputs (optional) in the main menu under **"Setup -> Advanced setup -> Outputs"**
5. Assign activated inputs to a group in the main menu under **"Setup -> Advanced setup -> Application -> Signal groups -> Group x"**
6. Use "Back" or "ESC" to quit the main menu. The changes made are accepted and saved

The device is in the measured value display mode and displays the measured values.

9.4.2 Step-by-step: set or delete the limit values

Procedure for setting limit values:

1. Open the limit values in the main menu under **"Setup -> Advanced setup -> Application -> Limits"**
2. Add a limit value: select **"Yes"**
3. Select and configure **"Limit value x"**
4. Use "Back" or "ESC" to quit the main menu. The changes made are accepted and saved

The device is in the measured value display mode and displays the measured values.

Procedure for deleting limit values:


1. Open the limit values in the main menu under **"Setup -> Advanced setup -> Application -> Limits"**
2. Delete a limit value: select **"Yes"**
3. Select the limit value to be deleted from the list
4. Use "Back" or "ESC" to quit the main menu. The changes made are accepted and saved



The device is in the measured value display mode and displays the measured values.

9.4.3 Setup directly at the device

You can access the main menu by pressing the Navigator during operation. Turn the Navigator to navigate through the available menus. When the desired menu is displayed, press the Navigator to open the menu.

In the "Setup" menu and in the "Advanced setup" submenu, you will find the **most important** settings for the device:

Parameters		Possible settings	Description
Change date/time		UTC time zone dd.mm.yyyy hh:mm:ss	Change the date and time
Advanced setup			Advanced settings for the device e.g. system settings, inputs, outputs, communication, application etc.
	System		Basic settings that are needed to operate the device, (e.g. date/ time, security, memory management, messages, etc.)
	Inputs		Settings for analog and digital inputs
	Outputs		Settings only required if outputs (e.g. relays or analog outputs) are to be used
	Communication		Settings required if the USB, RS232/RS485 or Ethernet interface of the device is to be used (PC operation, serial data export, modem operation, etc.)  The different interfaces (USB, RS232/RS485, Ethernet) can be operated in parallel. However, simultaneous use of the RS232 and RS485 interface is not possible.
	Application		Configure various application-specific settings (e.g. group settings, limit values, etc.)

 A detailed overview of all the operating parameters is provided in the appendix at the end of the Operating Instructions. →  77

9.4.4 Setup via SD card or USB stick


An existing device configuration ("Setup data" *.DEH) from another Data Manager can be uploaded directly to the device.

Import new setup directly at the device: The function used to load the setup data can be found in the main menu under "Operation -> SD card (or USB stick) -> Load setup" -> Select directory -> Next".

9.4.5 Setup via Web server

To configure the device via the Web server, connect the device via Ethernet to your PC.

Please observe the information and communication settings for Ethernet and the Web server under . →  30

 To configure the device via a Web server, you must have Administrator or Service access. ID and password administration is performed in the main menu under "Setup -> Advanced setup -> Communication -> Ethernet -> Configuration Web server -> Authentication".

Default value for ID: admin; Password: admin

Note: The password should be changed during commissioning!

Establishing a connection and setup

Procedure for setting up a connection:

1. Connect the device to the PC via Ethernet
2. Start the browser at the PC; open the Web server for the device by entering the IP address: http://<ip-address> Note: Leading zeros in IP addresses must not be entered (e.g. enter 192.168.1.11 instead of 192.168.001.011)

3. Enter ID and password, and confirm each by clicking "OK"
4. The Web server shows the instantaneous value display of the device. Click **"Menu -> Setup -> Advanced setup"** in the Web server function bar
5. Starting configuration


Continue with device configuration in accordance with the Operating Instructions for the device. The complete Setup menu i.e. all of the parameters listed in the Operating Instructions, can also be found on the Web server. After configuration, accept the setup with **"Save settings"**.

 Procedure to establish a direct connection via Ethernet (point-to-point connection):
→  37


NOTICE

Undefined switching of outputs and relays

► During configuration using a Web server, the device may assume undefined statuses! This may result in the undefined switching of outputs and relays.


 An existing device configuration ("Setup data" *.DEH) can be uploaded directly to the device via the Web server.

Procedure for uploading a new setup via the Web server:


1. Make the connection to the device with the Web server →  33
2. Click **"Data management -> Import device settings"** in the Web server function bar
3. Select the setup file and press **"OK"** to confirm
4. The file is transferred, checked and accepted
5. Once the device settings have been accepted, information to this effect is displayed in the Web server

9.5 Advanced settings (Expert menu)



You can access the main menu by pressing the Navigator during operation. Turn the Navigator to navigate to the **"Expert"** menu. Press the Navigator to open the menu.

 The Expert menu is protected by the code **"0000"**. If an access code is set up under **"Setup -> Advanced setup -> System -> Security -> Protected by -> Access code"**, this must be entered here.


The **"Expert"** menu contains **all** of the device settings:

Parameters	Possible settings	Description
Direct access	000000-000	Direct access to parameters (fast access)
System		Basic settings that are needed to operate the device, (e.g. date/ time, security, memory management, messages, etc.)
Inputs		Settings for analog and digital inputs
Outputs		Settings only required if outputs (e.g. relays or analog outputs) are to be used
Communication		Settings required if the USB, RS232/RS485 or Ethernet interface of the device is to be used (PC operation, serial data export, modem operation, etc.)  The different interfaces (USB, RS232/RS485, Ethernet) can be operated in parallel. However, simultaneous use of the RS232 and RS485 interface is not possible.

Parameters	Possible settings	Description
Application		Configure various application-specific settings (e.g. group settings, limit values, etc.)
Diagnosis		Device information and service functions for a swift device check

 A detailed overview of all the operating parameters is provided in the appendix at the end of the Operating Instructions. →  77

9.6 Configuration management

 You can save the setup data ("Configuration") to an SD card or a USB stick, or save them to a PC drive via the Web server. This allows additional devices to be configured very easily using the same settings.

Save setup: The function used to save the setup files can be found in the main menu under "Operation -> SD card (or USB stick) -> Save setup".


CAUTION


If the SD card or USB stick are removed directly:

Risk of data loss on SD card or USB stick.

- ▶ To remove the SD card or the USB stick, always select "Operation -> SD card (or USB stick) -> Remove safely" in the main menu!

Procedure for saving a setup via the Web server:

1. Make the connection to the device with the Web server →  33
2. Click "Data management -> Save device settings" in the Web server function bar
3. Select the setup file
4. Transfer the file
5. Verify and accept
6. Once the device settings have been accepted, information to this effect is displayed in the Web server

 The function for saving the setup data must be enabled at the device for the Web server under "Setup -> Advanced setup -> Communication-> Ethernet -> Web server settings; Setup -> Yes".

9.7 Simulation

Various functions/signals can be simulated for test purposes here.

NOTICE

Selecting simulation: Simulation of the relays and the WebDAV client can be found in the main menu under "Diagnostics -> Simulation". The simulation of the measured values can be found in the main menu under "Expert -> Diagnostics -> Simulation". Only the simulated values are recorded during simulation. The simulation is recorded in the event logbook.

- ▶ Do not start simulation if measured value recording must not be interrupted!

9.8 Protecting settings from unauthorized access

After configuration, the setup should be protected against unauthorized access. The following options are available:

- Protection per control input
- Protection via release code
- Protection via user roles

In order to change any parameter, the correct code must first be entered or the device must be unlocked using the control input.

Setup lock via control input: The settings for the control input can be found in the main menu under "**Setup -> Advanced setup -> Inputs -> Digital inputs -> Digital input X -> Function: Control input; Action: Lock setup**".



It is preferable to lock the setup using a control input.

Setting up an access code: The settings for the access code can be found in the main menu under "**Setup -> Advanced setup -> System -> Security -> Protected by -> Access code**". Factory setting: "open access", i.e. modifications can always be made.



Make a note of the code and store in a safe place.

Setting up user roles: The settings for the user roles (operator, admin and service) are provided in the main menu under "**Setup -> Advanced setup -> System -> Security -> Protected by -> User roles**". Factory setting: "open access", i.e. modifications can always be made.



The passwords should be changed during commissioning.

Make a note of the code and store in a safe place.

10 Operation

The "Operation" menu is geared towards the tasks and activities of the operator. It contains all the parameters that are needed in ongoing operation. Historical values and analyses, for example, can be displayed in the "Operation" menu and display settings can be made. Any settings made for the onsite display have no effect on the measurement section or the configured device parameters.

The unit's simple control system and the integrated help function enables you to perform operation for many applications without the need for hard copy operating instructions.

10.1 Displaying and modifying current Ethernet settings

To establish communication with the device via Ethernet, the following settings must be known or modified where necessary:

Display IP/MAC address (only if DHCP is enabled): The device's IP or MAC address can be found in the main menu under "**Diagnostics -> Device information -> Ethernet**".

Display/change Ethernet settings: The device's Ethernet settings can be found in the main menu under "**Setup -> Advanced setup -> Communication -> Ethernet**".


Procedure to establish a direct connection via Ethernet (point-to-point connection):

1. Configure the PC (depends on operating system): e.g. IP address: 192.168.1.1; subnet mask: 255.255.255.0; gateway: 192.168.1.1
2. Disable DHCP on the device
3. Make communication settings on the device: e.g. IP address: 192.168.1.2; subnet mask: 255.255.255.0; gateway: 192.168.1.1



A crossover cable is not required.


10.2 Reading the device locking status

If setup is locked via a control input, a padlock symbol  appears on the top right of the screen. The setup must first be unlocked via the control input before device parameters can be edited.

Setup lock via control input: The settings for the control input can be found in the main menu under "**Setup -> Advanced setup -> Inputs -> Digital inputs -> Digital input X -> Function: Control input; Action: Lock setup**".

If setup is locked via the access code, all the operating parameters can be displayed, and can also be edited as soon as the access code is entered.

10.3 Reading measured values

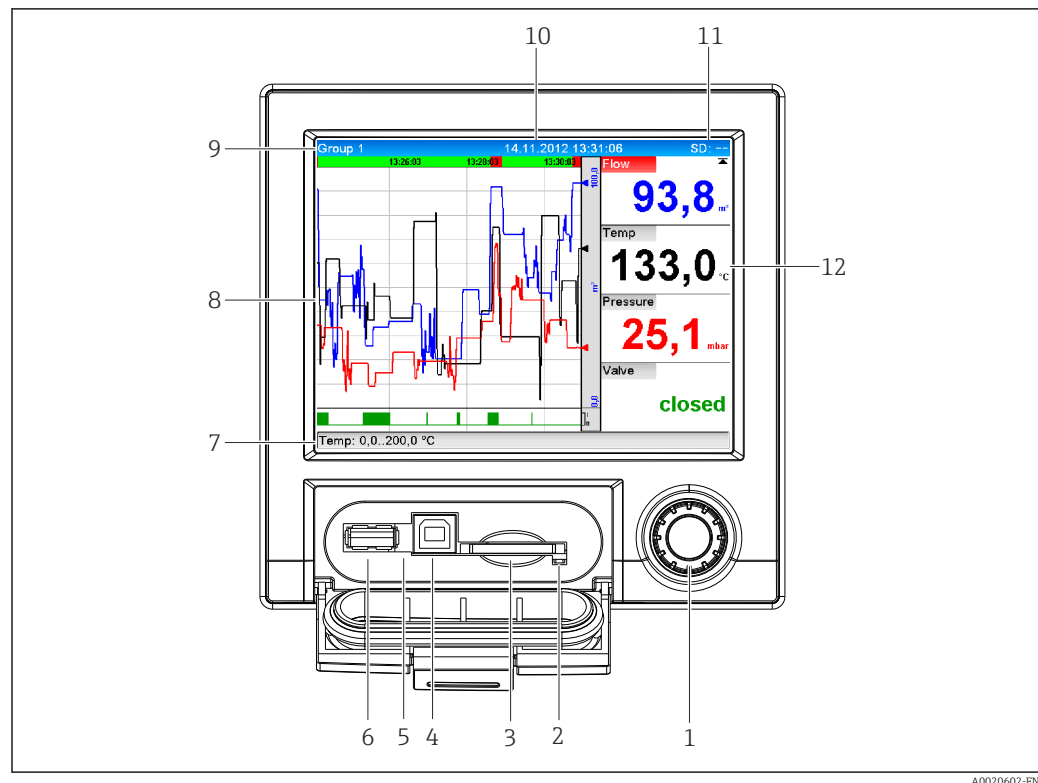

A0020602-EN

8 Front of device with open flap

- 1 Navigator: press briefly to open the main menu and confirm messages (=Enter); press for longer to open the online help
- 2 Orange LED for read/write access to the SD card
- 3 Slot for SD card
- 4 USB-B socket "Function"
- 5 Green LED lit: power supply present
- 6 USB-A socket "Host"
- 7 Status bar
- 8 Area for measured value display (e.g. curve display)
- 9 Header: group name, analysis type
- 10 Header: current date/time
- 11 Header: alternating display indicating the percentage space on the SD card or USB stick that has already been used. Status symbols are also displayed in alternation with the memory information
- 12 Display of current measured values and the status in the event of an error/alarm condition. In the case of counters, the type of counter is displayed as a symbol

i An overview of all the symbols and icons is provided in the operating options section. → 26

i If a measuring point has limit value status, the corresponding channel identifier is highlighted in red (quick detection of limit value violations). During a limit value violation and device operation, the acquisition of measured values continues uninterrupted.

i Information on how to rectify a problem in the event of an error is provided in the "Troubleshooting" section. → 49

10.4 Reading measured values via the Web server

A Web server is integrated into the device. If the device is connected via Ethernet, it is possible to display the measured values via the Internet using a Web server.


Activation of Web server in the menu **Setup** → **Advanced setup** → **Communication** → **Ethernet** → **Web server** → **Yes** or the menu **Expert** → **Communication** → **Ethernet** → **Web server** → **Yes**.


The Web server port is preset to 80. The port can be changed in the **Expert** → **Communication** → **Ethernet** menu.

 If the network is protected by a firewall, the port may need to be activated.

The following web browsers are supported:

- MS Internet Explorer 11 and higher
- Mozilla Firefox 15 and higher
- Opera 12.x and higher
- Google Chrome 23.x and higher

 In order to use the full functionality of the Web server, it is recommended that the latest version of the browser is used.

 To configure the device via a Web server, you must have Administrator or Service access. Prior to accessing the Web server, create an ID and password in the main menu under "**Setup** -> **Advanced setup** -> **Communication** -> **Ethernet** -> **Configuration Web server** -> **Authentication**".


Default value for ID: admin; Password: admin

Note: The password should be changed during commissioning!

Data can be exported via the Web server in HTML or XML format.

10.4.1 Access to the Web server via HTTP (HTML)

When using an Internet browser, you just need to enter the address **http://<ip-address>** to have the HTML view displayed in the browser.


 Note: Leading zeros in IP addresses must not be entered (e.g. enter 192.168.1.11 instead of 192.168.001.011).


As on the display, you can alternate between the display groups in the Web server. The measured values are automatically updated. In addition to the measured values, status and limit value flags are displayed.

10.4.2 Access to the Web server via XML

XML format is available in addition to HTML format and contains all measured values of a group. This can be integrated into additional systems as the user wishes.

The XML file is available in ISO-8859-1 (Latin-1) coding at **http://<ip-address>/values.xml** (alternative: **http://<ip-address>/xml**). However, some special characters, such as the Euro symbol, cannot be displayed in this file. Texts such as digital statuses are not transmitted.

 Note: Leading zeros in IP addresses must not be entered (e.g. enter 192.168.1.11 instead of 192.168.001.011).

 The decimal separator is always displayed as a point in the XML file. Also, all times are given in UTC. The time difference in minutes is noted in the following entry.

The structure of the channel values for the XML file is explained as follows:

```
<device      id="AI01IV" tag="Channel 1" type="INTRN">
      <v1>50.0</v1>
      <u1>%</u1>
      <vtime>20130506-140903</vtime>
      <vstslvl1>0</vstslvl1>
      <hlsts1>L</hlsts1>
      <param><min>0.0</min><max>100.0</max><hh></hh><hi></hi><lo></lo><ll></ll></
      param>
      <tag>Channel 1</tag>
      <man>Manufacturer</man>
</device>
```

Day	Description
device id	Unique ID of measuring point
tag	Channel ident.
type	Data type (INTRN, MODBUS)
v1	Measured value of channel as a decimal value
u1	Unit of measured value
vtime	Date and time
vstslvl1	Error level 0 = OK, 1 = warning, 2 = error
hlsts1	Limit value status H = upper limit value, L = lower limit value, LH = upper and lower limit value violation
param min max hh hi lo ll	Parameter (optional) Lower zoom Upper zoom Upper alarm limit Upper warning limit Lower warning limit Lower alarm limit
MAN	Manufacturer

10.4.3 Remote control via the Web server

Remote control of the device is possible via Web server. In the Web server, remote control can be found under **"Measured values -> Remote control"**. Here the display shown corresponds directly to the device display. The device is operated using buttons below this display. The interval for refreshing the display can be set in the **"Refresh"** menu.

Enabling remote control on the device:

1. In the menu **Setup -> Advanced setup -> Communication -> Ethernet -> Configuration Web server -> Remote control**, select **"Yes"** or under
2. **Expert -> Communication -> Ethernet -> Configuration Web server -> Remote control**, select **"Yes"**.

10.5 Data analysis and visualization using analysis software provided

The analysis software offers centralized data management with visualization for recorded data.

This enables all measuring point data to be completely archived, e.g.:

- Measured values
- Diagnostic events
- Protocols

The analysis software stores data in an SQL database. The database can be operated locally or in a network (client/server). You can install and use the free PostgreSQL™ database provided on the DVD.

 For details, see the Operating Instructions on the analysis software DVD provided.

10.5.1 Structure/layout of a CSV file

The CSV files are comprised as follows:

File name (=serial number + file number + configuration number + date and start time + data type)	Description	Coding
H4000504428 0000000279 0000000185 2013-11-07 11-18-00 GROUP01.csv	Contains all the measured values of the group from the starting time indicated in the file name. An individual CSV file is created for each group.	ANSI
H4000504428 0000000279 0000000185 2013-11-07 11-30-00 ANALYSIS01.csv	Contains the signal analyses of the active channels from the starting time indicated in the file name. An individual CSV file is created for every analysis (01 - 04).	ANSI
H4000504428 0000000279 2013-11-07 11-18-34 EVENTS.csv	Contains the event log from the starting time indicated in the file name.	Unicode UTF-8 (see the notes in the following section)

Meaning of the values under "Status" and "Limit" when analyzing a group:

Status of the channel:

- 0: OK
- 1: Open circuit
- 2: Input signal too high
- 3: Input signal too low
- 4: Invalid measured value
- 6: Error value, i.e. not the calculated value (for mathematics if an input variable is invalid)
- 7: Sensor/input error
- Bit 8: Not assigned
- Bit 9: Alarm storage
- Bit 10..13: Not assigned
- Bit 14: Use error value
- Bit 15: Not assigned

General status:

- 1: High speed storage is active
- 2: Additional hour for summer/normal time changeover

Note: A combination of 1 and 2 is also possible.

Status of the limit value ("Limit"):

0: OK, no limit value has been violated

Bit 0: Lower limit value

Bit 1: Upper limit value

Bit 2: Increasing gradient

Bit 4: Decreasing gradient

Note: A combination is also possible.

10.5.2 Importing UTF-8-encoded CSV files into spreadsheets


You might encounter problems displaying information if importing UTF-8-encoded CSV files directly into more recent versions of MS Excel™ (2007 and higher).

Importing CSV data from the event logbook ("Events") into MS Excel™ (version 2007 and higher):

1. Select the menu **"Data -> Get external data - From text"**
2. Select the CSV file
3. Follow the instructions in the wizard
4. Select file origin **"Unicode UTF-8"**


10.6 Change group

The group to be displayed can be changed in the main menu under **"Operation -> Change group"**. Alternatively, the group can also be changed by turning the navigator.

 Only the **active** groups are displayed here. The settings for this can be made in the main menu under **"Setup -> Advanced setup -> Application -> Signal groups -> Group x"**.

10.7 Block keyboard/navigator

Local operation can be blocked in the main menu under **"Operation -> Lock operation"** to prevent unintended or incorrect operation (e.g. when cleaning the device).

 The device is unlocked by pressing the navigator or the OK operating key for 3 s. When using an external keyboard, the device is unlocked with the key combination "Ctrl-Alt-Del".

10.8 Log on/log out

Log onto the device, or log out the user currently logged on.

 Only in the case of role-based access protection.


10.9 SD card/USB stick

10.9.1 Function of SD card or USB stick

Without affecting the internal memory, data packets are copied block by block (min. 1 x daily, midnight) to the SD card. Tests are also made to determine whether the data have been written without any errors. Once a new SD card is inserted, the device starts saving the data automatically after 5 minutes. The use of a USB stick is only recommended if

certain data ranges should be copied. The USB stick is **not** used for storing the measured values continuously, i.e. this is **not** automatically updated.

Data are saved in two different folders on the storage media depending on the storage method:


- All data are copied cyclically to the **rec_data_<Device name>** folder if a data packet is complete or the function **"Update"** is activated under **"Operation -> SD card/USB stick -> Update"**.
 - The data for the time range selected under **"Operation -> SD card/USB stick -> Save measured value"** is copied to the **rng_data_<Device name>** folder. The copying of this data has no effect on the saving of data in the **rec_data_<Device name>** folder.
-  Only use new, formatted SD cards recommended by the manufacturer (see "Accessories"). → 60
- During normal operation, the used memory space on the SD card or USB stick is displayed on the top right of the display ("SD: xx%" or "USB: xx%"). Dashes "-" on this display mean that no SD card is inserted.
 - The SD card must not be write-protected.
 - Prior to removing the external data carrier, select **"Operation -> SD card/USB stick -> Update"**. The current data block is closed and saved to the external data carrier. This ensures that all current data (until the last save) is included on it.
 - Depending on the configuration of the unit (see **"Setup -> Advanced setup -> System -> Ext. memory -> Warning at"**), an acknowledgeable message on the display informs you that the external data carrier has to be changed before the data carrier is 100 % full.
 - The device keeps track of which data have already been copied onto the SD card or USB stick. Should you ever forget to change the data carrier in time (or if no SD card has been inserted), the new external data carrier is filled with the missing data from the internal memory - as long as the data are still available there. As measured value acquisition/recording is assigned the highest priority, it may take several minutes in this case for the data to be copied from the internal memory to the SD card or USB stick.

10.9.2 Functions relating to the SD card or USB stick

You can find functions to save measured data and device settings on a removable medium in the main menu under **"Operation -> SD card/USB stick"** (only if an SD card or USB stick is provided).


Remove safely:

All internal access is terminated to ensure safe removal of the storage medium from the device. You are notified when it is safe to remove the data storage medium. If the SD card is not removed, the device automatically starts to save data to the storage medium again after 5 minutes.

-  Only remove the data storage medium using this function; otherwise data may be lost!

Update:

Measurement data not yet saved on the storage medium are now saved. Please be patient! Measured value acquisition is running in parallel and has top priority.

-  Data from several devices can be saved onto one storage medium.

Save measured values:

A user-definable time range can be saved on the data storage medium.

Load setup:

Loads device settings (setup) from the storage medium onto the device.

Save setup:

All device settings (setup) are saved onto the storage medium. They can be archived or used for other devices.

- **Save setup as RTF:**

Saves the setup on the storage medium in a readable format as an RTF file (rich text format).


The RTF file can be opened and formatted using suitable word processing software (e.g. MS Word), allowing printouts to be easily made.

- **Screenshot:**

Save the current measured value display as a bitmap on the SD card or USB stick.

- **Update firmware:**

Loads new firmware onto the device. Only visible if a firmware file is provided on the SD card or USB stick.

 **Caution:** The device will restart. Save the setup and measured values beforehand on the SD card or USB stick.

Import SSL certificate:

Uploads an SSL certificate (X.509) to the device. Certificates are needed so that an SSL connection can be established in order to send encrypted e-mails, for instance. The following are supported: DER, CER and CRT (binary or Base64-encoded).

Visible only if there is an SSL certificate on the SD card or USB stick.

10.9.3 Notes on e-mail encryption

In addition to sending unencrypted e-mails, it is also possible to send encrypted e-mails via SSL (TLS). To do so, you can choose either of two ways:

- **By SMTPS:** fully encrypted via port 465.

The complete connection runs over TLS. The port is 465 by default but this value can be changed in the Setup.

- **Via port 25 or 587 using STARTTLS.**


With this method the device first establishes a plain SMTP connection via port 25 and continues this connection following agreement and switchover to encryption.

The required process can be selected as follows: "**Setup -> Advanced setup -> Application -> E-mail -> Server requires SSL**" or under "**Expert -> Application -> E-mail -> Server requires SSL**".


Only TLS V1.0 (= SSL 3.1) or TLS V1.1 is supported. Older standards are not supported. The encryption method is automatically agreed with the counterparty.

A certificate must be installed in order to be able to send encrypted e-mails. These certificates can be obtained from your e-mail service provider. The following file formats are supported:

- *.CER: DER- or Base64-encoded certificate
- *.CRT: DER- or Base64-encoded certificate
- *.DER: DER-encoded certificate

 The file name of the certificate may only contain the following characters: a..z, A..Z, 0..9, +, -, _, #, (,), !

To establish an SSL connection, the device automatically selects the certificate that best suits the counterparty from all the installed certificates. An error message is displayed if the device does not have any of the required certificates.

 When e-mail encryption is enabled, no e-mails can be sent if a valid certificate is not available or if the certificate has expired.

10.9.4 Notes on WebDAV encryption

In addition to sending unencrypted data to the WebDAV server, it is also possible to send encrypted data via SSL (TLS). All data are sent in encrypted format via the SSL port of the external WebDAV server.

The complete connection runs over TLS. The port is 80 by default but this value can be changed in the Setup. The procedure to be used can be selected as follows: "**Setup ->**

Advanced setup -> Application -> WebDAV Client -> Enable -> Yes (SSL)" or under "Expert -> Application -> WebDAV Client -> Enable -> Yes (SSL)".


Only TLS V1.0 (= SSL 3.1) or TLS V1.1 is supported. Older standards are not supported. The encryption method is automatically agreed with the counterparty.

A certificate must be installed in order to be able to send encrypted data. These certificates can be obtained from your WebDAV server service provider. The following file formats are supported:

- *.CER: DER- or Base64-encoded certificate
- *.CRT: DER- or Base64-encoded certificate
- *.DER: DER-encoded certificate

 The file name of the certificate may only contain the following characters: a..z, A..Z, 0..9, +, -, _, #, (,), !

To establish an SSL connection, the device automatically selects the certificate that best suits the counterparty from all the installed certificates. An error message is displayed if the device does not have any of the required certificates.


 When WebDAV Client encryption is enabled, no data can be sent if a valid certificate is not available or if the certificate has expired.

10.9.5 SSL certificates

Importing an SSL certificate


Installing a certificate via SD card or USB stick:

1. Copy a certificate on a PC to an SD card or USB stick
2. Insert the SD card or USB stick into the device
3. In the main menu, select **"Operation -> SD card (or USB stick) -> Import SSL certificate"**
4. Select the required certificate from the list and follow the dialog on the display

 Up to 3 certificates can be installed simultaneously.

Verifying the installed SSL certificates

The installed certificates can be verified in the main menu under **"Diagnostics -> Device information -> SSL certificates"**. The most important certificate information, e.g. subject key ID, organization and validity period, are displayed in the parameter list.

 Not all fields are completed on all the certificates. This is because the parties issuing the certificates do not make all the information available.

Deleting an SSL certificate

In the main menu select the certificate to be deleted under **"Diagnostics -> Device information -> SSL certificate -> Certificate"** and select **"Yes"** under **"Delete certificate"**.


 
Period of validity of certificates

Certificates are valid for a defined period (valid from ... to ...). The device checks the certificate validity once a day or each time the device is rebooted. 14 days before the certificate expires the device notifies the user daily (by e-mail, screen display, entry in event log) that the certificate will expire shortly.

If the certificate has expired the alarm relay switches (if activated) and a message is displayed on the screen. An entry is also made in the event log. If a certificate is deleted all errors related to this certificate are reset.

10.10 Showing measured values history

You can scroll through the saved measured values in the main menu under "**Operation -> History**". Turn the navigator clockwise or counterclockwise to scroll back and forth between the measured value curves. Press the navigator to make other settings for the historical data display (e.g. scroll speed, time scaling or change display mode) or to quit the historical data function.

 The gray header in the display and the  symbol in the status bar indicate that historical values are being displayed. In the instantaneous value display the color of the header is blue.

10.10.1 Historical data: changing a group

It is possible to change the group to be displayed in the historical data under "**Operation -> Change group**" in the data history.

10.10.2 Historical data: Scroll speed


Specify how fast the display should scroll when the navigator is turned.

It is possible to change the scroll speed in the historical data under "**Operation -> Scroll speed**" in the data history.

The scroll speed can also be set via the soft key with the arrow symbol < or >. The speed can be changed from < (slow) to <<<< (fast) by pressing the soft key repeatedly.

10.10.3 Historical data: Time scaling

It is possible to scale the displayed time range in the historical data under "**Operation -> Time scaling**" in the data history.

 Notes:

- "1:1" option: Every measured value is displayed.
- "1:n" option: Only every nth measured value is displayed (increases the displayed time range).
- No interpolation is performed, nor is the mean value determined.
- If the value for "n" is large, this can result in extended loading times.
- Time scaling does not affect the process for storing the measured value.
- The time range displayed per screen for the currently set time scaling is also displayed in the menu.

10.10.4 Historical data: Time range displayed

The displayed time range is shown in the historical data under "**Operation -> Time range displayed**" in the data history. This tells the user which time range is displayed per screen in the standard memory cycle.

 If the alarm cycle differs from the standard memory cycle, this is not taken into consideration.


10.10.5 Historical data: Screenshot

The current measured value display can be saved as a bitmap to an SD card or USB stick in the historical data under "**Operation -> Screenshot**".

10.10.6 Historical data: Change the display mode

It is possible to change the display mode of the active group in the historical data under "**Operation -> Change display mode**" in the data history.

The following display modes are possible: Curve, Curve in ranges, Waterfall, Waterfall in ranges.

 The various display modes have no influence on the signal recording.

10.11 Signal analysis

The analyses saved in the device are displayed in the main menu under "**Operation -> Signal analysis**".

- **Actual intermediate analysis:**
Here, you can have the current (i.e. not yet completed) intermediate analysis displayed.
- **Actual day:**
Here, you can have the current (i.e. not yet completed) daily analysis displayed.
- **Actual month:**
Here, you can have the current (i.e. not yet completed) monthly analysis displayed.
- **Actual year:**
Here, you can have the current (i.e. not yet completed) annual analysis displayed.
- **Search:**
Search and display of analyses. Select which analyses should be searched for/displayed: Intermediate analysis, Daily analysis, Monthly analysis, Annual analysis.

10.12 Search in trace

In the main menu, the internal memory can be searched for events or times under "**Operation -> Search in trace**".


Search for events: The event logbook forms the basis for searches for events. To search more easily for certain events (e.g. setup changes), the search filter can be used to select and search for the desired events. In the standard all events are shown. In the event list displayed, it is possible to select an event and go directly to this point in the history (if still in the memory).

Search for time: When searching for a time in the past, the user can enter a date and a time to specify when the system should start displaying historical data. Once the date/time have been entered and confirmed, the display goes to the selected time in the active group.

10.13 Changing the display mode

The display mode of the active group can be changed in the main menu under "**Operation -> Change display mode**".

The following display modes are possible: Curve, Curve in ranges, Waterfall, Waterfall in ranges, Bargraph and Digital display.

 The various display modes have no influence on the signal recording.


10.14 Adjusting the brightness of the display


You can adjust the brightness of the display in the main menu under "**Operation -> Adjust brightness**":

Parameters	Possible settings	Description
Adjust brightness	0-100 Default: 80	Sets the brightness of the display

10.15 Limit values

It is possible to change the limit values during operation in the main menu under **"Operation -> Limits"**.

 
 This function must be enabled beforehand in the main menu under **"Expert -> Application -> Limits-> Change set points: Outside of setup also"**.


Detailed description of the limit values: →  147

10.16 WebDAV Client

The function of the WebDAV client is to transmit recorded data automatically to a connected WebDAV server (e.g. NAS drive). The recorded data are sent to the connected WebDAV server cyclically every 15 minutes. The generated files correspond to the files that are automatically saved to the SD card.

The client is configured via **"Setup -> Advanced setup -> Application -> WebDAV Client"**. The settings under **"Setup -> Advanced setup -> System -> External memory"** are also used for this, with the exception of the SD card settings (memory build-up, warning, and relay). The memory is regarded as a stack memory.


Detailed description of the parameters: →  163


 Note: With the WebDAV client, the data are transmitted to the WebDAV server in accordance with the selection made in the .CSV or "protected format".

10.16.1 Access to the WebDAV server via HTTP (HTML)

Address entry in browser: **http://<ip-address>/webdav**

The data are updated cyclically every 15 minutes. The data are automatically updated each time a user logs in.

 Note: Leading zeros in IP addresses must not be entered (e.g. enter 192.168.1.11 instead of 192.168.001.011).

 Administrator or service authentication is required. ID and password administration is performed in the main menu under **"Setup -> Advanced setup -> Communication -> Ethernet -> Configuration Web server -> Authentication"**.

Default value for ID: admin; Password: admin

Note: The password should be changed during commissioning!

Note: For devices with a stainless steel front and touchscreen, the data are always made available in "protected format" via the WebDAV server.

11 Diagnostics and troubleshooting

To help you troubleshoot, the following section is designed to provide an overview of possible causes of errors and initial remedial measures.

11.1 General troubleshooting



Danger! Electric voltage!

- ▶ Do not operate the device in an open condition for error diagnosis!

Display	Cause	Solution
No measured value display; no LED lit	No supply voltage connected	Check the supply voltage of the device
	Supply voltage is applied; device or power unit is defective	The power unit or the device must be replaced
Diagnostic message is displayed	The list of diagnostic messages is provided in the following section	

i Dead pixels: Dead pixels refer to pixels on LCD and TFT displays that are defective due to the technology or manufacturing techniques used. The TFT display used can have up to 10 dead pixels (Class III as per ISO 13406-2). These dead pixels do not entitle the user to a warranty claim.

11.2 Troubleshooting

The Diagnostics menu is used for the analysis of the device functions and offers comprehensive assistance during troubleshooting. Always proceed as follows to locate the cause of the device errors or alarms.

General troubleshooting procedure

1. Open diagnosis list: lists the 30 most recent diagnostic messages. This can be used to determine which errors are currently present and whether an error has repeatedly occurred.
2. Diagnosis of current measured values: Verify the input signals by displaying the current measured values or the scaled measuring ranges. To verify calculations, call up calculated auxiliary variables if necessary.
3. Most errors can be rectified by performing steps 1 and 2. If the error persists follow the troubleshooting instructions in the following sections.
4. If this does not rectify the problem, contact the Service Department. Any time you contact the Service Department please always have the error number and the information in the main menu under **"Diagnostics -> Device information"** (program name, serial number etc.) ready.

11.2.1 Device error/alarm relay

One relay can be used as an alarm relay. If the device detects a system error (e.g. hardware defect) or a malfunction (e.g. cable open circuit), the selected output/relay switches. The alarm relay is assigned in the main menu under **"Setup -> Advanced setup -> System -> Fault switching -> Relay x"**. **Factory setting: Relay 1.**

This "alarm relay" switches if "F"-type or "S"-type errors occur, i.e. "M"-type or "C"-type errors do not switch the alarm relay.

11.3 Diagnostic information on the local display

The diagnostic message consists of a diagnostic code and a message text.

The diagnostic code consists of the error category as per Namur NE 107 and the message number.

Error category (letter in front of the message number)

- **F = Failure.** A malfunction has been detected.
The measured value of the affected channel is no longer reliable. The cause of the malfunction is to be found in the measuring point. Any control system connected should be set to manual mode. An alarm relay can be assigned to this error category in the Advanced setup.
- **M = Maintenance required.** Action must be taken as soon as possible.
The device still measures correctly. Immediate measures are not necessary. However, proper maintenance efforts would prevent a possible malfunction in the future.
- **S = Out of specification.** The measuring point is being operated outside specifications. Operation is still possible. However, you run the risk of increased wear, shorter operating life or lower measurement accuracy. The cause of the problem is to be found outside the measuring point.
- **C = Function check.** The device is in Service mode.

Diagnostic code	Message text	Description	Remedy
F100	Sensor/input error	Sensor/input error	Check connections and parameters
F101	Open circuit	Cable open circuit	Check connections
F105	Invalid value!	Measured value is invalid (when calculating --> NAN)	Check connections and process variables
F201	Device fault	Device error	Contact the Service Department
F261	Error: RAM	No access to RAM	Contact the Service Department
F261	Error: Flash	No access to flash	Contact the Service Department
F261	Error: SRAM	No access to SRAM	Contact the Service Department
F261	Analog card x out of order!	Hardware defect detected	Contact the Service Department, replace card
F261	Power supply out of order!	Hardware defect detected	Contact the Service Department, replace power unit
M284	Firmware update	Firmware has been updated	No action required. Message can be acknowledged
F301	Error: Cannot load setup	Setup defective	Switch the device off and then on again, re-configure, contact the Service Department if necessary
M302	Setup restored from backup	Setup has been loaded from backup	Check setup
F303	Error: Device data	Device data defective	Contact the Service Department
M304	Backup: Device data	Device data defective. However it was possible to continue working with the backup data	Check settings (e.g. serial number)
F307	Error: Customer preset value defective	Customer preset value defective	
F309	Error: Date/time is not set	Invalid date/time (e.g. internal battery is empty)	Device was switched off too long. The date/time must be set again. Battery might need to be replaced (contact the Service Department)
F310	Error: Cannot save setup	The setup could not be saved	Contact the Service Department
F311	Error: Device data	The device data could not be saved	Contact the Service Department
F312	Error: Calibration data defective	The calibration data could not be saved	Contact the Service Department
F312	Analog card x is not calibrated!	Analog card x is not calibrated! The device works with default values, i.e. the measured values could possibly be inaccurate under certain circumstances	Contact the Service Department

Diagnostic code	Message text	Description	Remedy
M313	SRAM has been defragmented	SRAM was defragmented after firmware update	No action required. Message can be acknowledged
F314	Error: Option code	Activation code is no longer correct (incorrect serial number/program name). Option has been switched off and setup preset has been performed	Enter new code
M315	No IP address could be obtained from the DHCP server!	No IP address could be obtained from the DHCP server!	Check the network cable
M316	Invalid MAC address!	No or incorrect MAC address	Contact the Service Department
M317	Battery voltage < 2 V. Please replace battery!		Battery needs to be replaced (contact the Service Department)
F348	Firmware cannot be updated: <ul style="list-style-type: none"> ■ Checksum incorrect ■ Firmware incompatible! 	Firmware update has been aborted because the firmware file is damaged or is not compatible with this device	Contact the Service Department
M350	Measured value acquisition interrupted for calibration/ service work Measured value acquisition restarted	Measured value acquisition was interrupted/ reactivated for service/maintenance purposes. Causes include: <ul style="list-style-type: none"> ■ Calibration of inputs/outputs ■ Firmware update 	No action required. Message can be acknowledged
M351	The device will restart	The device is rebooting. Causes include: <ul style="list-style-type: none"> ■ Following a firmware update ■ Change of device options 	No action required. Message can be acknowledged
F431	Error:Calibration	Calibration data missing	Contact the Service Department
M502	Device is locked!	Device is locked! The message appears when an attempt is made to update the firmware, for example	Check lock per digital channel
F510	Setup was corrected.	The device detected that the configuration was no longer correct. All the parameters affected have been reset to the factory default settings. Possible causes: <ul style="list-style-type: none"> ■ Input cards have been removed or replaced by another type ■ An input card is no longer working correctly A firmware update has caused compatibility problems Note: This error message appears each time the device is restarted until at least one change has been made to the configuration	Please check the configuration of the device. If hardware has been replaced, no other action is needed (recommendation: change the operating language so that the error message no longer appears after the next restart)
M520	SMTP: Name could not be resolved (DNS)! SNTP: Name could not be resolved (DNS)!	Problem with name resolution (DNS). SMTP: e-mail SNTP: time synchronization	Check the corresponding settings
M528	Setup is not compatible with this firmware!	An attempt was made to load a setup which is not compatible with this firmware (e.g. another device type)	Check whether the correct file has been selected
M530	Cannot copy setup	An error occurred when a setup was loaded from an SD card or USB stick An error occurred when a setup was saved to an SD card or USB stick	Replace the SD card or USB stick Setup file defective?
S901	Input signal too low	Input signal too low	Check Connections and parameters. Check connected sensor/transmitter
S902	Input signal too high	Input signal too high	Check Connections and parameters. Check connected sensor/transmitter

Diagnostic code	Message text	Description	Remedy
M905	Set point x	Set point x has been violated	Note: Error number only occurs if e-mails are sent
M906	End limit value x	Set point x no longer violated	Note: Error number only occurs if e-mails are sent
F910	This software is not enabled for this device	The current firmware is not enabled for this hardware	Contact the Service Department
M920	Too many messages that need to be acknowledged!	There are too many messages that need to be acknowledged. Another message could not be added	Acknowledge messages
M921	SD card x% full.	External memory is full	Replace SD card
M922	No cyclic measurement transfer	The instantaneous values were not read out for a set time	
M922	No cyclic transfer	The device was not read out via fieldbus for a configurable time	Check the communication of the fieldbus. Check PLC
M924	Error accessing SD card! Error accessing USB stick! SD card is not or wrong formatted! USB stick is not or wrong formatted!	Impossible to access the removable data medium. Causes include: Memory is larger than 32 GB Invalid format (only FAT or FAT32 are permitted)	Check/replace removable data medium
M925	SD card is write-protected!	SD card is write-protected!	Remove write protection
M927	Insufficient space free on data storage medium!	An attempt was made to save to the SD card or USB stick (setup, screenshot, etc.), but not enough free memory space is available	Use other SD card/USB stick. Delete files that are no longer needed from the SD card/USB stick
M927	Insufficient space free on data storage medium!	An attempt was made to save the data onto the WebDAV server, but there was not sufficient memory available	Use other WebDAV server. Delete files no longer required from the WebDAV server
F929	File is damaged!	The file that should be loaded is damaged/ invalid (e.g. wrong checksum). This message can occur in connection with the following actions, for instance: Loading setup from SD card/USB stick Firmware update Loading process-related graphics	Create file again, use other storage medium
M940	E-mail could not be sent! (x)	E-mail could not be sent! Optional: Error code (x) from server: e.g.: <ul style="list-style-type: none"> ■ 451: Requested action aborted: local processing error ■ 554: Transaction failed. Possible reason: e-mail was not sent as suspected of being SPAM ■ 1: No free buffer ■ 2: No receiver specified 	Check settings/network connection <ul style="list-style-type: none"> ■ 451: Try again ■ 554: Use other e-mail provider
M941	No connection to the e-mail server!	A connection to the e-mail server could not be established because: <ul style="list-style-type: none"> ■ The entered connection data are incorrect ■ The connection has been disconnected 	Check settings/network connection
M942	SMTP: fault occurred (x).	An error occurred when sending an e-mail. x= error code: 0: SMTP was switched off when the mail was being sent 3: TCP/IP connection was denied 4: TCP/IP connection error 5: SMTP server denied 6: Error during authentication 7: Connection unexpectedly lost 8: Server responded with error code 9: Timeout 10: Internal protocol error	Check settings/network connection

Diagnostic code	Message text	Description	Remedy
M944	SMTP: authentication failed!		Check settings/network connection
M945	SNTP: Time was not synchronized!	Time could not be synchronized via SNTP. Possible reasons: <ul style="list-style-type: none"> ▪ SNTP server temporarily unavailable ▪ Settings not correct 	<ul style="list-style-type: none"> ▪ Check settings ▪ Check whether the error occurs often. If it does, choose another time server
M945	SNTP server 1 not responding. Try server 2	Time could not be synchronized via SNTP. Possible reasons: <ul style="list-style-type: none"> ▪ SNTP server temporarily unavailable ▪ Settings not correct 	<ul style="list-style-type: none"> ▪ Check settings ▪ Check whether the error occurs often. If it does, choose another time server
M946	Screenshot could not be saved (x)!	Screenshot could not be created. Possible causes (x): 0: Error when writing 1: Insufficient free space 2: Bitmap could not be created 3: SD card/USB stick not available or ready	Check/replace the SD card or USB stick
M947	Modem could not be initialized! Please check the cable and modem	The connected modem could not be initialized by the device	Please check the cable and modem
M950	Unable to load SSL certificate	Unable to load SSL certificate. Cause: <ul style="list-style-type: none"> ▪ Invalid file format ▪ File is damaged 	<ul style="list-style-type: none"> ▪ Use a certificate with a valid file format ▪ Import certificate to device again
F951	SSL certificate '...' has expired!	Certificates have an expiry date, i.e. they must be renewed from time to time	Install a new certificate
M952	SSL certificate '...' expires on ...!	The device warns the user shortly before the certificate expires	Install a new certificate
M953	x certificates have already been installed. First of all, please delete certificates that are no longer required	The device can manage max. 3 X.509 certificates	Delete a certificate that is already installed and no longer required
M954	SSL certificate not found: key ID = ...	Unable to establish SSL connection as a suitable certificate is not installed	Install a suitable certificate
M955	SSL connection denied!		
M980	No connection to the WebDAV server	A connection to the WebDAV server could not be established because the entered connection data are incorrect or the connection has been disconnected	Check settings/network connection
M981	WebDAV: Authentication failed		Check settings
M982	WebDAV: Directory or file could not be created	Set directory path does not exist	Create a directory manually in the WebDAV server
M983	WebDAV: Fault	An unassigned error has occurred. The error is displayed in English	

11.4 Pending, current diagnostic messages

The diagnostic message that is currently pending, the last diagnostic message and the last device restart are displayed in the main menu under "**Diagnostics -> Actual diagnostics**", "**Diagnostics -> Last diagnostics**" or under "**Diagnostics -> Last restart**".

11.5 Diagnosis list

The last 30 diagnostic messages are displayed in the main menu under "**Diagnostics -> Diagnosis list**" (messages with Fxxx, Sxxx or Mxxx-type error numbers).

The diagnosis list is designed as a ring memory, i.e. when the memory is full the oldest messages are automatically overwritten (no message).

The following information is saved:

- Error number
- Error text
- Date/time

11.6 Event logbook

Events such as limit value violations and power failures are displayed in chronological order in the event logbook. It can be found in the main menu under **"Diagnostics -> Event logbook"**. Individual events can be selected and details displayed.

11.7 Device information

Important device information, e.g. serial number, firmware version, device name, device options, memory information, SSL certificates etc. are displayed in the main menu under **"Diagnostics -> Device information"**.

 For further information open the online help on the device.

11.8 Diagnostics of measured values

Displays the current measured values in the main menu under **"Diagnostics -> Measured values"**. The input signals can be verified here by displaying the scaled and calculated values. To verify calculations, call up calculated auxiliary variables if necessary.

11.9 Diagnostics of outputs

Displays the current states of the outputs (relays 1-6) in the main menu under **"Diagnostics -> Outputs"**.

11.10 Simulation

Various functions/signals can be simulated for test purposes here.

NOTICE


Selecting simulation: Simulation of the relays can be found in the main menu under "Diagnostics -> Simulation". The simulation of the measured values can be found in the main menu under "Expert -> Diagnostics -> Simulation".

Only the simulated values are recorded during simulation. The simulation is recorded in the event logbook.

- ▶ Do not start simulation if measured value recording must not be interrupted!


11.10.1 E-mail test

A test mail can be sent to the selected recipient in the main menu under **"Diagnostics -> Simulation -> E-mail"**.

 At least one e-mail address must be set beforehand. A message is provided on the device to confirm if the email was sent or not.


11.10.2 Test WebDAV Client

A test file can be sent to the selected WebDAV server in the main menu under **"Diagnostics -> Simulation -> WebDAV Client"**.

 The settings for the WebDAV server to be addressed must be set beforehand under **"Setup -> Advanced setup -> Application -> WebDAV Client"**.

11.10.3 Test time synchronization/SNTP

Time synchronization (SNTP setting) can be tested in the main menu under **"Diagnostics -> Simulation -> SNTP"**.

 SNTP must be enabled beforehand in the main menu under **"Setup -> Advanced setup -> System -> Date/time set-up -> SNTP"**.


Note: The test can take some time. A message is provided on the device once the test has finished.

11.10.4 Relay test


The relay selected under **"Diagnostics -> Simulation -> Relay x"** can be switched manually in the main menu.

11.11 Initialize modem

Initializes the modem connected (to automatically answer calls). The modem must support the complete AT command syntax.

 **▪** Set the baud rate in the main menu under **"Setup -> Advanced setup -> Communication -> Serial interface"** and select **"RS232"** as the interface type.


▪ Connect the modem to the RS232 interface of the device. For this purpose only use the modem cable, which is available as an accessory.

 A GSM modem can only be initialized if a SIM card is inserted and the PIN is entered or the prompt to enter the PIN has been disabled.

11.12 Resetting the measuring device

The device can be reset to the as-delivered state with a PRESET. This function should only be performed by a service technician.

The function can be found in the main menu under **"Expert -> System -> PRESET"**.

 PRESET is only visible under "Expert" once the service code has been entered.

Procedure for resetting the measuring device

The PRESET returns all parameters to the factory default setup! The internal memory content is deleted!

- ▶ Save the setup and measured values on the USB stick or SD card. Then perform a PRESET.
 - ↳ The device is reset to the factory default settings.

11.13 Firmware history

Overview of unit software history:

Unit software version/date	Software modification	Analysis software version	Version of OPC server	Operating Instructions
V01.00.00/07.2013	Original software	V01.01.02.10 and higher	V5.00.02.04 and higher	BA012090/09/01.13
V01.01.00/02.2014	E-mail via SSL; added functionality	V01.02.00.08 and higher	V5.00.02.04 and higher	BA012090/09/02.14
V02.00.00/08.2015	Added functionality	V01.03.00.00 and higher	V5.00.03.00 and higher	BA012090/09/03.15
V2.01.00/04.2016	Extended functionality/bug fixes	V01.03.01.00 and higher	V5.00.03.00 and higher	BA012090/09/04.16
V2.01.05/11.2016	Extended functionality/bug fixes	V01.03.01.01 and higher	V5.00.03.00 and higher	BA012090/09/05.16


12 Maintenance

No special maintenance work is required for the device.

12.1 Updating the device software ("firmware")

Updating the device software ("firmware") via USB stick, SD card or Web server.


You can access this function in the main menu under **"Operation -> SD card or USB stick -> Update firmware"**.

 It is advisable to save the setup and measured values beforehand on the SD card or USB stick.

The device software ("firmware") should only be updated by a service technician.

The device will restart following the firmware update.

12.2 Instructions for enabling a software option

Various device options can be enabled via an activation code. Available device options can be ordered as an accessory. →  60 Once you place your order, you receive instructions on how to activate the option and a code which you must enter under **"Main menu -> Expert -> System -> Device options -> Activation code"**.

12.3 Cleaning

The front of the housing can be cleaned with a clean dry or damp cloth.


13 Repairs

13.1 General notes

- i** Repairs that are not described in these Operating Instructions must only be carried out directly by the manufacturer or by the service department.
- i** If ordering spare parts, please specify the serial number of the unit! Installation instructions are included with the spare part.

13.2 Spare parts

- i** If necessary, contact your supplier.

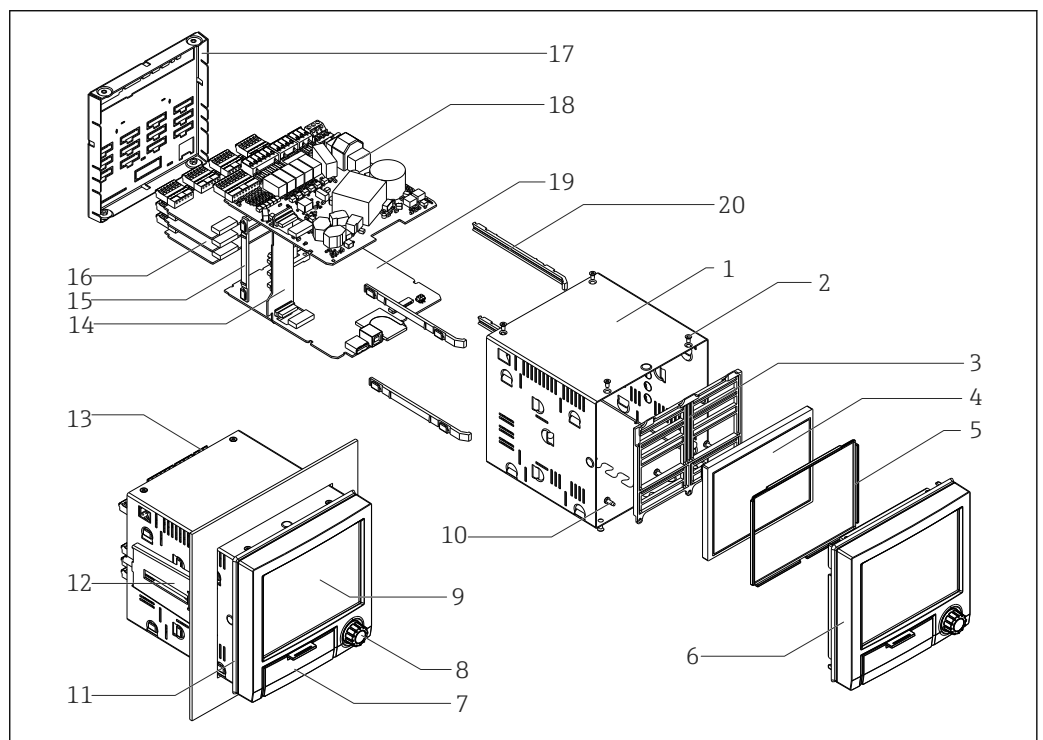

A0019863

9 Spare parts diagram

Spare parts list:


Item No.	Description
1	Casing
12	Jack screw short (1 piece)
11	Seal housing
16	Analog card (4 channels)
4	Display TFT 5.7" VGA + flat ribbon connector
3, 5, 10	Spare parts kit, display
6, 7, 8	Front neutral + navigator + flat ribbon connector
15, 20	Spare parts kit, card holder
14	Motherboard
18	Power supply 24 V AC/DC


Item No.	Description
18	Power supply 100-230 V AC (+/-10%)
17	Rear panel analog inputs
13	Terminals:
	Terminal plug-in 3-pole for mains connection "N L PE" RM5.08 - orange color
	Terminal plug-in 3-pole FKC2.5/3-ST-5.08 for relay 1 (changeover)
	Terminal plug-in 4-pole FKC2.5/4-ST-5.08 for relay 2+3
	Terminal plug-in 6-pole FKC2.5/6-ST-5.08 for relay 4+5+6
	Terminal plug-in 9-pole FMC1.5/9-ST-3.5 for digital inputs
	Terminal plug-in 6-pole FMC1.5/6-ST-3.5 for analog input

Product structure for CPU with software

Item No.	Description
19	CPU + software
	Operating language: Universal
	Software: Standard Mathematics
	Communication Ethernet RJ45 + USB RS232/485 + Ethernet RJ45 + USB Modbus TCP slave + Ethernet RJ45 + USB Modbus RTU/TCP slave + RS232/485 + Ethernet RJ45 + USB


Product structure for option retrofit

Item No.	Description
	Option retrofit (please enter the serial number)
	Software: Standard Mathematics option
	Option:
	Standard Modbus TCP slave (Modbus RTU only with RS485)  An RS485 interface is required for Modbus RTU. If there is no RS485 in the device, a new CPU board must be ordered.

 The software option can be enabled directly on the device. After ordering you will receive instructions and a code that you must enter.

13.3 Return



The device must be packed in protective packaging if it is being returned for repair, for example. The original packaging offers the best protection. Repairs may only be performed by your supplier's service organization.

 When sending for repair, please enclose a note with a description of the error and the application.

13.4 Disposal

The device contains electronic components and must therefore be disposed of as electronic waste. Please pay particular attention to the national disposal regulations in your country.

14 Accessories

-  Always quote the serial number of the device when ordering accessories! Installation instructions are provided with the accessory!
-  Contact the supplier where necessary.


14.1 Device-specific accessories

Description
"Industrial Grade" SD card, industry standard, 1GB
Analysis software with SQL database support (1 x workstation license, Professional version)
OPC server software (full version on CD)

Description
Accessories for RXU10 data manager
Designation: Cable set RS232 for connection to PC or modem USB - RS232 converter Cable USB-A - USB-B, 1.8 m (5.9 ft)

Description


Field housing IP65

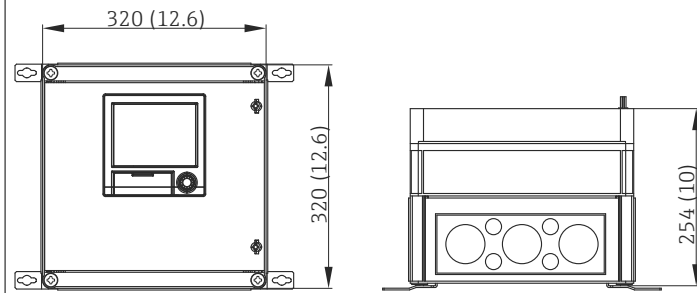

A0021773

10 Dimensions in mm (in)

Desktop housing, cable with Schuko plug
 Desktop housing, cable with US plug
 Desktop housing, cable with Swiss plug

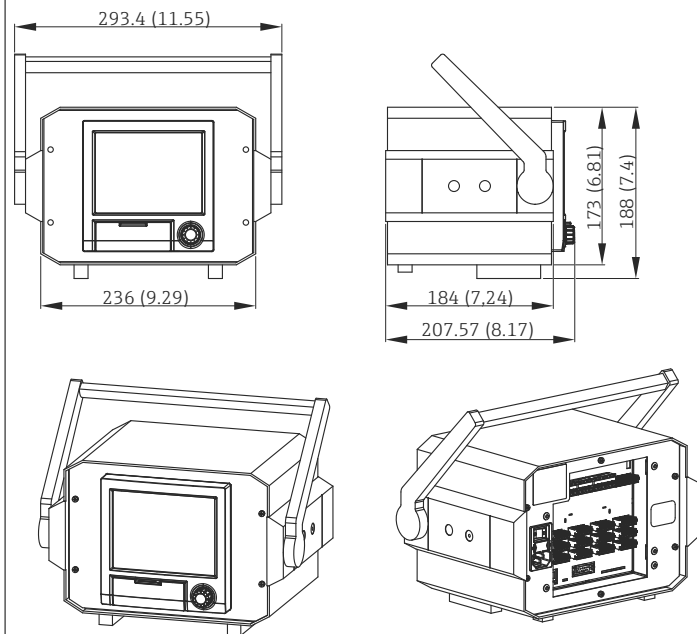

A0021772

11 Dimensions in mm (in)

15 Technical data

15.1 Function and system design


Measuring principle

Electronic acquisition, display, recording, analysis, remote transmission and archiving of analog and digital input signals.

The device is intended for installation in a panel or cabinet. There is also the option of operating it in a desktop housing or field housing.

Measuring system

Multichannel data recording system with multicolored TFT display (145 mm / 5.7" screen size), galvanically isolated universal inputs (U, I, TC, RTD, pulse, frequency), digital inputs, transmitter power supply, limit relay, communication interfaces (USB, Ethernet, optional RS232/485), optionally available with Modbus protocol, 128 MB internal memory, external SD card and USB stick. An Essential Version of the reporting software is included for SQL-supported data analysis at the PC.

 The number of inputs available in the basic device can be individually increased using a maximum of 3 plug-in cards. The device supplies power directly to connected two-wire transmitters. The device is configured and operated via the navigator (jog/shuttle dial), via the integrated web server and a PC, or via an external keyboard. Online help facilitates local operation.

Reliability

Dependability

Depending on the device version, the MTBF is between 52 years and 24 years (calculated based on SN29500 standard at 40°C)

Serviceability

Battery-backed time and data memory. It is advisable to have the backup battery replaced by a service technician after 10 years.

Real time clock (RTC)

- Configurable summer/normal time changeover
- Battery buffer. It is advisable to have the backup battery replaced by a service technician after 10 years.
- Drift: <10 min./year
- Time synchronization possible via SNTP or via digital input.

Standard diagnostic functions as per Namur NE 107

The diagnostic code is made up of the error category as per Namur NE 107 and the message number.

- Cable open circuit, short-circuit
- Incorrect wiring
- Internal device errors
- Overrange/underrange detection
- Ambient temperature out-of-range detection

Device error/alarm relay

One relay can be used as an alarm relay. If the device detects a system error (e.g. hardware defect) or a malfunction (e.g. cable open circuit), the selected output/relay switches.

This "alarm relay" switches if "F"-type errors occur (F = failure), i.e. "M"-type errors (M= Maintenance required) do not switch the alarm relay.

Safety

The tamper-proof recorded data are saved and can be transferred to an external SQL database for archiving in a way that prevents subsequent manipulation.

15.2 Input

Measured values	Number of analog universal inputs
	Standard version without universal inputs. Optional input cards (slot 1-3) with 4 universal inputs (4/8/12) each.
	Number of digital inputs
	6 digital inputs
	Number of mathematics channels
	4 mathematics channels (optional). Mathematics functions can be freely edited via a formula editor. Integration of calculated values e.g. for totalization.
	Number of limit values
	30 limit values (individual channel assignment)
	Function of analog universal inputs
	You are free to choose between the following measured variables for each universal input: U, I, RTD, TC, pulse input or frequency input. Integration of input variable for totalization e.g. flow rate (m ³ /h) in quantity (m ³).
	Calculated values
	The values of the universal inputs can be used to perform calculations in the mathematics channels.

Measuring range of analog universal inputs According to IEC 60873-1: An additional display error of ±1 digit is permitted for every measured value.

User-definable measuring ranges per universal input of the multifunction card:

Measured variable	Measuring range	Maximum measured error of measuring range (oMR), temperature drift	Input resistance
Current (I)	0 to 20 mA; 0 to 20 mA quadratic 0 to 5 mA 4 to 20 mA; 4 to 20 mA quadratic ±20 mA Overrange: up to 22 mA or -22 mA	±0.1% oMR Temperature drift: ±0.01%/K oMR	Load: 50 Ω ±1 Ω
Voltage (U) >1 V	0 to 10 V; 0 to 10 V quadratic 0 to 5 V 1 to 5 V; 1 to 5 V quadratic ±10 V ±30 V	±0.1% oMR Temperature drift: ±0.01%/K oMR	≥1 MΩ
Voltage (U) ≤1 V	0 to 1 V; 0 to 1 V quadratic ±1 V ±150 mV	±0.1% oMR Temperature drift: ±0.01%/K oMR	≥2.5 MΩ

Measured variable	Measuring range	Maximum measured error of measuring range (oMR), temperature drift	Input resistance
Resistance thermometer (RTD)	Pt100: -200 to 850 °C (-328 to 1562 °F) (IEC 60751:2008, α=0.00385) Pt100: -200 to 510 °C (-328 to 950 °F) (JIS C 1604:1984, α=0.003916) Pt100: -200 to 850 °C (-328 to 1562 °F) (GOST 6651-94, α=0.00391) Pt500: -200 to 850 °C (-328 to 1562 °F) (IEC 60751:2008, α=0.00385) Pt500: -200 to 510 °C (-328 to 950 °F) (JIS C 1604:1984, α=0.003916) Pt1000: -200 to 600 °C (-328 to 1112 °F) (IEC 60751:2008, α=0.00385) Pt1000: -200 to 510 °C (-328 to 950 °F) (JIS C 1604:1984, α=0.003916)	4-wire: ±0.1% oMR 3-wire: ±(0.1% oMR + 0.8 K) 2-wire: ±(0.1% oMR + 1.5 K) Temperature drift: ±0.01%/K oMR	
	Cu50: -50 to 200 °C (-58 to 392 °F) (GOST 6651-94, α=4260) Cu50: -200 to 200 °C (-328 to 392 °F) (GOST 6651-94, α=4280) Pt50: -200 to 1100 °C (-328 to 2012 °F) (GOST 6651-94, α=0.00391) Cu100: -200 to 200 °C (-328 to 392 °F) (GOST 6651-94, α=4280)	4-wire: ±0.2% oMR 3-wire: ±(0.2% oMR + 0.8 K) 2-wire: ±(0.2% oMR + 1.5 K) Temperature drift: ±0.02%/K oMR	
	Pt46: -200 to 1100 °C (-328 to 2012 °F) (GOST 6651-94, α=0.00391) Cu53: -200 to 200 °C (-328 to 392 °F) (GOST 6651-94, α=4280)	4-wire: ±0.3% oMR 3-wire: ±(0.3% oMR + 0.8 K) 2-wire: ±(0.3% oMR + 1.5 K) Temperature drift: ±0.02%/K oMR	
Thermocouples (TC)	Type J (Fe-CuNi): -210 to 1200 °C (-346 to 2192 °F) (IEC 60584:2013) Type K (NiCr-Ni): -270 to 1300 °C (-454 to 2372 °F) (IEC 60584:2013) Type L (NiCr-CuNi): -200 to 800 °C (-328 to 1472 °F) (GOST R8.585:2001) Type L (Fe-CuNi): -200 to 900 °C (-328 to 1652 °F) (DIN 43710-1985) Type N (NiCrSi-NiSi): -270 to 1300 °C (-454 to 2372 °F) (IEC 60584:2013) Type T (Cu-CuNi): -270 to 400 °C (-454 to 752 °F) (IEC 60584:2013)	±0.1% oMR from -100 °C (-148 °F) ±0.1% oMR from -130 °C (-202 °F) ±0.1% oMR from -100 °C (-148 °F) ±0.1% oMR from -100 °C (-148 °F) ±0.1% oMR from -100 °C (-148 °F) ±0.1% oMR from -200 °C (-328 °F) Temperature drift: ±0.01%/K oMR	≥1 MΩ
	Type A (W5Re-W20Re): 0 to 2500 °C (32 to 4532 °F) (ASTME 988-96) Type B (Pt30Rh-Pt6Rh): 42 to 1820 °C (107.6 to 3308 °F) (IEC 60584:2013) Type C (W5Re-W26Re): 0 to 2315 °C (32 to 4199 °F) (ASTME 988-96) Type D (W3Re-W25Re): 0 to 2315 °C (32 to 4199 °F) (ASTME 988-96) Type R (Pt13Rh-Pt): -50 to 1768 °C (-58 to 3214 °F) (IEC 60584:2013) Type S (Pt10Rh-Pt): -50 to 1768 °C (-58 to 3214 °F) (IEC 60584:2013)	±0.15% oMR from 500 °C (932 °F) ±0.15% oMR from 600 °C (1112 °F) ±0.15% oMR from 500 °C (932 °F) ±0.15% oMR from 500 °C (932 °F) ±0.15% oMR from 100 °C (212 °F) ±0.15% oMR from 100 °C (212 °F) Temperature drift: ±0.01%/K oMR	≥1 MΩ
Pulse input (I) ¹⁾	Min. Pulse length 40 µs, max. 12.5 kHz; 0 to 7 mA = LOW; 13 to 20 mA = HIGH		Load: 50 Ω ±1 Ω
Frequency input (I) ¹⁾	0 to 10 kHz, overrange: up to 12.5 kHz; 0 to 7 mA = LOW; 13 to 20 mA = HIGH	±0.02% @ f <100 Hz of reading ±0.01% @ f ≥100 Hz of reading Temperature drift: 0.01% of measured value over the entire temperature range	

1) If a universal input is used as a frequency or pulse input, a series resistor must be used in series connection with the voltage source. Example: 1.2 kΩ series resistor at 24 V

Maximum load of inputs

Limit values for input voltage and current as well as cable open circuit detection/line influence/temperature compensation:

Measured variable	Limit values (steady-state, without destroying input)	Cable open circuit detection/line influence/temperature compensation
Current (I)	Maximum permitted input voltage: 2.5 V Maximum permitted input current: 50 mA	4 to 20 mA range with disengageable cable open circuit monitoring to NAMUR NE43. The following error ranges apply when NE43 is switched on: ≤3.8 mA: underrange ≥20.5 mA: overrange ≤ 3.6 mA or ≥ 21.0 mA: open circuit (display shows: - - - -)
Pulse, frequency (I)	Maximum permitted input voltage: 2.5 V Maximum permitted input current: 50 mA	No cable open circuit monitoring
Voltage (U) >1 V	Maximum permitted input voltage: 35 V	1 to 5 V range with disengageable cable open circuit monitoring: <0.8 V or >5.2 V: cable open circuit (display shows: - - - -)
Voltage (U) ≤1 V	Maximum permitted input voltage: 24 V	

Measured variable	Limit values (steady-state, without destroying input)	Cable open circuit detection/line influence/temperature compensation
Resistance thermometer (RTD)	Measuring current: ≤ 1 mA	Maximum barrier resistance (or line resistance): 4-wire: max. 200 Ω ; 3-wire: max. 40 Ω Maximum influence of barrier resistance (or line resistance) for Pt100, Pt500 and Pt1000: 4-wire: 2 ppm/ Ω , 3-wire: 20 ppm/ Ω Maximum influence of barrier resistance (or line resistance) for Pt46, Pt50, Cu50, Cu53, Cu100 and Cu500: 4-wire: 6 ppm/ Ω , 3-wire: 60 ppm/ Ω Cable open circuit monitoring if any connection is interrupted.
Thermocouples (TC)	Maximum permitted input voltage: 24 V	Influence of line resistance: $< 0.001\%/ \Omega$ Error, internal temperature compensation: ≤ 2 K

Scan rate

Current/voltage/pulse/frequency input: 100 ms per channel

Thermocouples and resistance temperature detector: 1 s per channel

Data storage/save cycle

Selectable save cycle. Choose from: 1s / 2s / 3s / 4s / 5s / 10s / 15s / 20s / 30s / 1min / 2min / 3min / 4min / 5min / 10min / 15min / 30min / 1h

Typical recording duration

Prerequisites for following tables:

- No limit value violation / integration
- Digital input not used
- Signal analysis 1: off, 2: day, 3: month, 4: year
- No active mathematics channels


 Frequent entries in the event log reduce the memory availability!

128 MB internal memory:

Analog inputs	Channels in groups	Storage cycle (weeks, days, hours)				
		5 min	1 min	30 s	10 s	1 s
1	1/0/0/0	668, 4, 14	135, 0, 5	67, 4, 4	22, 3, 20	2, 1, 18
4	4/0/0/0	491, 0, 10	99, 4, 17	49, 6, 12	16, 4, 15	1, 4, 16
8	4/4/0/0	246, 1, 14	49, 6, 1	24, 6, 19	8, 2, 7	0, 5, 20
12	4/4/4/0	164, 2, 4	33, 1, 18	16, 4, 13	5, 3, 21	0, 3, 21

External memory, 1 GB SD card:

Analog inputs	Channels in groups	Storage cycle (weeks, days, hours)				
		5 min	1 min	30 s	10 s	1 s
1	1/0/0/0	12825, 5, 20	2580, 4, 18	1291, 2, 5	430, 4, 14	43, 0, 12
4	4/0/0/0	8672, 5, 12	1749, 6, 13	875, 6, 13	292, 1, 8	29, 1, 14
8	4/4/0/0	4343, 1, 1	875, 1, 17	438, 0, 6	146, 0, 17	14, 4, 7
12	4/4/4/0	2896, 6, 13	583, 3, 21	292, 0, 6	97, 2, 20	9, 5, 4

 The available storage capacity of the internal and external memory can be displayed in the main menu under "**Diagnostics → Device information → Memory information**". The storage capacity depends on the specific device set-up.

Converter resolution

24 bit

Totalization

The interim, daily, monthly and yearly value and the total value can be determined (13-digit, 64 bit).

Analysis

Recording of quantity/operating time (standard function), also a min/max/median analysis within the set time frame.

Digital inputs

Input level	To IEC 61131-2: logical "0" (corresponds to -3 to +5 V), activation with logical "1" (corresponds to +12 to +30 V)
Input frequency	max. 25 Hz
Pulse length	Min. 20 ms (pulse counter)
Pulse length	Min. 100 ms (control input, messages, operating time)
Input current	max. 2 mA
Input voltage	Max. 30 V

Selectable functions

- Functions of the digital input: control input, ON/OFF message, pulse counter (13-digit, 64 bit), operating time, message+operating time, quantity from time, Modbus slave.
- Functions of the control input: start recording, screen saver on, lock setup, time synchronization, limit monitoring on/off, lock keyboard/navigator, start/stop analysis.

15.3 Output

Auxiliary voltage output

The auxiliary voltage output can be used for loop power supply or to control the digital inputs. The auxiliary voltage is short-circuit proof and galvanically isolated.

Output voltage	24 V _{DC} ±15%
Output current	Max. 250 mA

Galvanic isolation

All inputs and outputs are galvanically isolated from each other and designed for the following testing voltages:

	Relay	Digital in	Analog in	Ethernet	RS232/RS485	USB	Auxiliary voltage output
Relay	500 V _{DC}	2 kV _{DC}	2 kV _{DC}	2 kV _{DC}	2 kV _{DC}	2 kV _{DC}	2 kV _{DC}
Digital in	2 kV _{DC}	Galvanically connected	500 V _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}
Analog in	2 kV _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}
Ethernet	2 kV _{DC}	500 V _{DC}	500 V _{DC}	-	500 V _{DC}	500 V _{DC}	500 V _{DC}
RS232/RS485	2 kV _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	-	500 V _{DC}	500 V _{DC}

	Relay	Digital in	Analog in	Ethernet	RS232/RS485	USB	Auxiliary voltage output
USB	2 kV _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	Galvanically connected	500 V _{DC}
Auxiliary voltage output	2 kV _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	500 V _{DC}	-

Relay outputs

A mix of low voltage (230 V) and safety extra low voltage (SELV circuits) is not permitted at the connections of the relay contacts.

Alarm relay

1 alarm relay with changeover contact.

Standard relay

5 relays with NO contact, e.g. for limit value messages (can be configured as NC contact).

Relay switching capacity

- Max. switching capacity: 3 A @ 30 V DC
- Max. switching capacity: 3 A @ 250 V AC
- Min. switching load: 300 mW

Switching cycles

>10⁵

Cable specification

Cable specification, spring terminals

All connections on the rear of the device are designed as pluggable screw or spring terminal blocks with reverse polarity protection. This makes the connection very quick and easy. The spring terminals are unlocked with a slotted screwdriver (size 0).

Please note the following when connecting:

- Wire cross-section, auxiliary voltage output, digital I/O and analog I/O: max. 1.5 mm² (14 AWG) (spring terminals)
- Wire cross-section, mains: max. 2.5 mm² (13 AWG) (screw terminals)
- Wire cross-section, relays: max. 2.5 mm² (13 AWG) (spring terminals)
- Stripping length: 10 mm (0.39 in)



No ferrules must be used when connecting flexible wires to spring terminals.

Shielding and grounding

Optimum electromagnetic compatibility (EMC) can only be guaranteed if the system components and, in particular, the lines - both sensor lines and communication lines - are shielded and the shield forms as complete a cover as possible. A shielded line must be used for sensor lines that are longer than 30 m. A shield coverage of 90% is ideal. In addition, make sure not to cross sensor lines and communication lines when routing them. Connect the shield as often as possible to the reference ground to ensure optimum EMC protection for the different communication protocols and the connected sensors.

To comply with requirements, three different types of shielding are possible:

- Shielding at both ends
- Shielding at one end on the supply side with capacitance termination at the device
- Shielding at one end on the supply side

Experience shows that the best results with regard to EMC are achieved in most cases in installations with one-sided shielding on the supply side (without capacitance termination


at the device). Appropriate internal device wiring measures must be taken to allow unrestricted operation when EMC interference is present. These measures have been taken into account for this device. Operation in the event of disturbance variables as per NAMUR NE21 is thus guaranteed.

Where applicable, national installation regulations and guidelines must be observed during the installation! Where there are large differences in potential between the individual grounding points, only one point of the shielding is connected directly with the reference ground.

i If the shielding of the cable is grounded at more than one point in systems without potential matching, mains frequency equalizing currents can occur. These can damage the signal cable or significantly impact signal transmission. In such cases the shielding of the signal cable is to be grounded on one side only, i.e. it may not be connected to the ground terminal of the housing. The shield that is not connected should be insulated!

15.4 Power supply

Terminal assignment

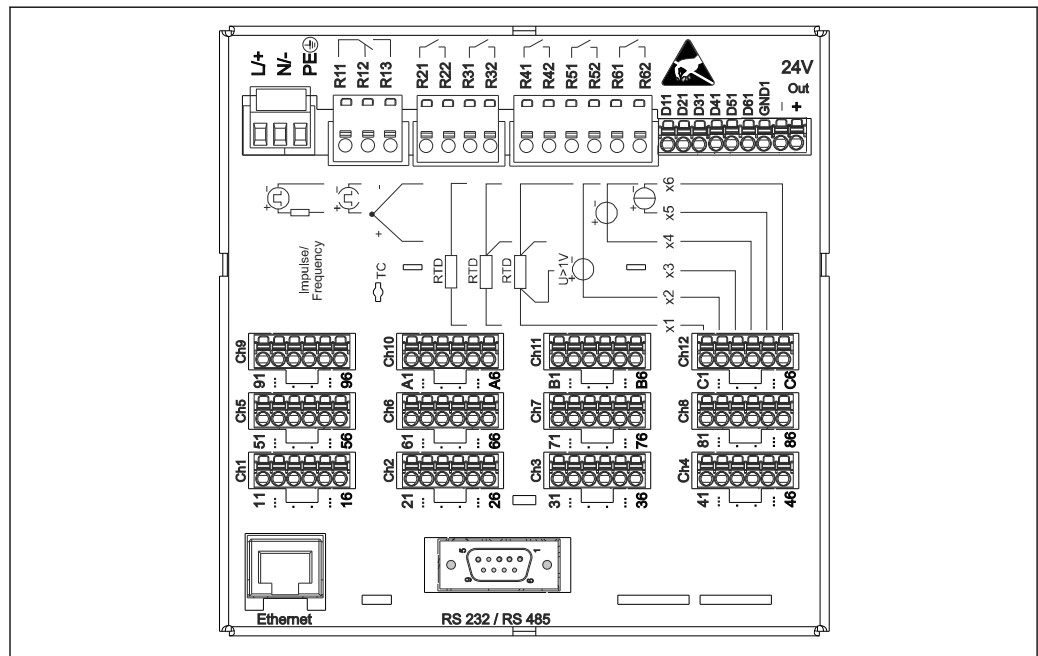

A0019304

12 Terminals on back of device

Supply voltage

- Extra-low voltage power supply unit ± 24 V AC/DC (-10% / +15%) 50/60Hz
- Low voltage power supply unit 100 to 230 V AC ($\pm 10\%$) 50/60Hz

i An overload protection element (rated current ≤ 10 A) is required for the power cable.



Power consumption

- 100 to 230 V: max. 35 VA
- 24 V: max. 24 VA

The power actually consumed depends on the individual operating state and the device version (LPS, USB, brightness of screen, number of channels, etc). The active power here is approx. 3 W to 20 W.

Power supply failure

Battery-backed time and data memory. The device starts automatically following a power failure.

Electrical connection	Details about the electrical connection: →  12
Connector	<ul style="list-style-type: none"> ■ Panel-mounted device: connected to mains via plug-in screw terminals with reverse polarity protection ■ Desktop version (option): connected to mains via IEC connector
Overvoltage protection	To avoid high-energy transients on long signal cables, connect a suitable surge arrester upstream.
Connection data interface, communication	<p>USB ports (standard):</p> <p><i>1 x USB port type A (host)</i></p> <p>A USB 2.0 port is available on a shielded USB A socket at the front of the device. A USB stick, for example, can be connected to this interface as a storage medium. An external keyboard or USB hub may also be connected.</p> <p><i>1 x USB port type B (function)</i></p> <p>A USB 2.0 port is available on a shielded USB B socket at the front of the device. This can be used to connect the device for communication with a laptop, for example.</p> <p>Ethernet interface (standard):</p> <p>Ethernet interface on back, 10/100 Base-T, plug type RJ45. The Ethernet interface can be used to integrate the device via a hub or switch into a PC network (TCP/ IP Ethernet). A standard patch cable (e.g. CAT5E) can be used for the connection. Using DHCP, the device can be fully integrated into an existing network without the need for additional configuration. The device can be accessed from every PC in the network. Normally only the automatic assignment of the IP address must be configured at the client. When the device is started, it can automatically retrieve the IP address, subnet mask and gateway from a DHCP server. If a DHCP is not used, these settings must be made directly in the device (depends on the network to which the device is to be connected). Two Ethernet function LEDs are located on the rear of the device.</p> <p>The following functions are implemented:</p> <ul style="list-style-type: none"> ■ Data communication with PC software (analysis software, OPC server) ■ Web server ■ WebDAV (Web-based Distributed Authoring and Versioning) is an open standard for the provisioning of files via the HTTP protocol. The data saved on the device's SD card can be read out using a PC. A web browser or dedicated WebDAV client can be selected as network drive on the PC for this purpose. <p>Serial RS232/RS485 interface (option):</p> <p>A combined RS232/RS485 connection is available on a shielded SUB D9 socket at the rear of the device. This can be used for data transfer and to connect a modem. For communication via modem, we recommend an industrial modem with a watchdog function.</p> <ul style="list-style-type: none"> ■ The following baud rates are supported: 9600, 19200, 38400, 57600, 115200 ■ Max. cable length with a shielded cable: 2 m (6.6 ft) (RS232), or 1000 m (3281 ft) (RS485) <p> Only one interface can be used at any one time (RS232 or RS485).</p>

15.5 Performance characteristics

Response time	Input	Output	Time [ms]
	Current, voltage, pulse	Relay	≤ 550
	RTD	Relay	≤ 1150
	TC ¹⁾	Relay	≤ 1550
	Cable open circuit detection, current input	Relay	≤ 1150
	Sensor error RTD, TC	Relay	≤ 5000
	Digital input	Relay	≤ 350

1) If internal measuring point temperature compensation is used, otherwise values as for voltage


Reference operating conditions	Reference temperature	25 °C (77 °F) ±5 K
	Warm-up period	120 min.
	Humidity	20 to 60 % rel. humidity

Hysteresis Can be configured for limit values in the setup

Long-term drift As per IEC 61298-2: max. ±0.1%/year (of measuring range)

15.6 Installation

Mounting location and installation dimensions The device is designed for use in a panel in non-hazardous areas.

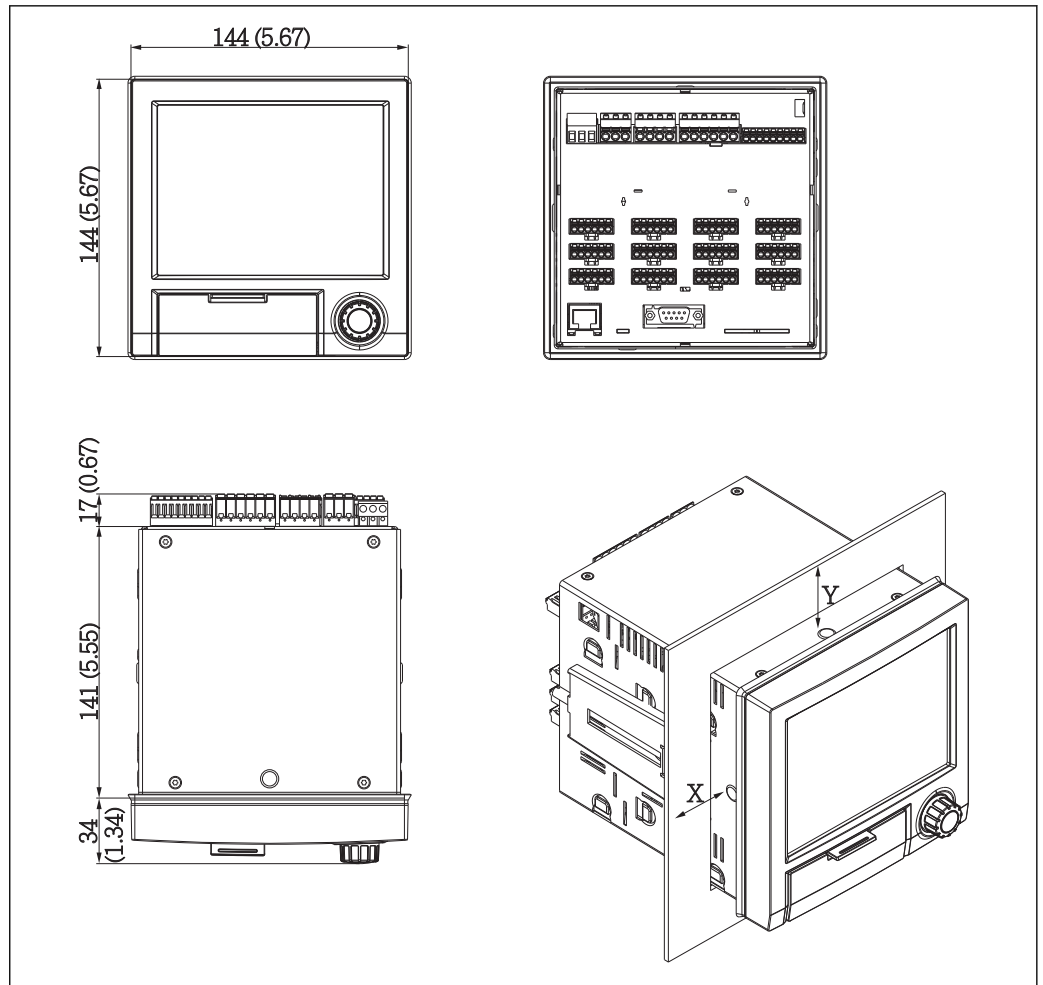

A0019301

13 Panel mounting and dimensions in mm (in)

Please observe the installation depth of approx. 158 mm (6.22 in) for the device incl. terminals and fastening clips.

- Panel cutout: 138 to 139 mm (5.43 to 5.47 in) x 138 to 139 mm (5.43 to 5.47 in)
- Panel strength: 2 to 40 mm (0.08 to 1.58 in)
- Angle of vision: from the midpoint axis of the display, 75° to the left and right, 65° above and below.
- A minimum distance of 15 mm (0.59 in) mm (inch) between the devices must be observed if aligning the devices in the Y-direction (vertically above one another). A minimum distance of 10 mm (0.39 in) mm (inch) between the devices must be observed if aligning the devices in the X-direction (horizontally beside one another).
- Securing to DIN 43 834

Field housing assembly and design (optional)

As an option, the device can be ordered ready-mounted in a field housing with IP65.
Dimensions (B x H x D) approx.: 320 mm (12.6 in) x 320 mm (12.6 in) x 254 mm (10 in)

Desktop housing assembly and design (optional)

As an option, the device can be ordered ready-mounted in a desktop housing.
Dimensions (B x H x D) approx.: 293 mm (11.5 in) x 188 mm (7.4 in) x 211 mm (8.3 in)
(dimensions with bracket, feet and installed device)

15.7 Environment

Ambient temperature range -10 to +50 °C (14 to 122 °F)

Storage temperature -20 to +60 °C (-4 to +140 °F)

Humidity 5 to 85 %, not condensating

Climate class To IEC 60654-1: Class B2

Electrical safety Class I equipment, overvoltage category II
Pollution level 2

Altitude < 2 000 m (6 561 ft) above MSL

Degree of protection	Front	IP65 / NEMA 4 (not assessed by UL)
	Rear	IP20

Electromagnetic compatibility EMC to all relevant requirements of the IEC/EN 61326- series and NAMUR NE21. For details see declaration of conformity.

- Interference immunity: as per IEC/EN 61326 series (industrial environment) / NAMUR NE21
Maximum measured error <1% of measuring range
- Interference emissions: as per IEC 61326-1 Class A

15.8 Mechanical construction

Design, dimensions Information about design and dimensions →  70

Weight

- Panel-mounted device with maximum configuration: approx. 2.2 kg (4.85 lbs)
- Desktop housing (excluding device): approx. 2.3 kg (5 lbs)
- Field housing (excluding device): approx. 4 kg (8.8 lbs)

Materials	Front frame	Zinc die cast GD-Z410, powder-coated
	Sight glass	Transparent Makrolon plastic (FR clear 099) UL94-V2
	Flap; jog/shuttle dial	Plastic ABS UL94-V2
	Mounting guide rail for PCBs; motherboard fixing unit; display retainer plate	Plastic PA6-GF15 UL94-V2
	Seal to panel wall; seal to display; seal in flap; seal to navigator	Rubber EPDM 70 Shore A
	Casing; rear panel	Galvanized sheet steel St 12 ZE

 All materials are silicone-free.

Materials of desktop housing

- Housing half-panels: sheet steel, electrolytically plated (powder-coated)
- Side sections: aluminum extruded section (powder-coated)
- Section ends: colored polyamide

15.9 Display and operating elements

Operating concept The device can be operated directly onsite, or via remote configuration with the PC via interfaces and operating tools (Web server).

Integrated operating instructions

The device's simple control system enables you to perform commissioning for many applications without the need for hard copy operating instructions. The device has an integrated help function and displays operating instructions directly on screen if the navigator (jog/shuttle dial) is pressed for longer than 3 seconds.

Local operation

Display elements

Type

TFT color display

Size (diagonal screen measurement)

145 mm (5.7")

Resolution

VGA 307,200 pixels (640 x 480 pixels)

Backlight

70,000 h half value time (= half brightness)

Number of colors

262,000 viewable colors, 256 colors used


Viewing angle

Viewing angle: 130° vertical, 150° horizontal

Screen display

- Background color white
- Active channels can be assigned to up to 4 groups. These groups can be given a name e.g. "Temp. boiler 1" or "Daily averages" so that they can be uniquely identified.
- Linear scaling
- Measured value history: quick retrieval of historical data with zoom function
- Preformatted screen displays such as horizontal or vertical curve presentation, bar graph display or digital display.


Operating elements

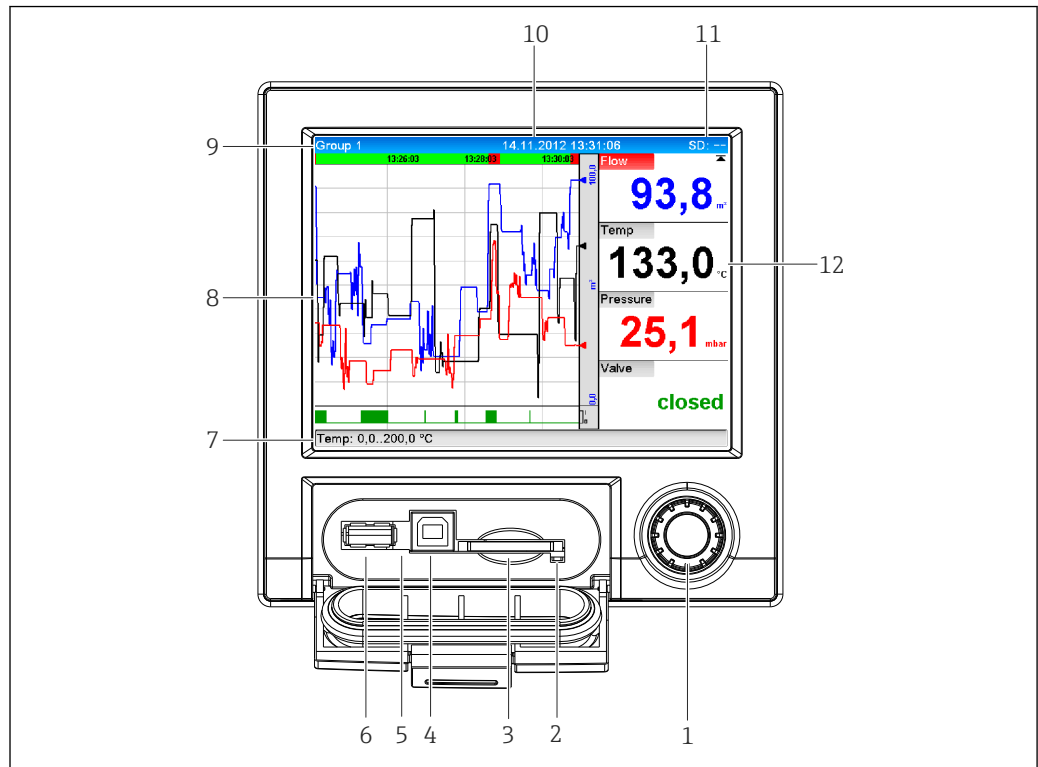

A0020602-EN

14 Front of device with open flap

Item No.	Operating function (display mode = display of measured values) (Setup mode = operating in the Setup menu)
1	"Navigator": jog/shuttle dial for operating with additional press/hold function. In display mode: turn the dial to switch between the various signal groups. Press the dial to display the main menu. In setup mode or in a selection menu: turn the dial counterclockwise to move the bar or the cursor upwards or to the left, changes the parameter. Turning clockwise moves the bar or cursor down or clockwise, changes parameter.
2	LED at SD slot. Orange LED lights up or flashes when the device writes to or reads from the SD card. Do not remove the SD card if the LED is lit or flashing! Risk of data loss!
3	Slot for SD card
4	USB B socket "Function" e.g. to connect to PC or laptop
5	Green LED lit: power supply present
6	USB A socket "Host" e.g. for USB memory stick or external keyboard
7	In display mode: alternating status display (e.g. set zoom range) of the analog or digital inputs in the appropriate color of the channel. In setup mode: different information can be displayed here depending on the display type.
8	In display mode: window for measured value display (e.g. curve display). In setup mode: display of operating menu
9	In display mode: current group name, type of evaluation In setup mode: name of the current operating item (dialog title)
10	In display mode: displays current date/time In setup mode: --

Item No.	Operating function (display mode = display of measured values) (Setup mode = operating in the Setup menu)
11	In display mode: alternating display indicating the percentage space on the SD card or USB stick that has already been used. Status symbols are also displayed in alternation with the memory information. In setup mode: the current "direct access" operating code is displayed
12	In display mode: display of current measured values and the status in the event of an error/alarm condition. In the case of counters, the type of counter is displayed as a symbol.  If a measuring point has limit value status, the corresponding channel identifier is highlighted in red (quick detection of limit value violations). During a limit value violation and device operation, the acquisition of measured values continues uninterrupted.

Languages

The following languages can be selected in the operating menu: German, English, Spanish, French, Italian, Dutch, Swedish, Polish, Portuguese, Czech, Russian, Japanese, Chinese (Traditional), Chinese (Simplified)

Remote operation

Device access via operating tools

Device configuration and measured value retrieval can also be done via interfaces. The following operating tools are available for this purpose:

Operating tool	Functions	Access via
Analysis software, SQL database support (included in the delivery)	<ul style="list-style-type: none"> ▪ Export of saved data (measured values, analyses, event log) ▪ Visualization and processing of saved data (measured values, analyses, event log) ▪ Safe archiving of exported data in a SQL database 	RS232/RS485, USB, Ethernet
Web server (integrated into the device; access via browser)	<ul style="list-style-type: none"> ▪ Display of current and historical data and measured value curves via the web browser ▪ Easy configuration without additional installed software ▪ Remote access to device and diagnostic information 	Ethernet
OPC server (optional)	The following instantaneous values can be provided: <ul style="list-style-type: none"> ▪ Analog channels ▪ Digital channels ▪ Mathematics ▪ Totalizer 	RS232/RS485, USB, Ethernet

System integration

The device has (optional) fieldbus interfaces for exporting process values. Measured values and statuses can also be transmitted to the device via fieldbus. Alarms or errors in the context of data transmission are displayed depending on the bus system (e.g. status byte). The process values are transferred in the same devices that are used for display at the device.

Ethernet

The following functions are implemented:

- Data communication with PC software (analysis software, OPC server)
- Web server

Modbus RTU/TCP slave

The device can be connected to a Modbus system via RS485 or Ethernet interface. Up to 12 analog inputs and 6 digital inputs can be transmitted via Modbus and stored in the device.

15.10 Certificates and approvals

CE mark

The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied. Confirms successful testing of the device by affixing to it the CE mark.

Other standards and guidelines

- IEC 60529:
Degree of protection provided by housing (IP code)
- IEC/EN 61010-1:
Safety requirements for electrical equipment for measurement, control and laboratory use
- IEC/EN 61326 Series:
Electromagnetic compatibility (EMC requirements)

15.11 Ordering information

Scope of delivery


The scope of delivery of the device comprises:

- Device (with terminals, as per order)
- 2 fastening clips
- USB cable
- Optional: Industrial grade SD card (card is located in the SD slot behind the flap on the front of the housing)
- Analysis software on CD-ROM
- Operating Instructions on CD-ROM


16 Appendix

16.1 Operating items in the "Expert" menu

The parameter groups for the Expert setup contain all the parameters of the operating menus: System, Input and Output Setup, Communication, Application, Diagnostics as well as other parameters that are reserved for experts only.

 For most settings, the "Setup" or "Expert" menu must be quit before the settings are adopted. However settings such as the date/time are accepted immediately.


Direct access

Navigation	 Expert → Direct access
Description	Direct access to active operating items (rapid access). Entering the direct access code takes you directly to the desired operating parameter. The direct access code is displayed in the Setup menu on the top right of the display (e.g. 00000-000).
Text entry	(e.g. 00000-000)


16.1.1 "System" submenu

Basic settings that are needed to operate the device (e.g. date, time, etc.).


Language

Navigation	 Expert → System → Language Direct access code: 010000-000
Description	Select unit operating language.
Options	German, English, Spanish, French, Italian, Dutch, Polish, Portuguese, Russian, Swedish, Czech, Japanese, Chinese (Simplified), Chinese (Traditional)
Factory setting	English; or preset to customer's preferred language


Device tag

Navigation	 Expert → System → Device tag Direct access code: 000031-000
Description	Individual device tag.
User entry	Text entry (max. 32 characters)
Factory setting	Unit 1


Temp. unit

Navigation	 Expert → System → Temp. unit Direct access code: 100001-000
Description	Selection of temperature unit. All directly connected thermocouples or resistance thermometers (RTD) are displayed in the preset engineering units.
Options	°C, °F, K
Factory setting	°C


Decimal separator

Navigation	 Expert → System → Decimal separator Direct access code: 100003-000
Description	Select in which form the decimal separator character is to be displayed.
Options	Comma, point
Factory setting	Comma

Fault switching

Navigation	 Expert → System → Fault switching Direct access code: 100002-000
Description	If the device detects a system error (e.g. hardware defect) or a fault (e.g. cable open circuit), the selected output switches.
Options	Not used, Relay x All the available relays are displayed
Factory setting	Relay 1

Keyboard layout

Navigation	 Expert → System → Keyboard layout Direct access code: 100020/000
Description	Please select the keyboard layout. Only relevant if external keyboard is used.

Options Germany, Switzerland, France, USA, USA International, UK, Italy

Factory setting Germany

Swap mouse buttons

Navigation  Expert → System → Swap mouse buttons
Direct access code: 100050/000

Description Swap function of left and right mouse button.

Options No, Yes

Factory setting No

Paper size

Navigation  Expert → System → Paper size
Direct access code: 540004/000

Description Please select the paper size of the printer connected to the PC.

Options DIN A4, US Letter

Factory setting DIN A4

Lock operation



Navigation  Expert → System → Lock operation
Direct access code: 100060/000

Description Local operation is locked in cases of inactivity once the set time has elapsed to prevent inadvertent operation (e.g. when cleaning the device). The device is unlocked by pressing the navigator or the OK operating key for 3 s. When using an external keyboard, the device is unlocked with the key combination "Ctrl-Alt-Del".


Options Never, After 2 (5, 10, 15) minutes

Factory setting After 5 minutes


PRESET

Navigation	 Expert → System → PRESET Direct access code: 000044-000
Description	Caution: Resets all the parameters to the factory settings!  Only visible/editable if the service code has been entered.
Options	No, Factory reset, Customer setting


Clear memory

Navigation	 Expert → System → Clear memory Direct access code: 059000-000
Description	Delete internal memory.
Options	No, Yes


"Date/time setup" submenu

Navigation	 Expert → System → Date/time setup
Description	Contains settings for date/time.

Date format

Navigation	 Expert → System → Date/time setup → Date format Direct access code: 110000-000
Description	Select in which format the date is to be set and displayed.
Options	DD.MM.YYYY, MM/DD/YYYY, YYYY-MM-DD
Factory setting	DD.MM.YYYY

Time format

Navigation	 Expert → System → Date/time setup → Time format Direct access code: 110001-000
Description	Select in which format the time is to be set and displayed.
Options	24 hour, 12 hour AM/PM


Factory setting 24 hour

"Date/time" submenu

Navigation  Expert → System → Date/time setup → Date/time


Description Contains parameters for setting the date/time.

UTC time zone

Navigation  Expert → System → Date/time setup → Date/time → UTC time zone
 Direct access code: 120000-000

Description Display of the current UTC time zone is on (UTC = universal time coordinated).


Current date/time

Navigation  Expert → System → Date/time setup → Date/time → Current date/time
 Direct access code: 120003-000


Description Displays the current date and the current time.

"Change date/time" submenu

Description Contains parameters for changing the date/time.

Navigation  Expert → System → Date/time setup → Change date/time


UTC time zone

Navigation  Expert → System → Date/time setup → Date/time → Change date/time → UTC time zone
 Direct access code: 120010-000

Description Set your UTC time zone (UTC = universal time coordinated).

Options -12:00, -11:00: Samoa, -10:00: Hawaii, -09:30: Marquesas, -09:00: Alaska, -08:00: LA, -07:00: Denver, -06:00: Chicago, -05:00: New York, -04:00: Caracas, -03:30: St.John's, -03:00: Brasilia, -02:00: Atlantic, -01:00: Azores, +00:00: London, +01:00: Berlin, +02:00: Cairo, +03:00: Moscow, +03:30: Tehran, +04:00: Abu Dhabi, +04:30: Kabul, +05:00: Islamabad, +05:30: New Delhi, +05:45: Kathmandu, +06:00: Dhaka, +06:30: Pyinmana, +07:00: Bangkok, +08:00: Peking, +08:45, +09:00: Tokyo, +09:30: Adelaide, +10:00: Canberra, +10:30: Lord-Howe, +11:00:Solom.Isl., +11:30: Norfolk, +12:00: Auckland, +12:45: Chatham, +13:00, +14:00


Date/time

Navigation  Expert → System → Date/time setup → Date/time → Change date/time → Date/time
Direct access code: 120013-000

Description Set the current date and time for the unit here.


User entry Date/time in set format

"NT/ST changeover" submenu

Navigation  Expert → System → Date/time setup → NT/ST changeover

Description Contains settings for normal time/summer time changeover.

NT/ST changeover


Navigation  Expert → System → Date/time setup → NT/ST changeover → NT/ST changeover
Direct access code: 110002-000

Description Function for summer/normal time changeover.
Automatic: Changeover according to applicable directives for the selected region;
Manual: Set changeover times in the next items;
Off: No time changeover.

Options Off, Manual, Automatic

Factory setting Automatic

NT/ST region

Navigation  Expert → System → Date/time setup → NT/ST changeover → NT/ST region
Direct access code: 110003-000


Description Selects the regional settings for summer/normal time changeover.
Only visible if NT/ST changeover = automatic.

Options Europe, USA

Factory setting Europe

Begin summer time

Occurrence


Navigation  Expert → System → Date/time setup → NT/ST changeover → Occurrence
Direct access code: 110005-000

Description Day, when in the spring a change from normal to summer time occurs.
Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.

Options 1st, 2nd, 3rd, 4th, Last

Factory setting Last

Day


Navigation  Expert → System → Date/time setup → NT/ST changeover → Day
Direct access code: 110006-000

Description Day, when in the spring a change from normal to summer time occurs.
Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.

Options Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday

Factory setting Sunday

Month


Navigation  Expert → System → Date/time setup → NT/ST changeover → Month
Direct access code: 110007-000

Description Month, when in the spring a change from normal to summer time occurs.
Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.

Options January, February, March, April, May, June, July, August, September, October, November, December


Factory setting March

Date

Navigation  Expert → System → Date/time setup → NT/ST changeover → Date
Direct access code: 110008-000

Description Date next spring when a change from normal to summer time occurs.
Only visible if NT/ST changeover = Automatic or Manual. Cannot be edited.

Time

Navigation  Expert → System → Date/time setup → NT/ST changeover → Time
Direct access code: 110009-000


Description Point of time when the time is moved forward by 1 hour on the day of the changeover from normal time to summer time (in the set time format).
Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.

User entry Time in set time format

Factory setting 02:00

End summer time

Occurrence


Navigation  Expert → System → Date/time setup → NT/ST changeover → Occurrence
Direct access code: 110011-000

Description Day, when in the autumn a change from summer to normal time occurs.
Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.


Options 1st, 2nd, 3rd, 4th, Last

Factory setting Last


Day

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Day Direct access code: 110012-000
Description	Day, when in the autumn a change from summer to normal time occurs. Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
Options	Sunday, Monday, Tuesday, Wednesday, Thursday, Friday, Saturday
Factory setting	Sunday


Month

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Month Direct access code: 110013-000
Description	Month, when in the autumn a change from summer to normal time occurs. Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
Options	January, February, March, April, May, June, July, August, September, October, November, December
Factory setting	October


Date

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Date Direct access code: 110014-000
Description	Date next autumn when summer time changes back to normal time. Only visible if NT/ST changeover = Automatic or Manual. Cannot be edited.


Time

Navigation	 Expert → System → Date/time setup → NT/ST changeover → Time Direct access code: 110015-000
Description	Point of time when the time is moved back by 1 hour on the day of the changeover from summer time to normal time (in the set time format). Visible for NT/ST changeover = Automatic or Manual. Only editable if NT/ST changeover = Manual.
User entry	Time in set time format
Factory setting	02:00


"SNTP" submenu

Navigation	 Expert → System → Date/time setup → SNTP
Description	Contains settings for time synchronization using the Simple Network Time Protocol (SNTP).



SNTP

Navigation	 Expert → System → Date/time setup → SNTP Direct access code: 110020-000
Description	If switched on, time synchronization is carried out via SNTP once a day. Note: Only possible via Ethernet. Port 123 must be open in the firewall. The user/network administrator is responsible for the accuracy of the time server.
Options	No, Yes
Factory setting	No


SNTP server 1

Navigation	 Expert → System → Date/time setup → SNTP server → SNTP server 1 Direct access code: 110021-000
Description	Please specify the address of the time server (or the IP address). Note: The DNS server must be configured (see Communication/Ethernet). Your administrator can provide the address where necessary.
User entry	Text field

SNTP server 2


Navigation	 Expert → System → Date/time setup → SNTP Server → SNTP server 2 Direct access code: 110025-000
Description	Shows the IP address of the time server if it was automatically allocated via DHCP. Non-editable display text.  An attempt is always made to synchronize the time via SNTP server 1 first (provided it is configured). DHCP must be switched on (see Communication/Ethernet). DHCP server: Option 42.

"Security" submenu

Navigation  Expert → System → Security

Description Contains settings that protect the unit against unauthorized operation and configuration.

Protected by


Navigation  Expert → System → Security → Protected by
Direct access code: 100006-000

Description Configure how the device should be protected.

Options Open access, access code, user roles

Factory setting Open access

Access code


Navigation  Expert → System → Security → Access code
Direct access code: 100000-000

Description Using this code, setup access can be protected from unauthorized persons. In order to change any parameter the correct code must be entered. Factory setting: "0", i.e. changes can be made at any time.
Hint: Make a note of the code and store in a safe place.
Only visible if "Protected by" = "Access code".


User entry 4-digit number

Factory setting 0

Set point code

Navigation  Expert → System → Security → Set point code
Direct access code: 100030-000


Description If the unit is protected by an access code a set point code can also be defined. The user can change the set points once the set point code is entered. All other operating positions remain locked, however.
Only visible if an access code has been defined.
Factory default: "0" means that alarm set points can only be changed by entering the access code.


 Alarm set point code and access code should not be identical!

User entry 4-digit number

Factory setting 0

Lock hardware

Navigation  Expert → System → Security → Lock hardware
Direct access code: 100099-000

Description Device functions/interfaces that are not used can be switched off for security reasons.
 Fieldbuses may also be affected in the case of Ethernet or the serial interface.
Please follow the operating instructions.

Options Ethernet (all ports/services), USB A socket front, USB A socket back, USB B socket front, Serial interface, SD card


Factory setting No lock

"Authentication" submenu

Navigation  Expert → System → Security → Authentication

Description Define the passwords for the various user roles to allow device access.
Visible only if "Protected by" = "User roles".

Operator
ID: operator
Password


Navigation  Expert → System → Security → Authentication → Password
Direct access code: 470105/000

Description Enter a password for this user account.


Options Text entry max. 12 characters

Factory setting operator


Administrator
ID: admin
Password

Navigation	 Expert → System → Security → Authentication → Password Direct access code: 470102/000
Description	Enter a password for this user account.
Options	Text entry max. 12 characters
Factory setting	admin


**Service
ID: service
Password**

Navigation	 Expert → System → Security → Authentication → Password Direct access code: 470101/000
Description	Enter a password for this user account.
Options	Text entry max. 12 characters
Factory setting	service

"External memory" submenu




Navigation	 Expert → System → External memory
Description	Contains settings for the external data carrier, amongst other things which data are to be stored in which format on the external data carrier.

Save as



Navigation	 Expert → System → External memory → Save as Direct access code: 140000-000
Description	"Protected format": All data are stored in a manipulation protected encrypted format. They can be interpreted only by the PC analysis software provided. "Open format": data are stored in a CSV format, this can be opened by a number of different programs (e.g. MS Excel) (Attention: no manipulation security).
Options	Protected format, Open format (*.csv)
Factory setting	Protected format

SD card


Memory build-up

Navigation	 Expert → System → External memory → Memory build-up Direct access code: 140001-000
Description	"Stack memory": no more data can be stored once the data carrier is full. "Ring memory": once the data carrier is full the oldest data are deleted so that new data can be stored (First in first out (FIFO)).  The "Ring memory" setting refers only to the automatic storage of measured values. Manual save functions ("Operation -> SD card -> Update/Save measured values") are not affected.
Options	Stack memory, Ring memory (FIFO)  "Ring memory" can be selected only if "Save as" is set to "protected format" (and not "CSV").
Factory setting	Stack memory


Warning at

Navigation	 Expert → System → External memory → Warning at Direct access code: 140005-000
Description	Issues a warning before the data carrier is x% full. A warning is indicated on the device and this is also stored in the event buffer. A relay can also be switched.  Only for external SD card (does not apply to USB stick)!
User entry	0 to 99%
Factory setting	90


Switches relay

Navigation	 Expert → System → External memory → Switches relay Direct access code: 140006-000
Description	When the warning "Data carrier full" is displayed a relay can also be switched on.
Options	Not used, Relay x All the available relays are displayed
Factory setting	Not used


CSV settings

 Also configurable if "Protected format" is set.


Separator for CSV

Navigation	 Expert → System → External memory → Separator for CSV Direct access code: 140002-000
Description	Configure which separator is used by your application (e.g. in Excel = semicolon).
Options	Comma, Semicolon
Factory setting	Semicolon

Date/time

Navigation	 Expert → System → External memory → Date/time Direct access code: 140003-000
Description	Please select if the date and time should be stored in one column or separate columns when data are saved in CSV format files.
Options	One column, Separate columns
Factory setting	Separate columns

Operating time


Navigation	 Expert → System → External memory → Operating time Direct access code: 140004-000
Description	Please select in which format operation times will be stored/displayed.
Options	0 seconds, 0.0000 hours, 0.00000 days, 0000h00:00
Factory setting	0000h00:00

"Messages" submenu

Navigation	 Expert → System → Messages
-------------------	--

Description Contains settings for displaying/acknowledging messages. Examples of messages include: messages triggered by set-points; messages triggered by a digital input; error messages; etc.

Acknowledging messages


Navigation  Expert → System → Messages → Acknowledging messages
Direct access code: 100040-000

Description The time the message is acknowledged can be saved in the events list.

Options Do not save, Save

Factory setting Do not save

Switches relay

Navigation  Expert → System → Messages → Switches relay
Direct access code: 100042-000

Description A relay can be switched as soon as a message that has to be confirmed is displayed (e.g. on/off message, device errors etc.).
The relay assumes the initial status as soon as all messages have been confirmed.

Options Not used, Relay x
All the available relays are displayed


Factory setting Not used

"Screen saver" submenu

Navigation  Expert → System → Screensaver


Description To increase the life span of the LCDs the backlight can be switched off (= screen saver).

Screen saver


Navigation  Expert → System → Screen saver → Screen saver
Direct access code: 160000-000


Description "Switched off": LCD is always switched on.
"Switch on for x min.": display goes dark after x minutes. All other functions remain in operation. Press an operating key: Illumination is switched back on.
"Switch daily": Enter time span.

Options Switched off, On after 10 min, On after 30 min, On after 60 min, Switched daily, Control input

Factory setting Switched off
 This setting has no effect if the screen saver is controlled by a digital input →  114

ON daily from


Navigation  Expert → System → Screen saver → ON daily from
 Direct access code: 160001-000

Description Set time (hh:mm) as of when the screensaver should be switched on (e.g. shift end time).
 The screen saver is switched off as soon as the device is operated via onsite operation. After 1 min of inactivity it switches back on automatically.
 Only visible if screen saver = switched daily

User entry Time (hh:mm)

Factory setting 20:00

OFF daily from


Navigation  Expert → System → Screen saver → OFF daily from
 Direct access code: 160002-000


Description Set time (hh:mm) as of when the screensaver should be switched off (e.g. shift start time).
 Only visible if screen saver = switched daily.

User entry Time (hh:mm)

Factory setting 07:00

Alarm response

Navigation  Expert → System → Screen saver → Alarm response
 Direct access code: 160003-000

Description "Off on alarm": If limit value violations occur or status signal "Maintenance required (Mxxx)" or "Check function (Cxxx)" is active, the screensaver will be automatically deactivated.
 "Always on": If limit value violations occur or status signal "Maintenance required (Mxxx)" or "Check function (Cxxx)" is active, the screensaver will not be deactivated.
 Active messages that require acknowledgment or an active status signal "Failure (Fxxx)" or "Out of specification (Sxxx)" deactivate the screensaver always.

Options Off on alarm, Always on


Factory setting Off on alarm

"Device options" submenu


Navigation  Expert → System → Device options

Description Hardware and software options of the device.

Activation code

Navigation  Expert → System → Device options → Activation code
Direct access code: 000057-000

Description Here, you can enter a code to enable the device options.
Options that can be upgraded can be found under "Spare parts".
Note: When an activation code is entered, the device is restarted in order to enable the new option.


-  The activation code entered is not displayed, i.e. this parameter is always empty following a restart.
- Pay attention to case-sensitivity.

User entry Text

Slot 1

Navigation  Expert → System → Device options → Slot 1
Direct access code: 990000-000

Description Shows hardware or software options.
Cannot be edited.


-  The assignment can be specified in the PC operating software for offline configuration.

Options Not assigned, Universal inputs

Slot 2


Navigation  Expert → System → Device options → Slot 2
Direct access code: 990001-000

Description Shows hardware or software options.
Cannot be edited.


-  The assignment can be specified in the PC operating software for offline configuration.

Options Not assigned, Universal inputs

Slot 3


Navigation  Expert → System → Device options → Slot 3
Direct access code: 990002-000

Description Shows hardware or software options.
Cannot be edited.

 The assignment can be specified in the PC operating software for offline configuration.

Options Not assigned, Universal inputs

Communication

Navigation  Expert → System → Device options → Communication
Direct access code: 990006-000

Description Shows hardware or software options.
Cannot be edited.

Options USB + Ethernet, USB + Ethernet + RS232/485


Fieldbus

Navigation  Expert → System → Device options → Fieldbus
Direct access code: 990005-000

Description Shows hardware or software options.
Cannot be edited.

Options Not available, Modbus Slave

Application

Navigation  Expert → System → Device options → Application
Direct access code: 990007-000

Description Shows hardware or software options.
Cannot be edited.

Options Standard, Maths

16.1.2 "Inputs" submenu


Settings for analog and digital inputs.

"Universal inputs" submenu

Navigation  Expert → System → Inputs → Universal inputs

Description Settings for the connected measuring points.

Add input


Navigation  Expert → System → Inputs → Universal inputs → Add input
Direct access code: 222000/000

Description Addition of an input that must be switched on and configured according to the input signal.

Options No, universal input x

Factory setting No

Delete input

Navigation  Expert → System → Inputs → Universal inputs → Delete input
Direct access code: 222001/000

Description Delete an input configuration.


Options No, universal input x

Factory setting No


"Universal input x" submenu

Navigation  Expert → System → Inputs → Universal inputs → Universal input x


Description View or change settings for the selected channel.

 x = place holder for selected universal input.


Signal

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Signal Direct access code: 220000-0xx Examples: Universal input 1: 220000-000; Universal input 12: 220000-011
Description	Select the type of signal connected (current, voltage, etc.). The channel is switched off if no signal type is selected (factory default).
Options	Switched off, Current, Voltage, Resistance temperature detector, Thermocouple, Pulse counter, Frequency input, Modbus Slave (option)
Factory setting	Switched off

Range


Navigation	 Expert → Inputs → Universal inputs → Universal input x → Range Direct access code: 220001-0xx Examples: Universal input 1: 220001-000; Universal input 12: 220001-011
Description	Select the input range or which resistance thermometer/thermocouple is connected. The respective terminal layout can be found in the Operating Instructions or on the rear of the unit. Only visible if signal ≠ switched off.
Options	Switched off Current: 4-20 mA, 0-20 mA, 0-5 mA, 0-20 mA squared, 4-20 mA squared, ±20 mA Voltage: 0-1 V, 0-10 V, 0-5 V, 1-5 V, ±150 mV, ±1 V, ±10 V, ±30 V, 0-1 V squared, 0-10 V squared, 1-5 V squared Resistance thermometer: Pt100 (IEC), Pt100 (JIS), Pt100 (GOST), Pt500 (IEC), Pt500 (JIS), Pt1000 (IEC), Pt1000 (JIS), Pt46 (GOST), Pt50 (GOST), Cu50 (GOST, a=4260), Cu50 (GOST, a=4280), Cu53 (GOST, a=4280), Cu100 (GOST, a=4280) Thermocouple: Type A (W5Re-W20Re), type B (Pt30Rh-Pt6Rh), type C (W5Re-W26Re), type D (W3Re-W25Re), type J (Fe-CuNi), type K (NiCr-Ni), type L (Fe-CuNi), type L (NiCr-CuNi, GOST), type N (NiCrSi-NiSi), type R (Pt13Rh-Pt), type S (Pt10Rh-Pt), type T (Cu-CuNi) Pulse counter Frequency input Modbus (option)
Factory setting	Switched off

Connection

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Connection Direct access code: 220002-0xx Examples: Universal input 1: 220002-000; Universal input 12: 220002-011
Description	Specify whether RTDs are connected as 2-, 3- or 4-wire systems. Only visible if signal = resistance thermometer.
Options	2-wire, 3-wire, 4-wire

Factory setting 4-wire

Channel ident.


Navigation  Expert → Inputs → Universal inputs → Universal input x → Channel ident.
Direct access code: 220003-0xx
Examples: Universal input 1: 220003-000; Universal input 12: 220003-011

Description Name of the measuring point connected to this input.
Only visible if signal ≠ switched off.

User entry Text (16 characters)

Factory setting Channel x

Plot type


Navigation  Expert → Inputs → Universal inputs → Universal input x → Plot type
Direct access code: 220016-0xx
Examples: Universal input 1: 220016-000; Universal input 12: 220016-011

Description The analog inputs are scanned in a 100ms cycle. Depending on the memory cycle, the selected data are determined, saved, and displayed based on the scanned values.

Options Instantaneous value, Average, Minimum value, Maximum value, Minimum + Maximum, Counter, Current value + Counter

Factory setting Average

Time base


Navigation  Expert → Inputs → Universal inputs → Universal input x → Time base
Direct access code: 220025-0xx
Examples: Universal input 1: 220025-000; Universal input 12: 220025-011

Description A current value can be determined from the counter reading with the aid of the time base e.g. input liters, time base = second → current value = liters/second.
Only visible if signal = "Pulse counter" and plot type = "Current value + counter".


Options Second (s), Minute (min), Hour (h), Day (d)

Factory setting Second (s)


Engineering unit

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Engineering unit Direct access code: 220004-0xx Examples: Universal input 1: 220004-000; Universal input 12: 220004-011
Description	Specify the technical (physical) unit for the measuring point connected to this input. Only visible if signal ≠ switched off.
User entry	Text (6 characters)


Unit/dimension counter

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Unit/dimension counter Direct access code: 220024-00x Examples: Universal input 1: 220024-000; Universal input 12: 220024-011
Description	Technical units of the count input, e.g. gal, cf. Only visible if signal = "Pulse counter" and plot type = "Current value + counter".
User entry	Text (max. 6 characters)

Pulse counter

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Pulse counter Direct access code: 220017-0xx Examples: Universal input 1: 220017-000; Universal input 12: 220017-011
Description	Please check if the pulse counter used is a fast or slow (up to a max. 25 Hz) counter. For example if the number of state changes from a relay are to be monitored then you must set up "up to 25Hz". Only visible if signal = pulse counter.
Options	Up to 13kHz, Up to 25Hz
Factory setting	Up to 13kHz

Pulse value


Navigation	 Expert → Inputs → Universal inputs → Universal input x → Pulse value Direct access code: 220010-0xx Examples: Universal input 1: 220010-000; Universal input 12: 220010-011
-------------------	---

Description Factor, that when multiplied by the input signal results in the required physical value.
Example: 1 pulse equals 5 m³-> enter "5".
Only visible if signal = pulse counter.

User entry Number, max. 8 digits

Factory setting 1

Decimal point


Navigation  Expert → Inputs → Universal inputs → Universal input x → Decimal point
Direct access code: 220005-0xx
Examples: Universal input 1: 220005-000; Universal input 12: 220005-011

Description Number of places after decimal point for the display.
Only visible if signal ≠ switched off.

Options None, One (X.Y), Two (X.YY), Three (X.YYY), Four (X.YYYY), Five (X.YYYYY)

Factory setting One (X.Y)

Lower frequency


Navigation  Expert → Inputs → Universal inputs → Universal input x → Lower frequency
Direct access code: 220018-0xx
Examples: Universal input 1: 220018-000; Universal input 12: 220018-011


Description Configure the lower frequency that corresponds to the start of the measuring range.
Only visible if signal = frequency input.

User entry 0 to 12500 (Hz)


Factory setting 5.0 (Hz)

Range start



Navigation  Expert → Inputs → Universal inputs → Universal input x → Range start
Direct access code: 220006-0xx
Examples: Universal input 1: 220006-000; Universal input 12: 220006-011

Description	<p>Transmitters convert the physical measured variable to standardized signals. Enter the start of the measuring range here.</p> <ul style="list-style-type: none">  The start and end of the measuring range may not be identical. The start of the measuring range can also be larger than the end (e.g. for deep wells). The parameter can be defined independently of the number of decimal places configured for the measured value as these are only taken into consideration for the display.
User entry	Number (max. 8 digits)
Factory setting	0 (Depends on the input signal selected)


Upper frequency

Navigation	<ul style="list-style-type: none">  Expert → Inputs → Universal inputs → Universal input x → Upper frequency Direct access code: 220019-0xx Examples: Universal input 1: 220019-000; Universal input 12: 220019-011
Description	Configure the upper frequency that corresponds to the end of the measuring range. Only visible if signal = frequency input.
User entry	0 to 12500 (Hz)
Factory setting	1000.0 (Hz)


Meas. range end

Navigation	<ul style="list-style-type: none">  Expert → Inputs → Universal inputs → Universal input x → Meas. range end Direct access code: 220007-0xx Examples: Universal input 1: 220007-000; Universal input 12: 220007-011
Description	<p>Transmitters convert the physical measured variable to standardized signals. Enter the end of the measuring range here.</p> <ul style="list-style-type: none">  The start and end of the measuring range may not be identical. The end of the measuring range can also be smaller than the start (e.g. for deep wells). The parameter can be defined independently of the number of decimal places configured for the measured value as these are only taken into consideration for the display.
User entry	Number (max. 8 digits)
Factory setting	100 (Depends on the input signal selected)

Zoom start

Navigation  Expert → Inputs → Universal inputs → Universal input x → Zoom start
Direct access code: 220011-0xx
Examples: Universal input 1: 220011-000; Universal input 12: 220011-011


Description If the whole value range is not used, you can configure the lower value of the required section here. Zooming does not affect the save function.

-  ■ The zoom can also be set outside the measuring range. The only restriction is that the start and end of the zoom may not be identical.
- If the signal or the range is changed, the zoom is corrected if it no longer fits the measuring range.
 - The zoom start can also be larger than the zoom end. The device will automatically rotate the values on the display.


User entry Number (max. 8 digits)

Factory setting 0 (Depends on the input signal selected)

Zoom end

Navigation  Expert → Inputs → Universal inputs → Universal input x → Zoom end
Direct access code: 220012-0xx
Examples: Universal input 1: 220012-000; Universal input 12: 220012-011


Description Like "Zoom start". However, enter the upper value of the required range here.

-  ■ The zoom can also be set outside the measuring range. The only restriction is that the start and end of the zoom may not be identical.
- If the signal or the range is changed, the zoom is corrected if it no longer fits the measuring range.
 - The zoom end can also be smaller than the zoom start. The device will automatically rotate the values on the display.

User entry Number (max. 8 digits)

Factory setting 100 (Depends on the input signal selected)

Damping


Navigation  Expert → Inputs → Universal inputs → Universal input x → Damping
Direct access code: 220008-0xx
Examples: Universal input 1: 220008-000; Universal input 12: 220008-011

Description The more unwanted interference there is on the measurement signal the higher the value that should be entered here. Result: Fast changes will be damped/suppressed. Only visible if signal = current, voltage, resistance thermometer or thermocouple.


User entry 0 to 999.9 s

Factory setting Current, voltage: 0.0 s
Resistance thermometer, thermocouple: 0.2 s


Comparison point

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Comparison point Direct access code: 220013-0xx Examples: Universal input 1: 220013-000; Universal input 12: 220013-011
Description	Internal: Compensation of the voltage error by measuring the terminal temperature. External: Compensation of the voltage error by using an external controlled comparison measurement point. Only visible if signal = thermocouple.
Options	Internal, External
Factory setting	Internal


Comparison temp.

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Comparison temp. Direct access code: 220014-0xx Examples: Universal input 1: 220014-000; Universal input 12: 220014-011
Description	Settings for the external comparison temperature (only when connecting thermocouples). Only visible if comparison point = external.
User entry	0 to 9999999 (Depends on the temperature unit selected)
Factory setting	0 (Depends on the temperature unit selected)

Totalizer

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalizer Direct access code: 220015-0xx Examples: Universal input 1: 220015-000; Universal input 12: 220015-011
Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if signal = pulse counter
User entry	Number (max. 15 digits)
Factory setting	0

"Meas. val. corrct" submenu


Navigation  Expert → Inputs → Universal inputs → Universal input x → Meas. val. corrct

Description Determining the correction values to balance measurement tolerances.

Proceed as follows:

- Measure the current value at the lower measurement range.
- Measure the current value at the upper measurement range.
- Enter the lower and upper target and actual value.

Offset


Navigation  Expert → Inputs → Universal inputs → Universal input x → Meas. val. corrct → Offset
Direct access code: 220050-0xx
Examples: Universal input 1: 220050-000; Universal input 12: 220050-011

Description This offset is only effective on the analog input signal (no maths/bus channels).
Only visible if signal = resistance thermometer or thermocouple.


User entry Number (max. 8 digits)

Factory setting 0

Correction RPT

Navigation  Expert → Inputs → Universal inputs → Universal input x → Meas. val. corrct → Correction RPT
Direct access code: 220057-0xx
Examples: Universal input 1: 220057-000; Universal input 12: 220057-011

Description Rear panel temperature correction value for this analog input (only required for thermocouples).


 Only visible/editable if the service code has been entered.

User entry Number (max. 8 digits)


Factory setting -0.1

Range start

Target value


Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas. val. corrct → Target value Direct access code: 220052-0xx Examples: Universal input 1: 220052-000; Universal input 12: 220052-011
Description	Enter the lower set point here (e.g. measuring range 0°C to 100°C: 0°C). Only visible if signal = current or voltage.
User entry	Number (max. 8 digits)
Factory setting	0

Actual value


Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas. val. corrct → Actual value Direct access code: 220053-0xx Examples: Universal input 1: 220053-000; Universal input 12: 220053-011
Description	Enter the lower value actually measured here (e.g. measuring range 0°C to 100°C: measured value 0.5°C). Only visible if signal = current or voltage.
User entry	Number (max. 8 digits)
Factory setting	0

Meas. range end


Target value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas. val. corrct → Target value Direct access code: 220055-0xx Examples: Universal input 1: 220055-000; Universal input 12: 220055-011
Description	Enter the upper set point here (e.g. measuring range 0°C to 100°C: 100°C). Only visible if signal = current or voltage.
User entry	Number (max. 8 digits)
Factory setting	100


Actual value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Meas. val. correct → Actual value Direct access code: 220056-0xx Examples: Universal input 1: 220056-000; Universal input 12: 220056-011
Description	Enter the upper value actually measured here (e.g. measuring range 0°C to 100°C: measured value 100.5°C). Only visible if signal = current or voltage.
User entry	Number (max. 8 digits)
Factory setting	100


"Totalization" submenu

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization
Description	Set up only required for totalization of flow or power consumption.


Totalization

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Totalization Direct access code: 220030-0xx Examples: Universal input 1: 220030-000; Universal input 12: 220030-011
Description	By totalizing the analog signal (e.g. flow rate in m ³ /h) quantities (in m ³) can be calculated.
Options	No, Yes
Factory setting	No


Totalization base

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Totalization base Direct access code: 220031-0xx Examples: Universal input 1: 220031-000; Universal input 12: 220031-011
Description	Select the required time base. Example: ml/s -> time base seconds (s); m ³ /h -> time base hours (h). Only visible if totalization = yes.
Options	Second (s), Minute (min), Hour (h), Day (d)
Factory setting	Second (s)


Unit

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Unit Direct access code: 220032-0xx Examples: Universal input 1: 220032-000; Universal input 12: 220032-011
Description	Enter the unit for the calculated quantity (e.g. "m ³ "). Only visible if totalization = yes.
User entry	Text (max. 6 characters)


Low flow cut off

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Low flow cut off Direct access code: 220033-0xx Examples: Universal input 1: 220033-000; Universal input 12: 220033-011
Description	If the volume flow recorded is below the set value, these quantities are not added to the counter. If the input is scaled from 0 to y, or if the pulse input is used, all values that are smaller than the set value are not recorded. If the input is scaled from -x to +y, all values around the zero point (e.g. also negative values) are not recorded. Only visible if totalization = yes.
User entry	Number (max. 8 digits)
Factory setting	0



Calc. factor


Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Calc. factor Direct access code: 220034-0xx Examples: Universal input 1: 220034-000; Universal input 12: 220034-011
Description	Factor for calculating the integrated value (e.g. the transmitter delivers l/s → totalization base = second → engineering unit required is m ³ → enter factor 0.001) Only visible if totalization = yes.
User entry	Number (max. 8 digits)
Factory setting	1.0

Totalizer


Navigation	 Expert → Inputs → Universal inputs → Universal input x → Totalization → Totalizer Direct access code: 220035-0xx Examples: Universal input 1: 220035-000; Universal input 12: 220035-011
Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if totalization = yes.
User entry	Number (max. 15 digits)
Factory setting	0

"Fault mode" submenu


 In the event of an error the alarm relay is switched if so configured →  78

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode
Description	Contains settings that define how this channel is to react under fault conditions (e.g. cable open circuit, over range).


NAMUR NE 43

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → NAMUR NE 43 Direct access code: 220060-0xx Examples: Universal input 1: 220060-000; Universal input 12: 220060-011
Description	Activate/deactivate the 4-20mA loop monitoring as per NAMUR recommendation NE 43. The following error ranges apply when NAMUR NE43 is switched on: ≤ 3.8 mA: under range ≥ 20.5 mA: over range ≤ 3.6 mA or ≥ 21.0 mA: sensor error ≤ 2 mA: cable open circuit Only visible if signal = "Current" and range = "4-20 mA" or "4-20 mA squared".
Options	Off, On
Factory setting	On


Cable open circ.

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Cable open circ. Direct access code: 220060-0xx Examples: Universal input 1: 220060-000; Universal input 12: 220060-011
Description	Cable open circuit detection Only visible if signal = "Voltage" and range = "1-5 V" or "1-5 V squared".
Options	Off, On
Factory setting	On


Lower error value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Lower error value Direct access code: 220065-0xx Examples: Universal input 1: 220065-000; Universal input 12: 220065-011
Description	When NE43 is switched off, defines the value that must be undershot for the device to output an error. Only visible if signal = "Current", range = "4-20 mA", and NAMUR NE 43 = "Off".
User entry	Number (max. 8 digits); 0 to 4 mA
Factory setting	3.9mA



Upper error value

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Upper error value Direct access code: 220066-0xx Examples: Universal input 1: 220066-000; Universal input 12: 220066-011
Description	When NE43 is switched off, defines the value that must be exceeded for the device to output an error. Only visible if signal = "Current", range = "4-20 mA", and NAMUR NE 43 = "Off".
User entry	Number (max. 8 digits); 20 to 22mA
Factory setting	20.8mA


Time delay

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Time delay Direct access code: 220064-0xx Examples: Universal input 1: 220064-000; Universal input 12: 220064-011
Description	The device only reacts (e.g. Relay switch) when this condition, open circuit/under range/over range, has been operational for the preset time. Only visible if NAMUR NE 43 = on.
User entry	0 to 99 s
Factory setting	0s


On error

Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → On error Direct access code: 220061-0xx Examples: Universal input 1: 220061-000; Universal input 12: 220061-011
Description	Configure what value the device should continue working with (for calculations) if the measured value is not valid (e.g. cable open circuit).  In the event of an error value, all the dependent calculations are flagged accordingly as "error value". Counters are not flagged, however!
Options	Invalid calculation, Error value
Factory setting	Invalid calculation

Error value


Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Error value Direct access code: 220062-0xx Examples: Universal input 1: 220062-000; Universal input 12: 220062-011
Description	The device continues calculating with this value in the event of an error. Only visible if On error = Error value.
User entry	Number (max. 8 digits)
Factory setting	0

Save event



Navigation	 Expert → Inputs → Universal inputs → Universal input x → Fault mode → Save event Direct access code: 220063-0xx Examples: Universal input 1: 220063-000; Universal input 12: 220063-011
-------------------	---

Description	Stores a message in the event log when a fault occurs.
Options	No, Yes
Factory setting	No


Copy settings

Navigation	 Expert → Inputs → Universal inputs → Universal input x → → Copy settings Direct access code: 220200-0xx Examples: Universal input 1: 220200-000; Universal input 12: 220200-011
Description	Copies settings from actual channel to selected channel.
Options	Switched off, Universal input x Users can choose from all the available universal inputs.
Factory setting	Switched off


Submenu "Digital inputs -> Digital input x"

Navigation	 Expert → Inputs → Digital inputs → Digital input x
Description	Setting up only required if the digital inputs (e.g. events) are to be used.  x = place holder for selected digital input.

Add input

Navigation	 Expert → System → Digital inputs → Add input Direct access code: 252000/000
Description	Addition of a digital input that must be configured according to the function.
Options	No, Digital input x
Factory setting	No


Delete input

Navigation	 Expert → System → Digital inputs → Delete input Direct access code: 252001/000
Description	Delete an input configuration.

Options No, Digital input x

Factory setting No

Function


Navigation  Expert → Inputs → Digital inputs → Digital input x → Function
Direct access code: 250000-00x
Examples: Digital input 1: 250000-000; Digital input 6: 250000-005

Description Select the required function: Digital inputs are High active; this means the described effect is achieved by a high input.
Low = -3 to +5V
High = +12 to +30V.

Options Switched off, control input, on/off event, pulse counter, operational time, event+operation time, quantity from time, Modbus slave (option)

Factory setting Switched off

Function


Navigation  Expert → Inputs → Digital inputs → Digital input x → Function
Direct access code: 250014-00x
Examples: Digital input 1: 250014-000; Digital input 6: 250014-005

Description Specifies how the data from the fieldbus is interpreted/processed.
Only visible if function = Modbus Slave

Options Switched off, Control input, On/off event, Pulse counter, Operational time, Event +operation time, Quantity from time

Factory setting Switched off

Channel ident.


Navigation  Expert → Inputs → Digital inputs → Digital input x → Channel ident.
Direct access code: 250001-00x
Examples: Digital input 1: 250001-000; Digital input 6: 250001-005

Description Measurement point name (e.g. "Pump") or description of the function of this input (e.g. "Fault message").
Only visible if function ≠ switched off.

User entry Text (max. 16 characters)

Factory setting Digital x


Engineering unit

Navigation  Expert → Inputs → Digital inputs → Digital input x → Engineering unit
 Direct access code: 250002-00x
 Examples: Digital input 1: 250002-000; Digital input 6: 250002-005

Description Technical units of the count input, e.g. gal, cf.
 Only visible if function = pulse counter or quantity from time.

User entry Text (max. 6 characters)

Decimal point


Navigation  Expert → Inputs → Digital inputs → Digital input x → Decimal point
 Direct access code: 250004-00x
 Examples: Digital input 1: 250004-000; Digital input 6: 250004-005

Description Number of places after decimal point for the display.
 Only visible if function = pulse counter or quantity from time.

Options None, One (X.Y), Two (X.YY), Three (X.YYY), Four (X.YYYY), Five (X.YYYYY)

Factory setting One (X.Y)

Input factor in


Navigation  Expert → Inputs → Digital inputs → Digital input x → Input factor in
 Direct access code: 250019-00x
 Examples: Digital input 1: 250019-000; Digital input 6: 250019-005

Description Defines if the set up factor is respective to 1 second or 1 hour.
 Only visible if function = quantity from time.

Options Seconds, hours

Factory setting Seconds

Pulse value


Navigation  Expert → Inputs → Digital inputs → Digital input x → Pulse value
 Direct access code: 250005-00x
 Examples: Digital input 1: 250005-000; Digital input 6: 250005-005

Description Factor, that when multiplied by the input signal results in the required physical value.
 Examples:
 1 pulse equals 5 m³ -> enter "5".
 Only visible if function = pulse counter.

User entry Number (max. 8 digits)

Factory setting 1

1 second=/1 hour= (depends on the setting in "Input factor in")


Navigation  Expert → Inputs → Digital inputs → Digital input x → 1 second=/1 hour=
 Direct access code: 250005-00x
 Examples: Digital input 1: 250005-000; Digital input 6: 250005-005

Description Factor, that when multiplied by the operating time results in the required physical value.
 Examples:
 1 second equals 8 l -> enter "8".
 Only visible if function = quantity from time.

User entry Number (max. 8 digits)

Factory setting 1

Time delay

Navigation  Expert → Inputs → Digital inputs → Digital input x → Time delay
 Direct access code: 250017-00x
 Examples: Digital input 1: 250017-000; Digital input 6: 250017-005


Description The high signal must be active for at least the preset time before the device changes the channel from low to high.
 The change from high to low is always immediate.
 Only visible if function = control input, on/off event, event+operation time.

User entry 0 to 99 999 s

Factory setting 0

Action

Navigation

 Expert → Inputs → Digital inputs → Digital input x → Action
 Direct access code: 250003-00x
 Examples: Digital input 1: 250003-000; Digital input 6: 250003-005

Description

Set up the function of the control input.
 Only visible if function = control input.

Action	Description
Start/stop recording	The device only saves data as long as a high signal is present.
Screensaver on	Switches backlight/display off, low = off, high = on.
Lock setup	The user can only change the setup if a low signal is present.
Time synchronization	If a high signal is applied, the device rounds the system time up or down (only for low→high change) to the nearest minute: 0 to 29 → Round down; 30 to 59 → round up.
Set point monitoring on/off	The entire set point monitoring function of the device can be switched on (for "high") or switched off (for "low").
Block keyboard/navigator	The device can only be operated if a low signal is present. Otherwise all key activation and navigator actions are discarded.
Start/stop analysis 1	Starts/ends the external analysis (the analysis only runs as long as the signal is high). Measured value acquisition for the graphic display continues.

Options


Switched off, Start/stop recording, Screensaver on, Block set up, Time synchronization, Set point monitoring on/off, Block keyboard/navigator, Start/stop analysis 1

Factory setting

Switched off

Switches relay

Navigation

 Expert → Inputs → Digital inputs → Digital input x → Switches relay
 Direct access code: 250006-00x
 Examples: Digital input 1: 250006-000; Digital input 6: 250006-005

Description

Switches the respective relay when the digital input is low or high. Please take note of the connection hints in the Operating Instructions!
 Only visible if function = control input, on/off event, event+operation time.

Options


Not used, Relay x
 All the available relays are displayed

Factory setting

Not used

Description 'H'

Navigation


 Expert → Inputs → Digital inputs → Digital input x → Description 'H'
 Direct access code: 250007-00x
 Examples: Digital input 1: 250007-000; Digital input 6: 250007-005

Description Condition description when the digital input is active. This text is both shown in the display and saved to memory.
Only visible if function = control input, on/off event, event+operation time.

User entry Text (max. 6 characters)

Factory setting On

Description 'L'


Navigation  Expert → Inputs → Digital inputs → Digital input x → Description 'L'
Direct access code: 250008-00x
Examples: Digital input 1: 250008-000; Digital input 6: 250008-005

Description Condition description when the digital input is not active. This text is both shown in the display and saved to memory.
Only visible if function = control input, on/off event, event+operation time.


User entry Text (max. 6 characters)

Factory setting Off

Save event

Navigation  Expert → Inputs → Digital inputs → Digital input x → Save event
Direct access code: 250009-00x
Examples: Digital input 1: 250009-000; Digital input 6: 250009-005

Description Determines whether the condition change from low to high or high to low is stored in the event log.


 Requires higher memory capacity.

Only visible if function = control input, on/off event, event+operation time.

Options No, Yes



Factory setting Yes

Event message



Navigation  Expert → Inputs → Digital inputs → Digital input x → Event message
Direct access code: 250018-00x
Examples: Digital input 1: 250018-000; Digital input 6: 250018-005

Description	"Do not acknowledge": No message is shown if the digital input switches. "Acknowledge": A message window is shown on the screen which has to be acknowledged by operating a push button. Only visible if function = control input, on/off event, event+operation time.
Options	Do not acknowledge, Acknowledge
Factory setting	Do not acknowledge


Event text L->H

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Event text L->H Direct access code: 250010-00x Examples: Digital input 1: 250010-000; Digital input 6: 250010-005
Description	Description of condition change from low to high. Event text is stored (e.g. Start filling).  If no event text is set, the device generates an automatic event text (factory setting), e.g. digital 1 L->H. Only visible if function = control input, on/off event, event+operation time.
User entry	Text (max. 22 characters)

Event text H->L


Navigation	 Expert → Inputs → Digital inputs → Digital input x → Event text H->L Direct access code: 250011-00x Examples: Digital input 1: 250011-000; Digital input 6: 250011-005
Description	Description of condition change from high to low. Event text is stored (e.g. Stop filling).  If no event text is set, the device generates an automatic event text (factory setting), e.g. digital 1 H->L. Only visible if function = control input, on/off event, event+operation time.
User entry	Text (max. 22 characters)

Record duration


Navigation	 Expert → Inputs → Digital inputs → Digital input x → Record duration Direct access code: 250012-00x Examples: Digital input 1: 250012-000; Digital input 6: 250012-005
-------------------	--

Description	The duration between "On" and "Off" can be recorded. The duration is appended to the "Off" event text (<hhh>h<mm>:<ss>). Power failure times do not affect the duration. If the digital channel was "on" before the power failure and is still "on" after the power failure, the duration continues. Only visible if function = control input, on/off event, event+operation time.
Options	No, Yes
Factory setting	No

Totalizer

Navigation	 Expert → Inputs → Digital inputs → Digital input x → Totalizer Direct access code: 250013-00x Examples: Digital input 1: 250013-000; Digital input 6: 250013-005
Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if function = pulse counter, operational time, event+operation time or quantity from time.
User entry	Number (max. 15 digits)
Factory setting	0

Copy settings


Navigation	 Expert → Inputs → Digital inputs → Digital input x → Copy settings Direct access code: 250200-00x Examples: Digital input 1: 250200-000; Digital input 6: 250200-005
Description	Copies settings from actual channel to selected channel.
Options	No, Digital input x Users can choose from all the available digital inputs.
Factory setting	No

16.1.3 "Outputs" submenu


Setting up only required if outputs (e.g. relays) are to be used.

"Relay x" submenu

Navigation	 Expert → Outputs → Relay x
-------------------	--

Description Contains setup for the selected relay.
 x = place holder for selected relay.

Operating mode


Navigation  Expert → Outputs → Relay x → Operating mode
 Direct access code: 330000-00x
 Examples: Relay 1:330000-000; Relay 6: 330000-005

Description Relay function:
 NC contact: The relay is closed in its quiescent state (maximum safety).
 NO contact: The relay is open in its quiescent state.

Options Closing, Opening

Factory setting Closing

Identifier

Navigation  Expert → Outputs → Relay x → Identifier
 Direct access code: 330001-00x
 Examples: Relay 1:330001-000; Relay 6: 330001-005


Description Presettable relay identifier.

User entry Text (max. 16 characters)


Factory setting Relay x

16.1.4 "Communication" submenu

Set-up required if you are using the USB, RS232, RS485 or Ethernet interface of the unit (PC operation, serial data read-out, modem operation, etc.).

 The various interfaces can be operated in parallel.

Timeout


Navigation  Expert → Communication → Timeout
 Direct access code: 150200-000

Description Timeout is modifiable between 1 and 99 seconds. 0 seconds means that the functionality is inactivated.

User entry 0 to 99s

Factory setting 0 s

Switches


Navigation  Expert → Communication → Switches
Direct access code: 150201-000

Description After the given timeout the dedicated relay/OC is active while no readout of actual measured values are in process.

Options Not used, Relay x
All the available relays are displayed

Factory setting Not used

Timeout fieldbus

Navigation  Expert → Communication → Timeout fieldbus
Direct access code: 150210-000

Description Time within which measured values must be received via fieldbus (otherwise an error will be set). Not relevant if only measured values are read out.

User entry 1 to 99s


Factory setting 10 s

"Ethernet" submenu

Navigation  Expert → Communication → Ethernet



Description Contains the set-up required if you are using the Ethernet interface of the unit.

MAC-address


Navigation  Expert → Communication → Ethernet → MAC-address
Direct access code: 150000-000

Description Displays the MAC address.


DHCP

Navigation	 Expert → Communication → Ethernet → DHCP Direct access code: 150002-000
Description	The device can get its Ethernet settings through DHCP. Caution: The settings determined are not displayed until after setup acceptance!  Note: The unit always gets the same IP address if the leasing time is set long enough on the DHCP server. The PC software needs the IP address determined to establish a connection!
Options	No, Yes
Factory setting	Yes


IP address

Navigation	 Expert → Communication → Ethernet → IP address Direct access code: 150003-000
Description	Please enter the IP address (given from your network administrator). Please talk to your network administrator about this. Only editable if DHCP = no.
User entry	IP address
Factory setting	000.000.000.000

Subnet mask


Navigation	 Expert → Communication → Ethernet → Subnet mask Direct access code: 150004-000
Description	Please enter the subnet mask (given from your network administrator). Only editable if DHCP = no.
User entry	IP address
Factory setting	255.255.255.000

Gateway



Navigation	 Expert → Communication → Ethernet → Gateway Direct access code: 150005-000
Description	Please enter the Gateway (given from your network administrator). Only editable if DHCP = no.

User entry	IP address
Factory setting	000.000.000.000



Domain Name System (DNS)

Navigation	 Expert → Communication → Ethernet → Domain Name System (DNS) Direct access code: 150009-000
Description	Please enter the IP-address of the DNS server (you can get this from your network administrator). Is needed if you wish to send e-mails and want to use the e-mail server name instead of the IP address (e.g. smtp.example.org). Only editable if DHCP = no.
User entry	IP address
Factory setting	000.000.000.000

Disable port


Navigation	 Expert → Communication → Ethernet → Disable port Direct access code: 150020-000
Description	You can disable unused ports for security reasons. CDI is the protocol that the configuration software or reporting software uses to communicate with the device.  All other ports (e.g. SNTP, SMTP, Web server) are automatically disabled if the function is switched off.
Options	CDI, OPC, Modbus Slave
Factory setting	---- (no port disabled)


Port

Navigation	 Expert → Communication → Ethernet → Port Direct access code: 150001-000
Description	The system communicates with the PC software through this communication port.  If your network is protected by a firewall, this port may have to be enabled. Please contact your network administrator if this is the case.
User entry	Number (max. 5 digits)

Factory setting 8000

OPC port


Navigation  Expert → Communication → Ethernet → OPC port
Direct access code: 150010-000


Description Values can be read via OPC server using this communication port.
 If your network is protected by a firewall, this port may have to be enabled. Please contact your network administrator if this is the case.

User entry Number (max. 5 digits)

Factory setting 8002

Web server

Navigation  Expert → Communication → Ethernet → Web server
Direct access code: 470000-000


Description Switch the Web server functionality on/off. The instantaneous values can only be displayed using an Internet browser when the web browser is activated.
 A connection to the Web server can only be established via the Ethernet interface.

Options No (Web server is off), Yes (Web server is active)


Factory setting Yes





"Configuration Web server" submenu

Navigation  Expert → Communication → Ethernet → Configuration Web server


Description Configure the Web server or specify which functionality should be possible via Web server. Only visible if Web server = yes.
 Instantaneous value display is always possible once the Web server is switched on.

Port


Navigation  Expert → Communication → Ethernet → Configuration Web server → Port
Direct access code: 470003-000

Description	The Web server communicates through this communication port.  If your network is protected by a firewall, this port may have to be enabled. Please contact your network administrator if this is the case.
User entry	Number (max. 5 digits)
Factory setting	80
<hr/> Setup <hr/>	
Navigation	 Expert → Communication → Ethernet → Configuration Web server → Setup Direct access code: 470001-000
Description	The device can be configured via Web server. For security reasons it is advisable to switch off configuration via the Web server after commissioning. With regard to IT security please contact your network administrator if necessary.
Options	No, Yes
Factory setting	Yes
<hr/> Firmware update <hr/>	
Navigation	 Expert → Communication → Ethernet → Configuration Web server → Firmware update Direct access code: 470002-000
Description	Firmware can be updated via Web server.
Options	No, Yes
Factory setting	No
<hr/> Remote control <hr/>	
Navigation	 Expert → Communication → Ethernet → Configuration Web server → Remote control Direct access code: 470004-000
Description	Remote control of the device is possible via Web server.
Options	No, Yes
Factory setting	No

WebDAV server


Navigation	 Expert → Communication → Ethernet → Configuration Web server → WebDAV server Direct access code: 470006-000
Description	The SD card can be read via a WebDAV Client.
Options	No, Yes
Factory setting	No

"Authentication" submenu

Navigation  Expert → Communication → Ethernet → Configuration Web server → Authentication


Description Set the passwords for the various users with which the device can be accessed via Web server.

	Operator	Admin	Service
Measured value display	Yes	Yes	Yes
Display instrument health status	Yes	Yes	Yes
Configuration	No	Yes	Yes
Configuration incl. service parameter	No	No	Yes
Update firmware	No	Yes	Yes
WebDAV	Yes	Yes	Yes


 Note: The following passwords should be changed during commissioning.

Operator

ID


Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → ID Direct access code: 470104-000
Description	ID required in order to access the device. Pay attention to case-sensitivity. Cannot be edited.
Factory setting	operator

Password


Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → Password Direct access code: 470105-000
Description	Enter a password for this user account. Pay attention to case-sensitivity.
User entry	Text (max. 12 characters)
Factory setting	operator

Administrator

ID


Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → ID Direct access code: 470101-000
Description	ID required in order to access the device. Pay attention to case-sensitivity. Cannot be edited.
Factory setting	admin

Password


Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → Password Direct access code: 470102-000
Description	Enter a password for this user account. Pay attention to case-sensitivity.
User entry	Text (max. 12 characters)
Factory setting	admin

Service



ID

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → ID Direct access code: 470107-000
Description	ID required in order to access the device. Pay attention to case-sensitivity. Cannot be edited.
Factory setting	service



Password

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Authentication → Password Direct access code: 470108-000
Description	Enter a password for this user account. Pay attention to case-sensitivity.
User entry	Text (max. 12 characters)
Factory setting	service

"Timeouts" submenu


Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts
Description	Timeouts for the Web server. Settings should only be modified if slow network connections are causing transmission problems.  The settings are only adopted if the browser has been restarted or a new tab opened. Caution: Settings should only be changed by experts.

Connection quality

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Connection quality Direct access code: 470200-000
Description	Configuration of typical timeout values for the Web server connection.  The default values can be changed if necessary.
Options	Please select, Local network (LAN/WLAN), Wireless/mobile (fast connect.), Wireless/mobile (slow connect)

Factory setting Please select

Get timeout


Navigation  Expert → Communication → Ethernet → Configuration Web server → Timeouts → Get timeout
Direct access code: 470201-000

Description Maximum time to load a new page before the browser ends the connection.

User entry 5 to 999 s

Factory setting 25

Set timeout


Navigation  Expert → Communication → Ethernet → Configuration Web server → Timeouts → Set timeout
Direct access code: 470202-000

Description Maximum time to write a value or execute an action before the browser ends the connection.

User entry 5 to 999 s

Factory setting 5

Put timeout



Navigation  Expert → Communication → Ethernet → Configuration Web server → Timeouts → Put timeout
Direct access code: 470203-000

Description Maximum time to transmit files to or from the device before the browser ends the connection.


User entry 5 to 9999 s

Factory setting 240


Ping interval

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Ping interval Direct access code: 470204-000
Description	Interval in which the browser checks device reachability.  The check is switched off if 0s is set. This is for diagnostic purposes only and should not be set!
User entry	0 to 999 s
Factory setting	10


Ping timeout

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Ping timeout Direct access code: 470205-000
Description	Time in which the device must respond before the browser ends the connection.
User entry	5 to 999 s
Factory setting	15

Ping retry

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Ping retry Direct access code: 470206-000
Description	Number of retries if the device does not respond.
User entry	0 to 5
Factory setting	0

Poll timeout

Navigation	 Expert → Communication → Ethernet → Configuration Web server → Timeouts → Poll timeout Direct access code: 470207-000
Description	Maximum permitted time to refresh the website.
User entry	5 to 999 s


Factory setting 5

"Serial interface" submenu

Navigation  Expert → Communication → Serial interface

Description Contains the set-up required if you are using the RS232 or RS485 unit interface.

Type


Navigation  Expert → Communication → Serial interface → Type
Direct access code: 150100-000

Description Configure how the serial interface is used. Pay attention to the connections.

Options RS232, RS485, Debug (only for service purposes)

Factory setting RS232

Protocol


Navigation  Expert → Communication → Serial interface → Protocol
Direct access code: 150105-000

Description Define the serial interface protocol.
Note: The device automatically disables incompatible settings.

Options PC software, Modbus Slave (only if type = RS485)

Factory setting PC software

Baud rate


Navigation  Expert → Communication → Serial interface → Baud rate
Direct access code: 150101-000

Description Transmission speed ("Baud rate") - must be the same as the settings for the PC software.


Options 9600, 19200, 38400, 57600, 115200

Factory setting 19200


Parity

Navigation	 Expert → Communication → Serial interface → Parity Direct access code: 150103-000
Description	Parity Only visible if protocol ≠ PC software.
Options	None, Even, Odd
Factory setting	None



Stop bits

Navigation	 Expert → Communication → Serial interface → Stop bits Direct access code: 150104-000
Description	Stop bits Only visible if protocol ≠ PC software.
Options	1, 2
Factory setting	1


Unit address

Navigation	 Expert → Communication → Serial interface → Unit address Direct access code: 150102-000
Description	Every unit operating using RS232/RS485 must have an individual address (00-30). Only visible if type = RS485.
User entry	0 to 30
Factory setting	0


"Modbus Slave" submenu (option)

Navigation	 Expert → Communication → Modbus Slave
Description	Configure the Modbus settings for the device.  Detailed descriptions of this device option can be found in the associated documentation.


Modbus

Navigation	 Expert → Communication → Modbus Slave → Modbus Direct access code: 480000-000
Description	Specify the physical interface you wish to use.
Options	Not used, RS485, Ethernet
Factory setting	Not used


Unit address

Navigation	 Expert → Communication → Modbus Slave → Unit address Direct access code: 480001-000
Description	Enter the device address where it should be possible to reach this device in the bus. Only visible if Modbus = RS485.
User entry	1 to 247
Factory setting	1


Port

Navigation	 Expert → Communication → Modbus Slave → Port Direct access code: 480004-000
Description	Port via which the Modbus protocol can be activated. Only visible if Modbus = Ethernet.
User entry	Number (max. 5 digits)
Factory setting	502


"Serial interface" submenu

Navigation	 Expert → Communication → Modbus Slave → Serial interface
Description	Contains settings for the serial interface. Only visible if Modbus = RS485.


Baud rate

Navigation	 Expert → Communication → Modbus Slave → Serial interface → Baud rate Direct access code: 150101-000
Description	Transmission speed ("Baud rate") - must be the same as the settings for the PC software. Only visible if Modbus = RS485.
Options	9600, 19200, 38400, 57600, 115200
Factory setting	19200

Parity

Navigation	 Expert → Communication → Modbus Slave → Serial interface → Parity Direct access code: 150103-000
Description	Parity Only visible if Modbus = RS485.
Options	None, Even, Odd
Factory setting	None



Stop bits


Navigation	 Expert → Communication → Modbus Slave → Serial interface → Stop bits Direct access code: 150104-000
Description	Parity Only visible if Modbus = RS485 and parity = none.
Options	1, 2
Factory setting	1

16.1.5 "Application" submenu

Configure various application-specific settings (e.g. group settings, limit values, etc.).

Submenu "Maths - Maths x"

Navigation	 Expert → Application → Maths → Maths x
Description	Configuration of the mathematics channels.  x = place holder for selected mathematics channel.


Function	
Navigation	 Expert → Application → Maths → Maths x → Function Direct access code: 400000-000 Examples: Maths 1: 400000-000; Maths 4: 400000-003
Description	Switch the mathematics channel on or off.
Options	Switched off, Formula editor
Factory setting	Switched off
Channel ident.	
Navigation	 Expert → Application → Maths → Maths x → Channel ident. Direct access code: 400001-000 Examples: Maths 1: 400001-000; Maths 4: 400001-003
Description	Measurement point name (e.g. "Pump") or description of the function of this input (e.g. "Fault message").
User entry	Text (max. 16 characters)
Factory setting	Maths x
Formula	
Navigation	 Expert → Application → Maths → Maths x → Formula Direct access code: 400002-000 Examples: Maths 1: 400002-000; Maths 4: 400002-003
Description	Enter the desired calculation formula. Analog, digital or already active mathematics channels can be used. Description of formula editor →  140 Only visible if Function = Formula Editor.
User entry	Formula
The result is	
Navigation	 Expert → Application → Maths → Maths x → The result is Direct access code: 400003-000 Examples: Maths 1: 400003-000; Maths 4: 400003-003

Description Configure which data type the calculation returns. This setting affects how the channel saves and is displayed.
 If you add 2 analog channels, for example, the result is a "current value".
 Instantaneous value: If, for example, 2 analog channels are added (AI(1;1)+AI(1;2)), the result is an instantaneous value.
 State: The state/status of an individual analog input can be output as the result. A relay can also be actuated as a result.
 Counter: If, for example, 2 counters from digital inputs are added (DI(3;1)+DI(3;5)), the result is a counter.
 Operating time from status: The status (logical "1" or "0") of one or more digital inputs that are connected by addition can be analyzed. If the result of the calculation is not equal to 0, the counter for the operating time starts. The time is increased by 0.1 s every 100 ms.
 Operating time from total: If several digital inputs that are configured as "operational time" are added together, the result is the total of all the individual operating times.
 Control input: The function corresponds to a digital input that has been configured as a control input.

Options Instantaneous value, State, Counter, Operating time from status, Operating time from total, Control input

Factory setting Instantaneous value

Plot type


Navigation  Expert → Application → Maths → Maths x → Plot type
 Direct access code: 400015-000
 Examples: Maths 1: 400015-000; Maths 4: 400015-003

Description The mathematics channels are recalculated every 100 ms.
 Depending on the save cycle, the selected data are determined/saved from the calculated values.

Options Instantaneous value, Average, Minimum value, Maximum value, Minimum + Maximum, Counter, Current value + Counter

Factory setting Average


Engineering unit

Navigation  Expert → Application → Maths → Maths x → Engineering unit
 Direct access code: 400004-000
 Examples: Maths 1: 400004-000; Maths 4: 400004-003


Description Unit of the calculated value.
 Only visible if the result is = instantaneous value or counter

User entry Text (max. 6 characters)


Decimal point

Navigation	 Expert → Application → Maths → Maths x → Decimal point Direct access code: 400005-000 Examples: Maths 1: 400005-000; Maths 4: 400005-003
Description	Number of places after decimal point for the display. Only visible if function = formula editor and the result is = instantaneous value or counter.
Options	None, One (X.Y), Two (X.YY), Three (X.YYY), Four (X.YYYY), Five (X.YYYYY)
Factory setting	One (X.Y)


Action

Navigation	 Expert → Application → Maths → Maths x → Action Direct access code: 400006-000 Examples: Maths 1: 400006-000; Maths 4: 400006-003																
Description	Set up the function of the control input. Only visible if the result is = control input.																
	<table border="1"> <thead> <tr> <th>Action</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Start/stop recording</td> <td>The device only saves data as long as a high signal is present.</td> </tr> <tr> <td>Screensaver on</td> <td>Switches backlight/display off, low = off, high = on.</td> </tr> <tr> <td>Lock setup</td> <td>The user can only change the setup if a low signal is present.</td> </tr> <tr> <td>Time synchronization</td> <td>If a high signal is applied, the device rounds the system time up or down (only for low→high change) to the nearest minute: 0 to 29 → Round down; 30 to 59 → round up.</td> </tr> <tr> <td>Set point monitoring on/off</td> <td>The entire set point monitoring function of the device can be switched on (for "high") or switched off (for "low").</td> </tr> <tr> <td>Block keyboard/navigator</td> <td>The device can only be operated if a low signal is present. Otherwise all key activation and navigator actions are discarded.</td> </tr> <tr> <td>Start/stop analysis 1</td> <td>Starts/ends the external analysis (the analysis only runs as long as the signal is high). Measured value acquisition for the graphic display continues.</td> </tr> </tbody> </table>	Action	Description	Start/stop recording	The device only saves data as long as a high signal is present.	Screensaver on	Switches backlight/display off, low = off, high = on.	Lock setup	The user can only change the setup if a low signal is present.	Time synchronization	If a high signal is applied, the device rounds the system time up or down (only for low→high change) to the nearest minute: 0 to 29 → Round down; 30 to 59 → round up.	Set point monitoring on/off	The entire set point monitoring function of the device can be switched on (for "high") or switched off (for "low").	Block keyboard/navigator	The device can only be operated if a low signal is present. Otherwise all key activation and navigator actions are discarded.	Start/stop analysis 1	Starts/ends the external analysis (the analysis only runs as long as the signal is high). Measured value acquisition for the graphic display continues.
Action	Description																
Start/stop recording	The device only saves data as long as a high signal is present.																
Screensaver on	Switches backlight/display off, low = off, high = on.																
Lock setup	The user can only change the setup if a low signal is present.																
Time synchronization	If a high signal is applied, the device rounds the system time up or down (only for low→high change) to the nearest minute: 0 to 29 → Round down; 30 to 59 → round up.																
Set point monitoring on/off	The entire set point monitoring function of the device can be switched on (for "high") or switched off (for "low").																
Block keyboard/navigator	The device can only be operated if a low signal is present. Otherwise all key activation and navigator actions are discarded.																
Start/stop analysis 1	Starts/ends the external analysis (the analysis only runs as long as the signal is high). Measured value acquisition for the graphic display continues.																
Options	Switched off, Start/stop recording, Screensaver on, Block set up, Time synchronization, Set point monitoring on/off, Block keyboard/navigator, Start/stop analysis 1																
Factory setting	Switched off																


Switches relay

Navigation	 Expert → Application → Maths → Maths x → Switches relay Direct access code: 400007-000 Examples: Maths 1: 400007-000; Maths 4: 400007-003
Description	Switches the respective relay when the digital input is low or high. Only visible if the result is = control input or state.
Options	Not used, Relay x All the available relays are displayed
Factory setting	Not used

Description 'H'


Navigation	 Expert → Application → Maths → Maths x → Description 'H' Direct access code: 400008-00x Examples: Maths 1: 400008-000; Maths 4: 400008-003
Description	Condition description when the digital input is active. This text is both shown in the display and saved to memory. Only visible if the result is = control input or state.
User entry	Text (max. 6 characters)
Factory setting	On

Description 'L'


Navigation	 Expert → Application → Maths → Maths x → Description 'L' Direct access code: 400009-00x Examples: Maths 1: 400009-000; Maths 4: 400009-003
Description	Condition description when the digital input is not active. This text is both shown in the display and saved to memory. Only visible if the result is = control input or state.
User entry	Text (max. 6 characters)
Factory setting	Off

Save event


Navigation	 Expert → Application → Maths → Maths x → Save event Direct access code: 400010-00x Examples: Maths 1: 400010-000; Maths 4: 400010-003
-------------------	---

Description	Determines whether the condition change from low to high or high to low is stored in the event log.  Requires higher memory capacity. Only visible if the result is = control input or state.
Options	No, Yes
Factory setting	Yes


Event message

Navigation	 Expert → Application → Maths → Maths x → Event message Direct access code: 400018-00x Examples: Maths 1: 400018-000; Maths 4: 400018-003
Description	"Do not acknowledge": No message is shown if the state of the mathematics channel changes. "Acknowledge": A message window is shown on the screen which has to be acknowledged by operating a push button. Only visible if the result is = control input or state.
Options	Do not acknowledge, Acknowledge
Factory setting	Do not acknowledge

Event text L->H


Navigation	 Expert → Application → Maths → Maths x → Event text L->H Direct access code: 400011-00x Examples: Maths 1: 400011-000; Maths 4: 400011-003
Description	Description of condition change from low to high. Event text is stored (e.g. Start filling). Only visible if the result is = control input or state.
User entry	Text (max. 22 characters)

Event text H->L

Navigation	 Expert → Application → Maths → Maths x → Event text H->L Direct access code: 400012-00x Examples: Maths 1: 400012-000; Maths 4: 400012-003
Description	Description of condition change from high to low. Event text is stored (e.g. Stop filling). Only visible if the result is = control input or state.

User entry Text (max. 22 characters)

Record duration

Navigation  Expert → Application → Maths → Maths x → Record duration
 Direct access code: 400013-00x
 Examples: Maths 1: 400013-000; Maths 4: 400013-003

Description The duration between "On" and "Off" can be recorded. The duration is appended to the "Off" event text (<hhhh>h<mm>:<ss>).
 Power failure times do not affect the duration. If the digital channel was "on" before the power failure and is still "on" after the power failure, the duration continues.
 Only visible if the result is = control input or state.

Options No, Yes

Factory setting No

Zoom start


Navigation  Expert → Application → Maths → Maths x → Zoom start
 Direct access code: 400016-00x
 Examples: Maths 1: 400016-000; Maths 4: 400016-003

Description If the whole value range is not used, you can configure the lower value of the required section here. Zooming does not affect the save function.
 Only visible if the result is = instantaneous value.

User entry Number (max. 8 digits)

Factory setting 0

Zoom end

Navigation  Expert → Application → Maths → Maths x → Zoom end
 Direct access code: 400017-00x
 Examples: Maths 1: 400017-000; Maths 4: 400017-003


Description Like "Zoom start". However, enter the upper value of the required range here.
 Only visible if the result is = instantaneous value.

User entry Number (max. 8 digits)

Factory setting 100

Totalizer

Navigation

 Expert → Application → Maths → Maths x → Totalizer
 Direct access code: 400014-00x
 Examples: Maths 1: 400014-000; Maths 4: 400014-003

Description

Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter.
 Only visible if the result is = counter, operating time from status or operating time from total.

User entry

Number (max. 15 digits)

Factory setting

0


Formula editor

Enter the desired calculation formula.

Analog, digital or already active mathematics channels can be used.

Formula editor

Navigation

 Expert → Application → Maths → Maths x → Formula
 Direct access code: 400002-000

 x = place holder for selected mathematics channel

 A text field with the formula currently used appears. If the field is empty a formula has not yet been defined for the mathematics channel.

Description

Individual channels can be mathematically linked and calculated with functions. The mathematics channels calculated in this way are treated as "real" channels, regardless of whether they are connected conventionally or via fieldbus. Enter the desired calculation formula.

Analog and digital channels can be used, as can mathematics channels that are already active.

A formula with up to 200 characters can be created using this editor. If the formula is finished, click OK to close the editor and accept the formula entered. The common entry and arithmetic operators and inputs are described in detail in the following sections.


Inputs

Inputs are described in the formula using the following syntax:

Input type (signal type;channel number)

Type of input	Description
AI	Analog inputs
DI	Digital inputs
MI	Mathematics inputs

Signal type	Description
1	Instantaneous value (measured value)
2	State
3	Counter/operational time
5	Validity: The validity of an analog or maths channel is returned. The relayed value of the function is 0 in the event of: <ul style="list-style-type: none"> ▪ Open circuit ▪ Invalid measured value ▪ Sensor error ▪ Input signal too high/low ▪ Error value The relayed value of the function is 1 in the event of: Measured value OK, even if the limit value is breached
6	Delta count
7...10	Analysis 1..4
11	Totalizer
12	Duration

 Not all signal types are available for each input type. These depend on the respective device options.

Channel number:

Analog channel 1 = 1, analog channel 2 = 2, digital channel 1 = 1, ...

Examples:

DI(2;4)	State of digital channel 4
AI(1;1)	Instantaneous value of analog channel 1

Status of a limit value:

LMT (type, limit number)

Type	Description
1	"Instantaneous value": Currently set limit value
2	"State": The function returns the status of a limit value The result is 1 if the limit value is violated. The result is 0 if <ul style="list-style-type: none"> ▪ The limit value is not violated ▪ The limit value is not switched on ▪ Limits monitoring is switched off (e.g. per control input)

Examples:

LMT (1;1)	Instantaneous value of limit value 1
LMT (2;3)	State of limit value 3

Priority of operators / functions

The formula is processed based on universally applicable mathematics rules:

- Parentheses first
- Exponents before multiplication or division
- Multiplication or division before addition or subtraction
- Calculate from left to right

*Operators**Arithmetic operators:*

Operator	Function
+	Addition
-	Subtraction / negative sign
*	Multiplication
/	Division

Decimal separator

Both the decimal point and the decimal comma can be used in the formula editor. Thousand separators are not supported.

Check whether formula is valid or malfunctions

A formula is invalid if:

- The channels used are not switched on or are in the wrong operating mode (is not verified during formula entry as the channel could be switched on subsequently)
- It contains invalid characters/formulas/functions/operators
- Syntax errors (e.g. wrong number of parameters) occur in the formulas
- There are incorrect parentheses in the formula (number of open parentheses unequal to number of closed parentheses)
- Division is by zero
- A channel refers to itself (infinite recursion)

Invalid formulas are deactivated when the setup is accepted or the device is started.

Undetectable errors: wherever possible, errors in the formula are reported immediately during input. However, given the possible complexity of the formula entered (e.g. nested formulas) it is not possible to detect every error.


"Totalization" submenu**Navigation**

 Expert → Application → Maths → Maths x → Totalization

Description

Settings only needed if the calculated value - e.g. for quantity calculation - should be integrated. Analysis time frames, see "Signal analysis".

Totalization**Navigation**

 Expert → Application → Maths → Maths x → Totalization → Totalization
 Direct access code: 400050-00x
 Examples: Maths 1: 400050-000; Maths 4: 400050-003


Description

By totalizing the analog signal (e.g. flow rate in m³/h) quantities (in m³) can be calculated.

Options No, Yes

Factory setting No

Totalization base


Navigation  Expert → Application → Maths → Maths x → Totalization → Totalization base
 Direct access code: 400051-00x
 Examples: Maths 1: 400051-000; Maths 4: 400051-003

Description Select the required time base. Example: ml/s → time base seconds (s); m³/h → time base hours (h).
 Only visible if totalization = yes.

Options Second (s), Minute (min), Hour (h), Day (d)

Factory setting Second (s)


Unit

Navigation  Expert → Application → Maths → Maths x → Totalization → Unit
 Direct access code: 400052-00x
 Examples: Maths 1: 400052-000; Maths 4: 400052-003

Description Enter the unit for the calculated quantity (e.g. "m³").
 Only visible if totalization = yes.

User entry Text (max. 6 characters)



Low flow cut off

Navigation  Expert → Application → Maths → Maths x → Totalization → Low flow cut off
 Direct access code: 400053-00x
 Examples: Maths 1: 400053-000; Maths 4: 400053-003

Description If the volume flow recorded is below the set value, these quantities are not added to the counter.
 If the input is scaled from 0 to y, or if the pulse input is used, all values that are smaller than the set value are not recorded.
 If the input is scaled from -x to +y, all values around the zero point (e.g. also negative values) are not recorded.
 Only visible if totalization = yes.


User entry Number (max. 8 digits)

Factory setting 0

Calc. factor	
Navigation	 Expert → Application → Maths → Maths x → Totalization → Calc. factor Direct access code: 400054-00x Examples: Maths 1: 400054-000; Maths 4: 400054-003
Description	Factor for calculating the integrated value (e.g. the transmitter delivers l/s → totalization base = second → engineering unit required is m ³ → enter factor 0.001) Only visible if totalization = yes.
User entry	Number (max. 8 digits)
Factory setting	1.0
Totalizer	
Navigation	 Expert → Application → Maths → Maths x → Totalization → Totalizer Direct access code: 400055-00x Examples: Maths 1: 400055-000; Maths 4: 400055-003
Description	Initial setting for the totalizer. Useful when continuing measurements recorded to date with an (electro)-mechanical counter. Only visible if totalization = yes.
User entry	Number (max. 15 digits)
Factory setting	0
"Fault mode" submenu	
Navigation	 Expert → Application → Maths → Maths x → Fault mode
Description	Contains settings that specify how this channel is to behave in the event of an error (e.g. if an input channel has a cable open circuit or there is division by 0).
On error	
Navigation	 Expert → Application → Maths → Maths x → Fault mode → On error Direct access code: 400060-00x Examples: Maths 1: 400060-000; Maths 4: 400060-003
Description	Configure what value the device should continue working with (for calculations) if the measured value is not valid (e.g. cable open circuit).
Options	Invalid calculation, Error value

Factory setting Invalid calculation

Error value


Navigation  Expert → Application → Maths → Maths x → Fault mode → Error value
 Direct access code: 400061-00x
 Examples: Maths 1: 400061-000; Maths 4: 400061-003

Description The device continues calculating with this value in the event of an error.
 Only visible if On error = Error value.

User entry Number (max. 8 digits)

Factory setting 0

Copy settings

Navigation  Expert → Application → Maths → Maths x → Copy settings
 Direct access code: 400200-00x
 Examples: Maths 1: 400200-000; Maths 4: 400200-003

Description Copies settings from actual channel to selected channel.

Options No, In maths. channel x
 Users can choose from all the available maths channels.


Factory setting No


"Signal analysis" submenu

Navigation  Expert → Application → Signal analysis


Description Contains settings for signal analysis (saving).

Analysis x


Navigation  Expert → Application → Signal analysis → Analysis x
 Direct access code: 44000x-000
 Examples: Analysis 1: 440000-000; Analysis 4: 440003-000

Description	For the set time frame, determines the minimum, maximum and average value or quantities and operating times.  If the "Externally controlled" option is to be used, a digital input or a maths channel must be set to "Function = Control input" and "Action = Start/stop analysis x". Only analysis 1 can be configured; analyses 2-4 are permanently set to daily analysis, monthly analysis and annual analysis
Options	Switched off, Externally controlled, 1min, 2min, 3min, 4min, 5min, 10min, 15min, 30min, 1h, 2h, 3h, 4h, 6h, 8h, 12h
Factory setting	Switched off


Synchron. time

Navigation	 Expert → Application → Signal analysis → Synchron. time Direct access code: 440004-000
Description	Time for completing the signal analysis. If, for example, 07:00 is set up then the daily analysis will run from 07:00 on the current day until 07:00 on the following day.
User entry	Time
Factory setting	00:00

Reset to zero

Navigation	 Expert → Application → Signal analysis → Reset to zero Direct access code: 440007-000
Description	Reset analysis. Note: should only be executed after the device has taken over the setup.
Options	Please select, Analysis x, Totalizer, All
Factory setting	Please select

Reset channel

Navigation	 Expert → Application → Signal analysis → Reset channel Direct access code: 440010-000
Description	Reset analysis of a single channel. Note: should only be executed after the device has taken over the setup.

Options Please select, Universal input x, Digital input x, Maths x, Set point x, Relay x
All active inputs are available for selection.


Factory setting Please select

"Limits" submenu

Navigation  Expert → Application → Limits

Description Limit values can monitor the measured values. A relay, for example, can be switched if a limit value is violated.

Add limit value


Navigation  Expert → Application → Limits → Add limit value
Direct access code: 450300-000

Description Adding a new limit value.

Options No, Yes

Factory setting No

Delete limit value

Navigation  Expert → Application → Limits → Delete limit value
Direct access code: 450301-000

Description Deleting a limit value from the list.


Options No, limit value x

Factory setting No


"Set point x" submenu

Navigation  Expert → Application → Limits → Limit x


Description View or change the setup for the selected alarm set point.

 x = place holder for selected limit value


Channel/value

Navigation	 Expert → Application → Limits → Limit x → Channel/value Direct access code: 450000-0xx Examples: Set point 1: 450000-000; Set point 30: 450000-029
Description	Select which input/calculated value the limit value refers to.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off



Type

Navigation	 Expert → Application → Limits → Limit x → Type Direct access code: 450001-0xx Examples: Set point 1: 450001-000; Set point 30: 450001-029
Description	Type of limit value (depends on the input variable).
Options	Switched off, Upper set point, Lower set point, Analysis x

Description of the individual set point types

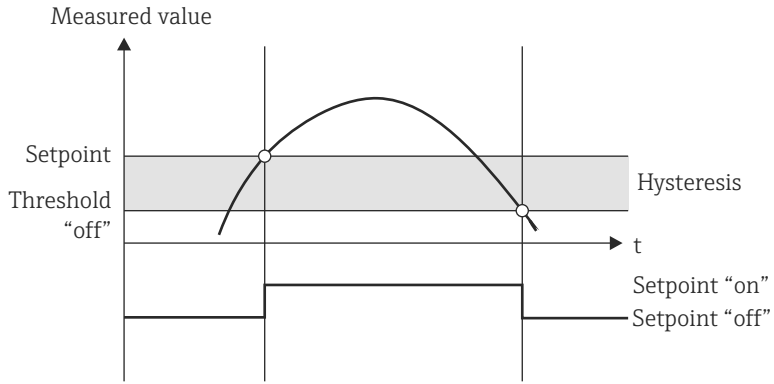Set point type/function	Description
Hysteresis	For every set point, the switch point can be controlled via a hysteresis. The hysteresis is set as an absolute value (positive values only) in the unit of the respective channel (e.g. upper set point = 100 m, hysteresis = 1 m: Set point on = 100 m, set point off = 99 m).
Upper set point	The limit value is active if the value exceeds the configured value. The limit value is switched off if the limit value, including hysteresis, is undershot. <div style="text-align: center; margin-top: 10px;">  </div>

A0010187-EN

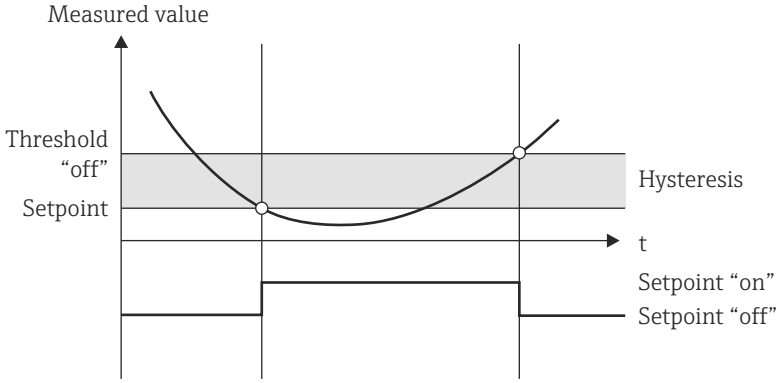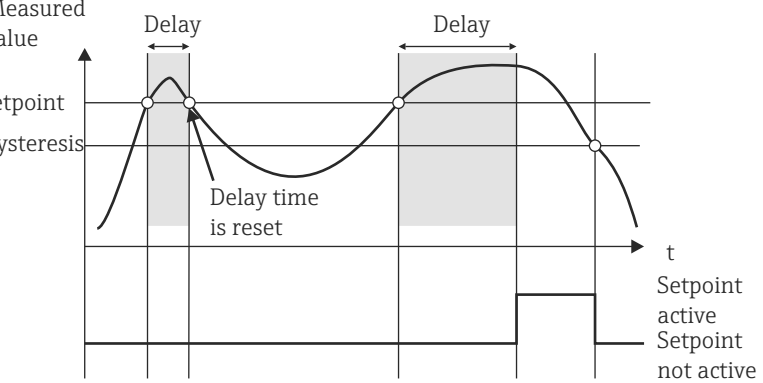
Set point type/function	Description
Lower set point	<p>The limit is active if the value drops below the configured value. The limit value is switched off if the limit value, including hysteresis, is exceeded.</p>  <p style="text-align: right;"><small>A0010186-EN</small></p>
Special case: Hysteresis and delay for one limit value	<p>In the special case that hysteresis and limit value delay are activated, one limit value is switched according to the following principle. If hysteresis and limit value delay are activated, the delay becomes active when a limit value is exceeded and measures the time from which the value is exceeded. If the measured value falls below the limit value, the delay is reset. This also occurs if the measured value falls below the limit value, but continues to be higher than the set hysteresis value. When the limit value is exceeded again, the time delay once more becomes active and starts measuring from 0.</p>  <p style="text-align: right;"><small>A0010193-EN</small></p>

Factory setting

Switched off

Identifier

Navigation

 Expert → Application → Limits → Limit x → Identifier
 Direct access code: 450015-0xx
 Examples: Set point 1: 450015-000; Set point 30: 450015-029

Description

Name of the set point for identification purposes.


User entry

Text (max. 16 characters)


Factory setting

Limit x


Set point

Navigation	 Expert → Application → Limits → Limit x → Set point Direct access code: 450003-0xx Examples: Set point 1: 450003-000; Set point 30: 450003-029
Description	Limit value in the set process unit, e.g. in °C, m ³ /h.
User entry	Number (max. 10 digits)
Factory setting	0


Hysteresis (abs.)

Navigation	 Expert → Application → Limits → Limit x → Hysteresis (abs.) Direct access code: 450004-0xx Examples: Set point 1: 450004-000; Set point 30: 450004-029
Description	The alarm condition is only canceled when the signal has changed into the normal operation range by the preset value.
User entry	Number (max. 8 digits)
Factory setting	0

Time delay


Navigation	 Expert → Application → Limits → Limit x → Time delay Direct access code: 450005-0xx Examples: Set point 1: 450005-000; Set point 30: 450005-029
Description	In order to be interpreted as an alarm the signal must exceed or undercut the preset value by at least the time set up.
User entry	0 to 99999 s
Factory setting	0 s

Switches


Navigation	 Expert → Application → Limits → Limit x → Switches Direct access code: 450006-0xx Examples: Set point 1: 450006-000; Set point 30: 450006-029
-------------------	---

Description	Switches the appropriate output in the limit value state.
Options	Not used, Relay x
Factory setting	Not used


LV messages

Navigation	 Expert → Application → Limits → Limit x → LV messages Direct access code: 450007-0xx Examples: Set point 1: 450007-000; Set point 30: 450007-029
Description	"Do not acknowledge": Alarm condition is signaled by highlighting the tag name in red (no message is output). "Acknowledge": In the event of an alarm, a message is also displayed. This message then has to be acknowledged.
Options	Do not acknowledge, Acknowledge
Factory setting	Do not acknowledge


Save event

Navigation	 Expert → Application → Limits → Limit x → Save event Direct access code: 450008-0xx Examples: Set point 1: 450008-000; Set point 30: 450008-029
Description	Stores a message in the event log on limit value violation.
Options	No, Yes
Factory setting	Yes


Event text LV on

Navigation	 Expert → Application → Limits → Limit x → Event text LV on Direct access code: 450009-0xx Examples: Set point 1: 450009-000; Set point 30: 450009-029
Description	This text (including date and time) is shown on the display and/or stored in the event log. Only available if "LV messages" is set to "Acknowledge" or "Save message" is set to "Yes". If no text is entered, the device generates its own text (e.g. Analog 1 > 100%).
User entry	Text (max. 22 characters)




Event text LV off

Navigation	 Expert → Application → Limits → Limit x → Event text LV off Direct access code: 450010-0xx Examples: Set point 1: 450010-000; Set point 30: 450010-029
Description	The same as "Event text LV on", but on return from alarm to normal condition.
User entry	Text (max. 22 characters)


Record duration of LV on

Navigation	 Expert → Application → Limits → Limit x → Record duration of LV on Direct access code: 450011-0xx Examples: Set point 1: 450011-000; Set point 30: 450011-029
Description	The duration of a set point violation can be recorded. The duration is appended to the "limit value off" event text (format: <hhh>h<mm>:<ss>). Power failure times do not affect the duration. If the set point was violated before the power failure and is still violated after the power failure, the duration continues.
Options	No, Yes
Factory setting	No


Save cycle

Navigation	 Expert → Application → Limits → Limit x → Save cycle Direct access code: 450012-0xx Examples: Set point 1: 450012-000; Set point 30: 450012-029
Description	Normal: Save in normal store cycle. Alarm cycle: Fast storage during an alarm violation, e.g. every second. Attention: Requires higher memory capacity.  <ul style="list-style-type: none"> ▪ The save cycle is set under signal groups . →  154 ▪ In the event of an alarm violation, all the groups are saved in the alarm cycle.
Options	Normal, Alarm cycle
Factory setting	Normal



Draw help line

Navigation	 Expert → Application → Limits → Limit x → Draw help line Direct access code: 450013-0xx Examples: Set point 1: 450013-000; Set point 30: 450013-029
Description	The user can configure whether this set point should be displayed in the graphic as a help line (in the color of the channel). Note: 4 lines can be shown per channel in a single group.
Options	No, Yes
Factory setting	No



Copy settings

Navigation	 Expert → Application → Limits → Limit x → Copy settings Direct access code: 450200-0xx Examples: Set point 1: 450200-000; Set point 30: 450200-029
Description	Copies settings from actual channel to selected channel.
Options	No, in limit x (all the limits are displayed)
Factory setting	No


"Signal groups" submenu

Navigation	 Expert → Application → Signal groups
Description	Group the analog, digital and/or mathematics channels such that you can call up important information at the press of a button during operation (e.g. temperatures, signals in plant unit 1).  Maximum 8 channels per group!

"Group x" submenu

Navigation	 Expert → Application → Signal groups → Group x
Description	 x = place holder for selected group. Various general settings for measured value display of the device.

Identifier


Navigation	 Expert → Application → Signal groups → Group x → Identifier Direct access code: 460000-0xx Examples: Group 1: 460000-000; Group 4: 460000-003
-------------------	---

Description Enter a name for these groups.


User entry Text (max. 20 characters)

Factory setting Group x

Save cycle

Navigation  Expert → Application → Signal groups → Group x → Save cycle
Direct access code: 460001-0xx
Examples: Group 1: 460001-000; Group 4: 460001-003


Description Configure the save cycle with which this group should be saved in normal conditions (see also set point/save cycle).

 The save cycle is independent of the measured value display (see Operating Instructions).

Options Off, 1s, 2s, 3s, 4s, 5s, 10s, 15s, 20s, 30s, 1min, 2min, 3min, 4min, 5min, 10min, 15min, 30min, 1h

Factory setting 1min

Alarm cycle


Navigation  Expert → Application → Signal groups → Group x → Alarm cycle
Direct access code: 460002-0xx
Examples: Group 1: 460002-000; Group 4: 460002-003

Description Configure the save cycle with which this group should be saved in an alarm condition (set point violation).
Attention: Requires higher memory capacity.

Options Off, 1s, 2s, 3s, 4s, 5s, 10s, 15s, 20s, 30s, 1min, 2min, 3min, 4min, 5min, 10min, 15min, 30min, 1h

Factory setting 1min

Display blue


Navigation  Expert → Application → Signal groups → Group x → Display blue
Direct access code: 460003-00x
Examples: Group 1: 460003-000; Group 4: 460003-003


Description Choose which input/calculate variable should be displayed in this group.

Options Switched off, Universal input x, Digital input x, Maths x

Factory setting Switched off

Display


Navigation  Expert → Application → Signal groups → Group x → Display
 Direct access code: 460004-00x
 Examples: Group 1: 460004-000; Group 4: 460004-003

Description Please select which data from the selected channel should be displayed.
 If the "Everything" option is selected, the device switches cyclically between the various values of the channel (instantaneous value, analysis 1 etc.)

Options Instantaneous value/state, Analysis x, Totalizer, Everything

Factory setting Instantaneous value/state

Display black


Navigation  Expert → Application → Signal groups → Group x → Display black
 Direct access code: 460005-00x
 Examples: Group 1: 460005-000; Group 4: 460005-003

Description Choose which input/calculate variable should be displayed in this group.

Options Switched off, Universal input x, Digital input x, Maths x

Factory setting Switched off

Display


Navigation  Expert → Application → Signal groups → Group x → Display
 Direct access code: 460006-0xx
 Examples: Group 1: 460006-000; Group 4: 460006-003

Description Please select which data from the selected channel should be displayed.


Options Instantaneous value/state, Analysis x, Totalizer, Everything

Factory setting Instantaneous value/state


Display red

Navigation	 Expert → Application → Signal groups → Group x → Display red Direct access code: 460007-00x Examples: Group 1: 460007-000; Group 4: 460007-003
Description	Choose which input/calculate variable should be displayed in this group.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off


Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460008-0xx Examples: Group 1: 460008-000; Group 4: 460008-003
Description	Please select which data from the selected channel should be displayed.
Options	Instantaneous value/state, Analysis x, Totalizer, Everything
Factory setting	Instantaneous value/state


Display green

Navigation	 Expert → Application → Signal groups → Group x → Display green Direct access code: 460009-00x Examples: Group 1: 460009-000; Group 4: 460009-003
Description	Choose which input/calculate variable should be displayed in this group.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off


Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460010-0xx Examples: Group 1: 460010-000; Group 4: 460010-003
Description	Please select which data from the selected channel should be displayed.
Options	Instantaneous value/state, Analysis x, Totalizer, Everything
Factory setting	Instantaneous value/state


Display violet

Navigation	 Expert → Application → Signal groups → Group x → Display violet Direct access code: 460011-00x Examples: Group 1: 460011-000; Group 4: 460011-003
Description	Choose which input/calculated variable should be displayed in this group.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off


Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460012-0xx Examples: Group 1: 460012-000; Group 4: 460012-003
Description	Please select which data from the selected channel should be displayed.
Options	Instantaneous value/state, Analysis x, Totalizer, Everything
Factory setting	Instantaneous value/state

Display orange

Navigation	 Expert → Application → Signal groups → Group x → Display orange Direct access code: 460013-00x Examples: Group 1: 460013-000; Group 4: 460013-003
Description	Choose which input/calculate variable should be displayed in this group.
Options	Switched off, Universal input x, Digital input x, Maths x
Factory setting	Switched off


Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460014-0xx Examples: Group 1: 460014-000; Group 4: 460014-003
Description	Please select which data from the selected channel should be displayed.

Options Instantaneous value/state, Analysis x, Totalizer, Everything

Factory setting Instantaneous value/state

Display cyan


Navigation  Expert → Application → Signal groups → Group x → Display cyan
Direct access code: 460015-00x
Examples: Group 1: 460015-000; Group 4: 460015-003

Description Choose which input/calculate variable should be displayed in this group.

Options Switched off, Universal input x, Digital input x, Maths x

Factory setting Switched off

Display


Navigation  Expert → Application → Signal groups → Group x → Display
Direct access code: 460016-0xx
Examples: Group 1: 460016-000; Group 4: 460016-003

Description Please select which data from the selected channel should be displayed.

Options Instantaneous value/state, Analysis x, Totalizer, Everything

Factory setting Instantaneous value/state

Display brown


Navigation  Expert → Application → Signal groups → Group x → Display brown
Direct access code: 460017-00x
Examples: Group 1: 460017-000; Group 4: 460017-003

Description Choose which input/calculate variable should be displayed in this group.


Options Switched off, Universal input x, Digital input x, Maths x

Factory setting Switched off


Display

Navigation	 Expert → Application → Signal groups → Group x → Display Direct access code: 460018-0xx Examples: Group 1: 460018-000; Group 4: 460018-003
Description	Please select which data from the selected channel should be displayed.
Options	Instantaneous value/state, Analysis x, Totalizer, Everything
Factory setting	Instantaneous value/state




Grid divisions

Navigation	 Expert → Application → Signal groups → Group x → Grid divisions Direct access code: 460019-0xx Examples: Group 1: 460019-000; Group 4: 460019-003
Description	Indicates the number of lines ("amplitude grid") that should be displayed. Example: display of 0 to 100%: select 10 divisions, display 0 to 14pH: select 14 divisions.
Options	1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12, 13, 14, 15, 16, 17, 18, 19, 20
Factory setting	10


Zoom

Navigation	 Expert → Application → Signal groups → Group x → Zoom Direct access code: 460028-0xx Examples: Group 1: 460028-000; Group 4: 460028-003
Description	Defines the zoom that is shown in "Curves" or "Waterfall" display mode. This setting does not affect other display modes (e.g. Curves in range, Bar graph etc.).
Options	Do not display, Scroll display, Display blue, Display black, Display red, Display green, Display violet, Display orange, Display cyan, Display brown
Factory setting	Do not display


"E-mail" submenu

Navigation	 Expert → Application → E-mail  With Tele-Alarm option under Expert → Application → Tele-Alarm → General → E-mail setup
Description	Contains settings required if alarms are to be transmitted by e-mail.  Test the e-mail settings under Diagnostics → Simulation → E-mail.


SMTP host

Navigation	 Expert → Application → E-mail → SMTP host Direct access code: 510062-000
Description	Enter your SMTP host here. If necessary, contact your network administrator or e-mail provider.
User entry	Text (max. 40 characters)

Server requires SSL

Navigation	 Expert → Application → E-mail → Server requires SSL Direct access code: 510061-000
Description	Specify whether the e-mail server requires a secure connection (SSL). STARTTLS: Runs on the same TCP port as unencrypted SMTP (port 25 or 587). SMTPS: Completely encrypted with own TCP port (465). If necessary, contact your network administrator or e-mail provider.
Options	No, Yes (SMTPS), Yes (STARTTLS)
Factory setting	No


Port

Navigation	 Expert → Application → E-mail → Port Direct access code: 510063-000
Description	Enter your SMTP port here. If necessary, contact your network administrator or e-mail provider.
User entry	Number (max. 4 digits)
Factory setting	25

Sender

Navigation	 Expert → Application → E-mail → Sender Direct access code: 510064-000
-------------------	--

Description Enter the e-mail address of the device here (this text appears as the sender of the e-mail). If necessary, contact your network administrator or e-mail provider.

 If a valid e-mail address is not configured this might cause e-mail transmission problems, depending on the particular provider.

User entry Text (max. 60 characters)

User name

Navigation  Expert → Application → E-mail → User name
Direct access code: 510066-000

Description Configure the user name of the e-mail account here. If necessary, contact your network administrator or e-mail provider.

User entry Text (max. 60 characters)


Password

Navigation  Expert → Application → E-Mail → Password
Direct access code: 510067-000

Description Enter the password for authentication here. If necessary, contact your network administrator or e-mail provider.

User entry Text (max. 22 characters)


"E-mail addresses" submenu

Navigation  Expert → Application → E-mail → E-mail addresses

Description Here, enter all the e-mail addresses messages should be sent to in the event of an alarm.

 Assignment to the alarms is performed later on.

E-mail address x


Navigation  Expert → Application → E-mail → E-mail addresses → E-mail address x
Direct access code:
E-mail address 1: 510080-000
...
E-mail address 5: 510084-000

Description Here, enter an e-mail address a message should be sent to.

 Assignment to the alarms is performed later on.

User entry Text (max. 60 characters)


"Limit value violations" submenu

Navigation  Expert → Application → E-mail → Limit value violations

Description Specify who should receive e-mails when limit value violations occur (both on and off messages).

 Only for limit values where "Save message" is set to "Yes".

Recipient x


Navigation  Expert → Application → E-mail → Limit value violations → Recipient x
Direct access code:
Recipient 1: 510110-000; Recipient 2: 510111-000

Description Select who should receive the e-mail.

Options Not used, E-mail address x

Factory setting Not used


"On/off messages" submenu

Navigation  Expert → Application → E-mail → On/off messages

Description Specify who should receive e-mails when "on"/"off" messages occur (for digital inputs or maths channels).

 Only for inputs where "Save message" is set to "Yes".

Recipient x


Navigation  Expert → Application → E-mail → On/off messages → Recipient x
Direct access code:
Recipient 1: 510115-000; Recipient 2: 510116-000

Description Select who should receive the e-mail.

Options Not used, E-mail address x


Factory setting Not used

"Errors (Fxxx/Sxxx)" submenu

Navigation  Expert → Application → E-mail → Errors (Fxxx/Sxxx)

Description Specify who should receive e-mails when errors occur (Fxxx and Sxxx messages).

Recipient x


Navigation  Expert → Application → E-mail → Errors → Recipient x
 Direct access code:
 Recipient 1: 510120-000; Recipient 2: 510121-000

Description Select who should receive the e-mail.

Options Not used, E-mail address x


Factory setting Not used

"Maintenance required" (submenu)

Navigation  Expert → Application → E-mail → Maintenance required

Description Specify who should receive e-mails when maintenance is required (Mxxx messages).

Recipient x

Navigation  Expert → Application → E-mail → Maintenance required → Recipient x
 Direct access code:
 Recipient 1: 510130-000; Recipient 2: 510131-000

Description Select who should receive the e-mail.

Options Not used, E-mail address x




Factory setting Not used


"WebDAV Client" submenu

Navigation  Expert → Application → WebDAV Client

Description


All recorded data are transmitted to an external WebDAV server (e.g. NAS). The format can be specified or selected via **"Setup → Advanced setup → System → External memory → Save as"**.

Parameters	Description	Direct access code
Enable	Switch the WebDAV Client functionality on/off. When active, the device copies the saved measured values automatically to the configured server.  Only possible using the Ethernet interface! Selection: No, Yes, Yes (SSL) Factory setting: No	472000-000
IP address	Enter the IP address of the WebDAV server here.  A DNS name can also be used. Entry: IP address Factory setting: 0.0.0.0	472001-000
Port	This communication port is used to communicate with the WebDAV Server.  If your network is protected by a firewall, this port may have to be enabled. Please contact your network administrator if this is the case. Entry: Numbers (max. 5 digits) Factory setting: 80	472002-000
User name	Input of the user name that can access the WebDAV server. Entry: Text (max. 20 characters)	472004-000
Password	Password for accessing the WebDAV server. Entry: Text (max. 20 characters)	472007-000
Directory	Enter the directory in which the data should be saved. Entry: Text (max. 120 characters)	472005-000
Save as	"Protected format": All data are stored in a manipulation protected encrypted format. They can be interpreted only by the PC analysis software provided. "Open format": data are stored in a CSV format, this can be opened by a number of different programs (e.g. MS Excel) (Attention: no manipulation security). Selection: protected format, open format (*.csv) Factory setting: protected format	472010-000


 Test of WebDAV Client settings under **"Diagnostics → Simulation → WebDAV Client"**.

16.1.6 "Diagnostics" submenu

Device information and service functions for a swift device check.

 Only some of the diagnostic functions are available under Expert → Diagnostics. For other functions, see Main menu → Diagnostics.

Actual diagnostics**Navigation**

 Expert → Diagnostics → Actual diagnostics
Direct access code: 050000-000

Description


Displays the current diagnosis message.

Last diagnostics

Navigation  Expert → Diagnostics → Last diagnostics
Direct access code: 050005-000


Description Displays the last diagnosis message.

Last restart

Navigation  Expert → Diagnostics → Last restart
Direct access code: 050010-000


Description Information as to when the device was last restarted (e.g. due to a power failure).

"Diagnosis list" submenu

Navigation  Expert → Diagnostics → Diagnosis list


Description All diagnosis messages are listed in chronological order.

"Event logbook" submenu

Navigation  Expert → Diagnostics → Event logbook


Description Events such as alarm set point infringement and power failure are listed in the correct time sequence.

"Device information" submenu


Navigation  Expert → Diagnostics → Device information



Description Displays important device information.


Device tag


Navigation  Expert → Diagnostics → Device information → Device tag
Direct access code: 000031-000


Description Individual device tag name/unit identifier (max. 32 characters).

Serial number	
Navigation	 Expert → Diagnostics → Device information → Serial number Direct access code: 000027-000
Description	Individual serial number of the device. Please provide these details when ordering spare parts or asking any questions about the unit.

Order code	
Navigation	 Expert → Diagnostics → Device information → Order code Direct access code: 000029-000
Description	Displays the order code. The order code indicates the attribute of all the features of the product structure for the device and thus uniquely identifies the device. It can also be found on the nameplate.  Uses of the order code <ul style="list-style-type: none"> ■ To order an identical spare device. ■ To check the ordered device features using the delivery note.


Firmware Version	
Navigation	 Expert → Diagnostics → Device information → Firmware Version Direct access code: 000026-000
Description	Displays the installed firmware version of the device. Please send these details with any questions about the unit.

ENP version	
Navigation	 Expert → Diagnostics → Device information → ENP version Direct access code: 000032-000
Description	Displays the version of the electronic nameplate. Please send these details with any questions about the unit.

ENP device name	
Navigation	 Expert → Diagnostics → Device information → ENP device name Direct access code: 000020-000


Description Displays the ENP device name (electronic name plate). Please send these details with any questions about the unit.

Device name

Navigation  Expert → Diagnostics → Device information → Device name
Direct access code: 000021-000


Description Displays the device name. Please send these details with any questions about the unit.

Manufacturer ID

Navigation  Expert → Diagnostics → Device information → Manufacturer ID
Direct access code: 000022-000


Description Displays the manufacturer ID. Please send these details with any questions about the unit.

Manufacturer name

Navigation  Expert → Diagnostics → Device information → Manufacturer name
Direct access code: 000023-000


Description Displays the manufacturer name. Please send these details with any questions about the unit.

Firmware

Navigation  Expert → Diagnostics → Device information → Firmware
Direct access code: 009998-000


Description Displays the installed firmware of the device. Please send these details with any questions about the unit.

"Simulation" submenu

Navigation  Expert → Diagnostics → Simulation

Description Settings for simulation mode.

Operating mode

Navigation	 Expert → Diagnostics → Simulation → Operating mode Direct access code: 010010-000
Description	Normal operation: Unit plots the signals from the connected measurement points. Simulation: Instead of operating with the real measurement points the signals are simulated (using the actual settings).
Options	Normal operation, Simulation
Factory setting	Normal operation

Index

0 ... 9

- 1 hour= (parameter) 114
- 1 second= (parameter) 114

A

- Access code (parameter) 87
- Acknowledging messages (parameter) 92
- Action (parameter) 114
- Activation code (parameter) 94
- Actual diagnostics (parameter) 164
- Actual value (parameter) 105
- Add input (parameter) 96, 111
- Add limit value (parameter) 147
- Admin ID (parameter) 126
- Admin password (parameter) 126
- Administrator (parameter) 126
- Administrator, ID, password (parameter) 88
- Alarm cycle (parameter) 154
- Alarm response (parameter) 93
- Analysis software
 - Function scope 28
- Analysis x (parameter) 145
- Application (parameter) 95
- Application (submenu) 133
- Authentication (submenu) 88

B

- Baud rate (parameter) 130
- Begin summer time (parameter) 83

C

- Cable open circuit detection (parameter) 108
- Calc. factor (parameter) 107, 144
- CE mark (declaration of conformity) 8
- CE-mark 76
- Change date/time (submenu) 81
- Channel ident. (parameter) 98, 112
- Channel/value (parameter) 147
- Clear memory (parameter) 80
- Communication
 - Ethernet TCP/IP 18
- Communication (parameter) 95
- Communication (submenu) 119
- Comparison point (parameter) 103
- Comparison temp. (parameter) 103
- Configuration Web server (submenu) 123
- Connection quality (parameter) 127
- Connection type (parameter) 97
- Copy settings (parameter) 111, 118, 145, 153
- Correction RPT (parameter) 104
- Counter engineering unit (parameter) 99
- CSA 76
- CSV settings (parameter) 91
- Current date/time (parameter) 81

D

- Damping (parameter) 102

- Date (parameter) 84, 85
- Date format (parameter) 80
- Date/time (parameter) 82, 91
- Date/time (submenu) 81
- Date/time setup (submenu) 80
- Day (parameter) 83, 84
- Decimal point (parameter) 100, 113
- Decimal separator (parameter) 78
- Declaration of Conformity 8
- Delete input (parameter) 96, 111
- Delete limit value (parameter) 147
- Description 'H' (parameter) 115, 137
- Description 'L' (parameter) 116, 137
- Device info (submenu) 165
- Device name 167
- Device options (submenu) 94
- Device tag 165
- Device tag (parameter) 77
- DHCP (parameter) 120
- Diagnosis list (submenu) 165
- Diagnostic messages 50
- Diagnostics (submenu) 164
- Digital inputs (submenu) 111
- Direct access (parameter) 77
- Disable port (parameter) 122
- Display (parameter) 155, 156, 157, 158
- Display black (parameter) 155
- Display blue (parameter) 154
- Display brown (parameter) 158
- Display cyan (parameter) 158
- Display green (parameter) 156
- Display orange (parameter) 157
- Display red (parameter) 155
- Display violet (parameter) 157
- Domain Name System (DNS) (parameter) 122
- Draw help line (parameter) 152

E

- E-mail (submenu) 159
- E-mail address x (parameter) 161
- E-mail addresses (submenu) 161
- End summer time (parameter) 84
- Engineering unit (parameter) 99, 113
- ENP device name 166
- ENP version 166
- Error (Fxxx/Sxxx) (submenu) 163
- Error messages 50
- Error value (parameter) 110, 145
- Ethernet 30
- Ethernet (submenu) 120
- Event logbook (submenu) 165
- Event message (parameter) 116, 138
- Event text H->L (parameter) 117, 138
- Event text L->H (parameter) 117, 138
- Event text LV off (parameter) 152
- Event text LV on (parameter) 151

Expert (Menu) 77
 External memory (submenu) 89

F

Fault mode (submenu) 108, 144
 Fault switching (parameter) 78
 Fieldbus (parameter) 95
 Firmware (parameter) 167
 Firmware update (parameter) 124
 Firmware Version (parameter) 166
 Formula (parameter) 134
 Formula editor (parameter) 140
 Formula editor (submenu) 140
 Function (parameter) 112

G

Gateway (parameter) 121
 Get timeout (parameter) 128
 Grid divisions (parameter) 159
 Group x (submenu) 153

H

Hysteresis (abs.) (parameter) 150

I

Identifier (parameter) 119, 149, 153
 Input factor in (parameter) 113
 Inputs (submenu) 96
 IP address (parameter) 121

K

Keyboard layout (parameter) 78

L

Language (parameter) 77
 Last diagnostics (parameter) 165
 Last restart (parameter) 165
 Limit value violations (submenu) 162
 Limit x (submenu) 147
 Limits (submenu) 147
 Lock hardware (parameter) 88
 Lock operation (parameter) 79
 Low flow cut off (parameter) 107, 143
 Lower error value (parameter) 109
 Lower frequency (parameter) 100
 LV messages (parameter) 151

M

MAC-address (parameter) 120
 Maintenance required (submenu) 163
 Manufacturer ID (parameter) 167
 Manufacturer name 167
 Maths (submenu) 133
 Maths x action (parameter) 136
 Maths x channel ident. (parameter) 134
 Maths x decimal point (parameter) 136
 Maths x engineering unit (parameter) 135
 Maths x function (parameter) 134
 Maths x plot type (parameter) 135
 Measured value correction (submenu) 104

Memory build-up (parameter) 90
 Messages (submenu) 91
 Modbus (parameter) 132
 Modbus RTU/(TCP/IP) 30
 Modbus Slave (submenu) 131
 Modbus Slave baud rate (parameter) 132
 Modbus Slave parity (parameter) 133
 Modbus Slave serial interface (submenu) 132
 Modbus Slave stop bits (parameter) 133
 Month (parameter) 83, 85

N

NAMUR NE 43 (parameter) 108
 NT/ST changeover (parameter) 82
 NT/ST changeover (submenu) 82
 NT/ST region (parameter) 82

O

Occurrence (parameter) 83, 84
 OFF daily from (parameter) 93
 Offset (parameter) 104
 ON daily from (parameter) 93
 On error (parameter) 110, 144
 On/off messages (submenu) 162
 OPC port (parameter) 123
 OPC server
 Function scope 29
 Operating mode (parameter) 119, 168
 Operating time (parameter) 91
 Operation options
 Local operation 22
 Operating tool 22
 Overview 22
 Operational safety 7
 Operator (parameter) 125
 Operator ID (parameter) 125
 Operator password (parameter) 126
 Operator, ID, password (parameter) 88
 Order code 166
 Other standards and guidelines 76
 Outputs (submenu) 118
 Overview of symbols 26

P

Paper size (parameter) 79
 Parity (parameter) 131
 Password (parameter) 161
 Ping interval (parameter) 128
 Ping retry (parameter) 129
 Ping timeout (parameter) 129
 Plot type (parameter) 98
 Poll timeout (parameter) 129
 Port (parameter) 122, 123, 132, 160
 PRESET (parameter) 79
 Product safety 8
 Protected by (parameter) 87
 Protocol (parameter) 130
 Pulse counter (parameter) 99
 Put timeout (parameter) 128

R

Range (parameter) 97
 Range start (parameter) 100, 104
 Recipient x (parameter) 162, 163
 Record duration (parameter) 117, 139
 Record duration of LV on (parameter) 152
 Registered trademarks 6
 Relay (submenu) 118
 Remote control (parameter) 124
 Reset channel (parameter) 146
 Reset to zero (parameter) 146

S

Save as (parameter) 89
 Save cycle (parameter) 152, 154
 Save event (parameter) 110, 116, 137, 151
 Screen saver (parameter) 92
 Screen saver (submenu) 92
 SD card (parameter) 89
 Security (submenu) 87
 Sender (parameter) 160
 Separator for CSV (parameter) 91
 Serial interface (submenu) 130
 Serial number 166
 Server requires SSL (parameter) 160
 Service (parameter) 126
 Service ID (parameter) 127
 Service password (parameter) 127
 Service, ID, password (parameter) 89
 Set point (parameter) 150
 Set point code (parameter) 87
 Set timeout (parameter) 128
 Setup (parameter) 124
 Setup via Web server 33
 Signal (parameter) 96
 Signal analysis (submenu) 145
 Signal groups (submenu) 153
 Simulation (submenu) 167
 Slot 1 (parameter) 94
 Slot 2 (parameter) 94
 Slot 3 (parameter) 95
 SMTP host (parameter) 160
 SNTP (parameter) 86
 SNTP (submenu) 86
 SNTP server 1 (parameter) 86
 SNTP server 2 (parameter) 86
 Staff
 Requirements 7
 Stop bits (parameter) 131
 Structure of the operating menu 22, 23
 Subnet mask (parameter) 121
 Swap mouse buttons (parameter) 79
 Switches (parameter) 120, 150
 Switches relay (parameter) 90, 92, 115, 136
 Symbols
 Event logbook 27
 Operating menus 27
 Synchron. time (parameter) 146
 System (submenu) 77

T

Target value (parameter) 104, 105
 Temperature unit (parameter) 78
 Text entry 27
 The result is (parameter) 134
 Time (parameter) 84, 85
 Time base (parameter) 98
 Time delay (parameter) 109, 114, 150
 Time format (parameter) 80
 Timeout (parameter) 119
 Timeout fieldbus (parameter) 120
 Timeouts (submenu) 127
 Totalization (parameter) 106, 142
 Totalization (submenu) 106, 142
 Totalization base (parameter) 106, 143
 Totalizer (parameter) 103, 108, 118, 140, 144
 Troubleshooting
 Alarm relay 49
 Type (parameter) 148
 Type RS232/RS485 (parameter) 130

U

UL approval 76
 Unit (parameter) 107, 143
 Unit address (parameter) 131, 132
 Universal input x (submenu) 96
 Universal inputs (submenu) 96
 Upper error value (parameter) 109
 Upper frequency (parameter) 101
 Upper range value (parameter) 101, 105
 User name (parameter) 161
 UTC time zone (parameter) 81

V

Value per pulse (parameter) 99, 113

W

Warning at (parameter) 90
 Web server 38
 Function scope 29
 Web server (parameter) 123
 Web server authentication (submenu) 125
 WebDAV Client (submenu) 163
 WebDAV server (parameter) 125
 Workplace safety 7

Z

Zoom (parameter) 159
 Zoom end (parameter) 102, 139
 Zoom start (parameter) 101, 139

