


1	USB Driver Installation under Windows XP	2
2	USB Driver Installation under Windows 7	3
3	Product Support	4

1 USB Driver Installation under Windows XP


- As a first step, install the PVSUN MEMO Control Center software. The required USB driver is located in the installation directory under „USB Driver“.
- Connect the device with your PC. Windows issues a message saying that new hardware has been found.




The install wizard starts automatically.

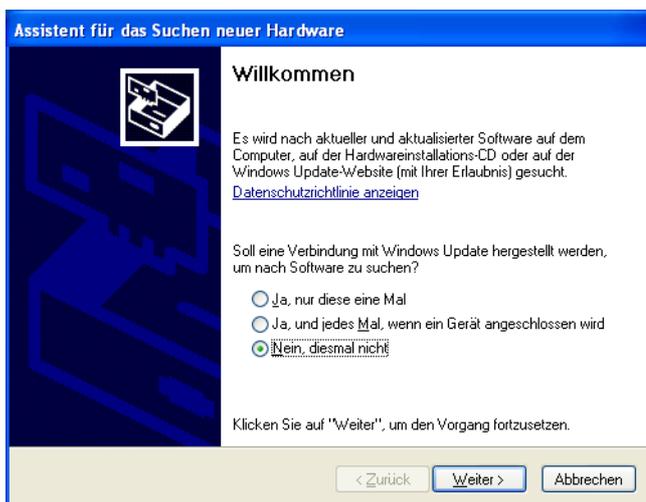


- Select option „No, not this time“ and click on „Proceed“.

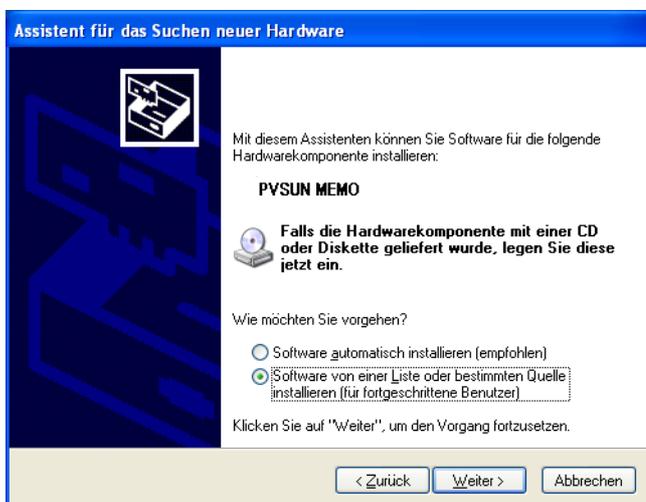


- Select option „Install software from a list or a specified source directory“ and click on „Proceed“.

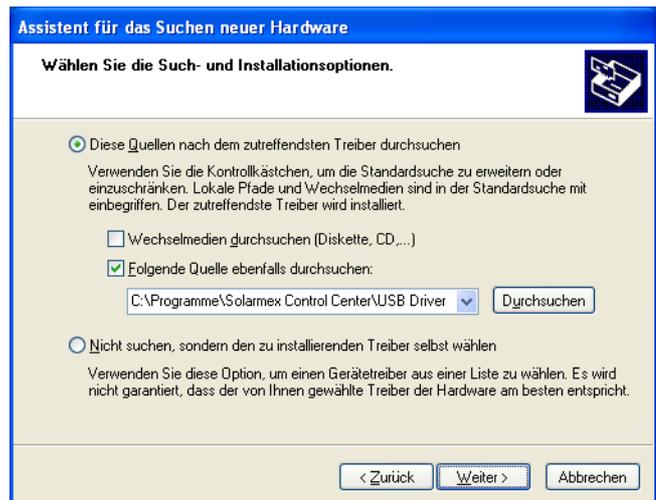

- Select option „Search these source directories for the most appropriate driver“ and „Search the following source directory as well“. Click on „Search“ and select the installation directory of the PVSUN MEMO Control Center software and then sub-directory „USB Driver“.
- Click on „Proceed“.

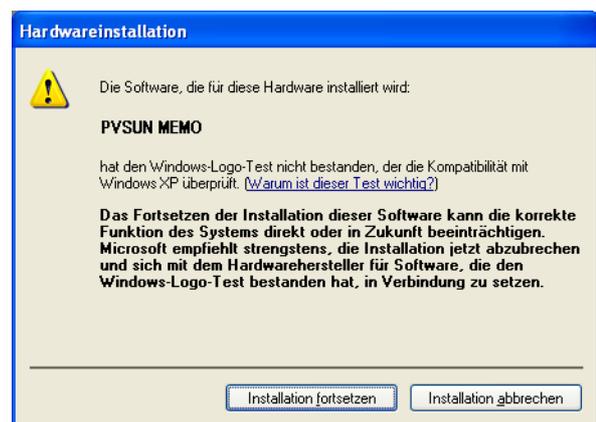


- Click on option „Continue installation“.

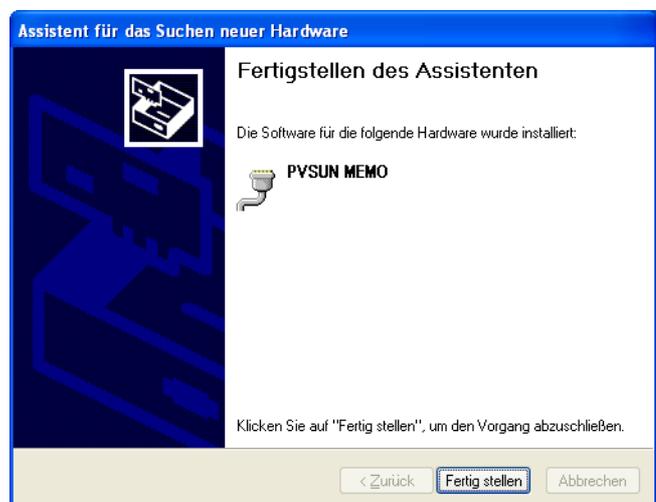

After a short period of time, the driver installation has been completed.

- Open the device manager (Start -> Settings -> System Control -> System -> Hardware -> Device Manager) in order to check whether Windows recognizes the device properly.

Under file directory „Connections“ **PVSUN MEMO (COMX)** must be listed (see figure below):

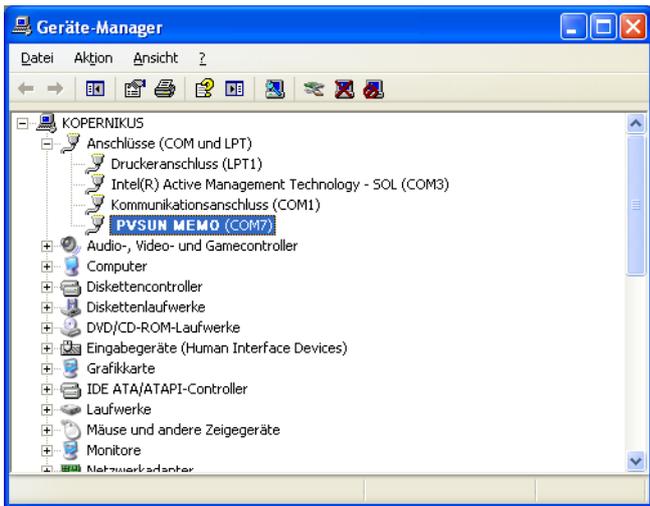

Installation is now completed!




Note

If you connect the device with another USB port at the same PC, it may occur that you are requested to execute the driver installation once more.


In this case, the message about newly connected hardware pops up again and the entire driver installation process must be repeated.

2 USB Driver Installation under Windows 7


- As a first step, install the PVSUN MEMO Control Center software. The required USB driver is located in the installation directory under „USB Driver“.
- Connect the device with your PC. Windows issues a message saying that new hardware has been found and that the device driver software could not be installed however.

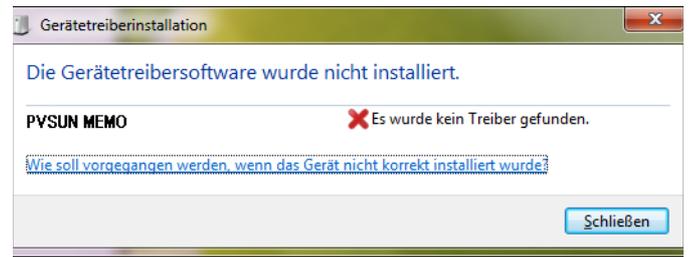

- Start the device manager (Start -> System Control -> Devices and Sound -> Device Manager).

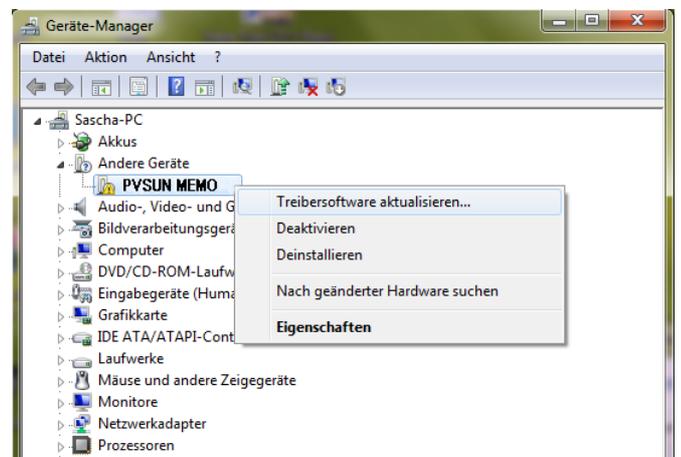


- Click on „Other devices“ and then click with the right mouse button on „PVSUN MEMO“ to select option „Update driver software...“.

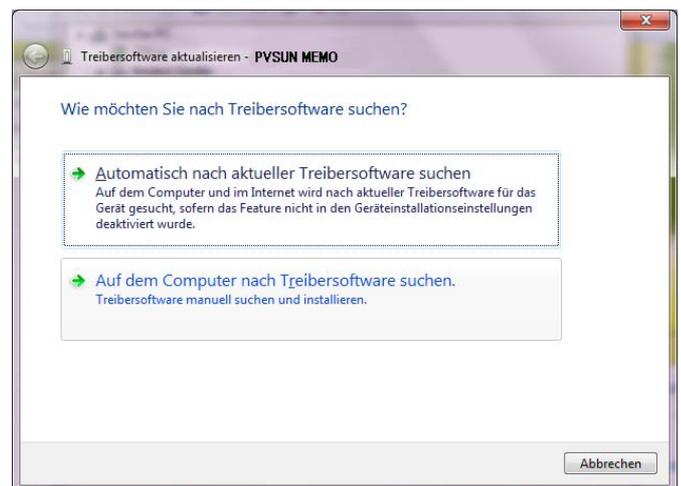


- Select option „search for driver software on your PC“.



- ⇒ Click on „Search“ and select the installation directory of the PVSUN MEMO Control Center software and then subdirectory „USB Driver“.
- ⇒ Click on „Proceed“.

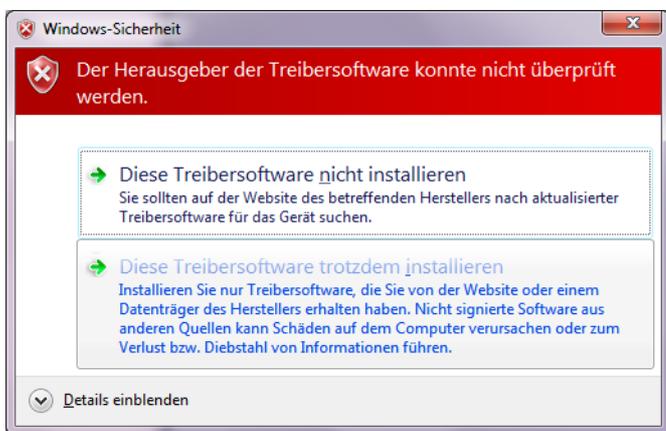


- ⇒ Click on option „Install this driver software nevertheless“.

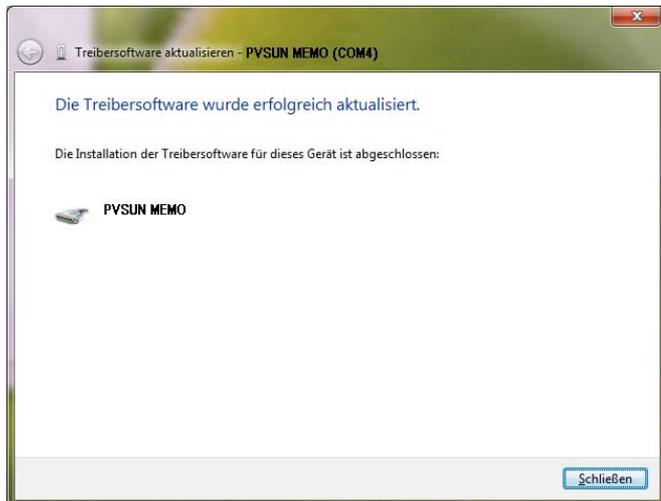

After a short period of time, the driver installation has been completed.

- ⇒ Open the device manager (Start -> System Control -> System and Sound -> Device Manager) in order to check whether Windows now recognizes the device properly.

Under file directory „Connections“ **PVSUN MEMO (COMX)** must be listed (see figure below):

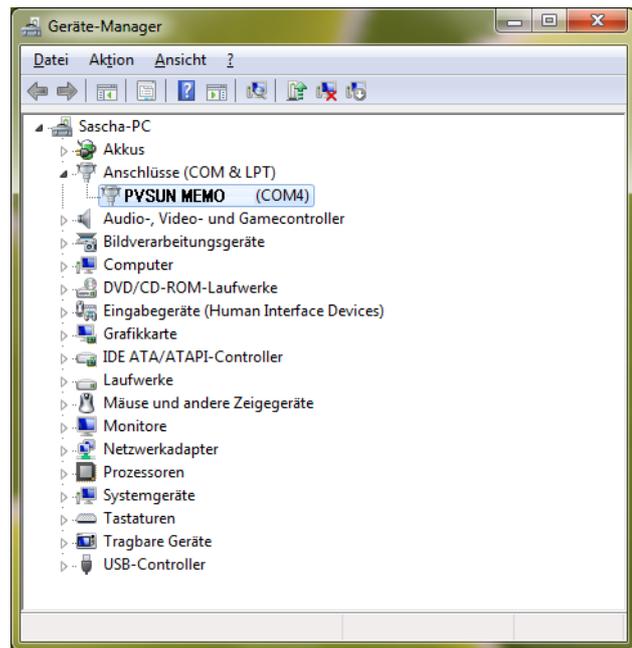

Installation is now completed!



Note

If you connect the device with another USB port at the same PC, it may occur that you are requested to execute the driver installation once more. In this case, the message about newly connected hardware pops up again and the entire driver installation process must be repeated.

3 Product Support

If you need service, please contact:

GMC-I Messtechnik GmbH
Product Support Hotline
 Phone+49 911 8602-0
 Fax +49 911 8602-709
 E-Mail support@gossenmetrawatt.com